
SERVICE MANUAL

MODEL	DEST.	CHASSIS NO.	MODEL	DEST.	CHASSIS NO.
PVM-20M2U	US Canadian US	SCC-G61H-A	PVM-20M4E	AEP	SCC-G62E-A
PVM-20M4U	Canadian	SCC-G61F-A	PVM-20M4A	Australian	SCC-N17C-A
PVM-20M2E	AEP	SCC-G62GA			



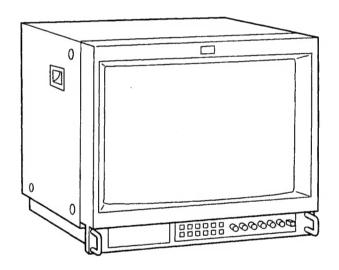

TrinitronPVM-20M2U/20M2E

TRINITRON® COLOR VIDEO MONITOR

SONY.

SPECIFICATIONS

Video signal

For PVM-14M4U/14M4E/20M4U/20M4E:

Color system

NTSC, PAL, SECAM, NTSC4.43

Resolution

800 TV lines

Aperture correction 0 dB to +6 dB

Frequency response

LINE

10 MHz ± 3 dB (Y signal)

RGB

 $10 \text{ MHz} \pm 3 \text{ dB}$

Synchronization

AFC time constant 1.0 msec.

For PVM-14M2U/14M2E/20M2U/20M2E:

Color system

NTSC, PAL, SECAM, NTSC4.43

Resolution

600 TV lines

Aperture correction 0 dB to +6 dB

Frequency response

LINE

10 MHz ± 3 dB (Y signal)

RGB

 $10 \text{ MHz} \pm 3 \text{ dB}$

Synchronization

AFC time constant 1.0 msec.

Picture performance

For PVM-14M4U/14M4E/14M2U/14M2E:

Normal scan

7 % over scan of CRT effective screen

Under scan

5 % underscan of CRT effective screen

area

H. linearity

Less than 4.0 % (typical)

V. linearity

Convergence

Less than 4.0 % (typical)

Central area:

0.4 mm (typical)

Peripheral area: 0.5 mm (typical)

Raster size stability H: 1.0%, V: 1.5%

High voltage regulation

3.5 %

Color temperature

D65/D93, selectable

USER (3,200K-10,000K, factory

setting is D65)

For PVM-20M4U/20M4E:

Normal scan

7 % over scan of CRT effective screen

area

Under scan

5 % underscan of CRT effective screen

area

H. linearity

Less than 5.0 % (typical)

Less than 5.0 % (typical)

V. linearity Convergence

Central area:

0.5 mm (typical)

Peripheral area: 0.7 mm (typical) Raster size stability H: 1.0%, V: 1.5%

High voltage regulation

4.0 %

Color temperature

D65/D93, selectable

USER (3,200K-10,000K, factory

setting is D65)

For PVM-20M2U/20M2E

Normal scan

7 % over scan of CRT effective screen

area

Under scan

5 % underscan of CRT effective screen

H. linearity

Less than 5.0 % (typical)

V. linearity

Less than 5.0 % (typical)

Convergence

Central area:

0.6 mm (typical)

Peripheral area: 1.0 mm (typical)

Raster size stability H: 1.0%, V: 1.5%

High voltage regulation

4.0 %

Color temperature

D65/D93, selectable

USER (3,200K-10,000K, factory

setting is D65)

Inputs

For PVM-14M4U/14M4E/20M4U/20M4E:

LINE A/B

VIDEO IN

BNC connector (×2), 1Vp-p ±6 dB,

sync negative

Automatic 75 ohms termination

Phono jack (×2), -5 dBua), more than AUDIO IN

47 kilo-ohms

LINE C

Y/C IN

4-pin mini-DIN (×1)

See the pin assignment on page 19.

AUDIO IN

Phono jack (×1), -5 dBua), more than

47 kilo-ohms

RGB/COMPONENT

R/R-Y,G/Y,B/B-Y IN: BNC connector (×3)

R, G, B channels: 0.7 Vp-p, ±6 dB

Sync on green: 0.3 Vp-p, negative

R-Y, B-Y channels: 0.7 Vp-p, ±6 dB

Y channel: 0.7 Vp-p, ±6 dB

(Standard color bar signal of 75%

chrominance)

Automatic 75 ohms termination

AUDIO IN

Phono jack ($\times 1$), -5 dBu^{a} , more than

47 kilo-ohms

EXT SYNC IN

BNC connector (x1)

REMOTE

4 Vp-p, ±6 dB, sync negative 20-pin connector (×1)

See the pin assignment on page 19.

a) 0 dBu = 0.775 Vr.m.s.

For PVM-14M2U/14M2E/20M2U/20M2E: LINE A/B BNC connector (x2), 1 Vp-p VIDEO IN ± 6dB, sync negative

Automatic 75 ohms termination

Phono jack (×2), -5 dBua), more than **AUDIO IN**

47 kilo-ohms

LINE C

Y/C IN 4-pin mini-DIN (×1)

See the pin assignment on page 19.

Phono jack ($\times 1$), -5 dBu^{a} , more than **AUDIO IN**

47 kilo-ohms

RGB/COMPONENT

R/R-Y,G/Y,B/B-Y IN: BNC connector (×3)

R, G, B channels: 0.7 Vp-p ± 6dB

Sync on green: 0.3 Vp-p negative

R-Y, B-Y channel: 0.7 Vp-p ± 6dB

Y channel: 0.7 Vp-p ± 6dB

(Standard color bar signal of 75%

chrominance)

Automatic 75 ohms termination

Phono jack (×1), -5 dBua), more than **AUDIO IN**

47 kilo-ohms

EXT SYNC IN BNC connector $(\times 1)$

4 Vp-p, ±6 dB, sync negative

20-pin connector (×1) REMOTE

See the pin assignment on page 19.

a) 0 dBu = 0.775 Vr.m.s.

Outputs (common to all models)

LINE A/B

BNC connector (×2) loop-through, VIDEO OUT

Automatic 75 ohms termination

AUDIO OUT Phono jack (×2) loop-through

LINE C

Y/C OUT 4-pin mini-DIN (×1) loop-through,

Automatic 75 ohms termination

AUDIO OUT Phono jack (×1) loop-through

RGB/COMPONENT

R/R-Y,G/Y,B/B-Y OUT: BNC connector (×3)

loop-through

Automatic 75 ohms termination Phono jack (×1) loop-through

AUDIO OUT BNC connector $(\times 1)$ EXT SYNC OUT

Automatic 75 ohms termination

Speaker output Output level: 0.8 W General

For PVM-14M4U:

SMPTE-C phosphor CRT

Power consumption 90 Wh (with SDI: 99 Wh)

Power requirements 120 V AC, 50/60Hz

Operating temperature

0 to $+35^{\circ}$ C (32 to 95° F)

Storage temperature -10 to +40°C (14 to 104°F)

Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. $346 \times 340 \times 431$ mm

 $(13\frac{5}{8} \times 13\frac{1}{2} \times 17 \text{ inches})$

not incl. projecting parts and controls

Approx. 16.7kg (36 lb 13 oz) Mass

Accessory supplied AC power cord (1)

AC plug holder (1) Tally label (1)

Cable with a 20-pin connector (1)

For PVM-14M4E:

CRT EBU phosphor

Power consumption 90 Wh (with SDI: 99 Wh) Power requirements 100 to 240 V AC, 50/60Hz

Operating temperature

0 to $+35^{\circ}$ C (32 to 95° F)

Storage temperature -10 to +40°C (14 to 104°F)

Operating humidity 35 to 85% (no condensation)

0 to 90% Storage humidity

Dimensions (w/h/d) Approx. $346 \times 340 \times 431$ mm

 $(13\frac{5}{8} \times 13\frac{1}{2} \times 17 \text{ inches})$

not incl. projecting parts and controls

Approx. 16.7kg (36 lb 13 oz) Mass

AC power cord (1) Accessory supplied

> AC plug holder (1) Tally label (1)

Cable with a 20-pin connector (1)

For PVM-14M2U:

CRT P-22 phosphor

Power consumption 90 Wh (with SDI: 99 Wh)

Power requirements 120 V AC, 50/60Hz

Operating temperature

0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F) Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. $346 \times 340 \times 431$ mm

 $(13\frac{5}{8} \times 13\frac{1}{2} \times 17 \text{ inches})$

not incl. projecting parts and controls

Mass Approx. 16.7kg (36 lb 13 oz)

Accessory supplied AC power cord (1)

AC plug holder (1) Tally label (1)

Cable with a 20-pin connector (1)

For PVM-14M2E:

CRT P-22 phosphor

Power consumption 90 Wh (with SDI: 99 Wh) Power requirements 100 to 240 V AC, 50/60Hz

Operating temperature

0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F) Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. $346 \times 340 \times 431$ mm

 $(13\frac{5}{8} \times 13\frac{1}{2} \times 17 \text{ inches})$

not incl. projecting parts and controls

Mass Approx. 16.7kg (36 lb 13 oz)

Accessory supplied AC power cord (1)

AC plug holder (1) Tally label (1)

Cable with a 20-pin connector (1)

For PVM-20M4U:

CRT SMPTE-C phosphor

Power consumption 125 Wh (with SDI: 135 Wh)

Power requirements 120 V AC, 50/60Hz

Operating temperature

0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F) Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. $450 \times 458 \times 503$ mm

 $(17^{3}/4 \times 18^{1}/8 \times 19^{7}/8 \text{ inches})$

not incl. projecting parts and controls

Mass Approx. 30.0 kg (66 lb 2 oz)

Accessory supplied AC power cord (1)

AC plug holder (1) Tally label (1)

Cable with a 20-pin connector (1)

For PVM-20M4E:

CRT EBU phosphor

Power consumption 130 Wh (with SDI: 140 Wh) Power requirements 100 to 240 V AC, 50/60Hz

Operating temperature

0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F) Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. $450 \times 458 \times 503$ mm

 $(17^{3}/4 \times 18^{1}/8 \times 19^{7}/8 \text{ inches})$

not incl. projecting parts and controls

Mass Approx. 30.0 kg (66 lb 2 oz)

Accessory supplied AC power cord (1)

AC plug holder (1) Tally label (1)

Cable with a 20-pin connector (1)

For PVM-20M2U:

CRT P-22 phosphor

Power consumption 115 Wh (with SDI: 125 Wh)

Power requirements 120 V AC, 50/60Hz

Operating temperature

0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F) Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. $450 \times 458 \times 503$ mm

 $(17^{3}/4 \times 18^{1}/8 \times 19^{7}/8 \text{ inches})$

not incl. projecting parts and controls

Mass Approx. 30.0 kg (66 lb 2 oz)

Accessory supplied AC power cord (1)

AC plug holder (1) Tally label (1)

Cable with a 20-pin connector (1)

For PVM-20M2E:

CRT P-22 phosphor

Power consumption 120 Wh (with SDI: 130 Wh) Power requirements 100 to 240 V AC, 50/60Hz

Operating temperature

0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F)

Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. $450 \times 458 \times 503$ mm

 $(17^{3}/4 \times 18^{1}/8 \times 19^{7}/8 \text{ inches})$

not incl. projecting parts and controls

Mass Approx. 30.0 kg (66 lb 2 oz)

Accessory supplied AC power cord (1)

AC plug holder (1) Tally label (1)


Cable with a 20-pin connector (1)

Design and specifications are subject to change

without notice.


Pin assignment

Y/C IN connector (4-pin mini-DIN)

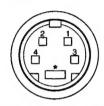

Pin No.	Signal	Description
1	Y-input	1 Vp-p, sync negative, 75 ohms
2	CHROMA subcarrier-input	300m Vp-p, burst Delay time between Y and C: within 0 ± 100 nsec., 75 ohms
3	GND for Y-input	GND
4	GND for CHROMA-input	GND

REMOTE connector (20-pin)

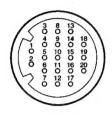

Pin No.	Signal	Wire color	
1	Blue only	Brown	
2	H/V DELAY	Red	
3	MAIN/SUB*	Orange	
4	EXT SYNC	Yellow	
5	DEGAUSS	Green	
6	R ch ON/OFF*	Blue	
7	TALLY	Purple	
8	LINE B	Grey	
9	GND	White	
10	GND	Black	
11	GND	Pink	
12	GND	Light Blue	
13	LINE A	Spiral Orange	
14	LINE/RGB	Spiral Yellow	
15	GND	Spiral Green	
16	L ch ON/OFF*	Spiral Blue	
17	REMOTE	Spiral Purple	
18	LINE C	Spiral Grey	
19	UNDER SCAN	Spiral Pink	
20	16:9	Spiral Light Blue	

(* For digital audio control)

How to connect a remote control unit Connect No.17 pin to one of the GND pins (No.9 – 12, and 15), then connect pins for the functions you want to use to other GND pins (No.9 – 12, and 15).

How to light the tally lamp Connect No.7 pin to one of the GND pins (No.9 - 12, and 15).

SAFETY CHECK-OUT

(US Model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

- Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
- Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
- Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
- Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
- Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
- Check the line cords for cracks and abrasion.
 Recommend the replacement of any such line cord to the customer.
- Check the B+ and HV to see if they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
- Check the metal trim, metallized knobs, screws, and all other exposed metal parts for AC leakage.

Check leakage as described below.


LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microampers). Leakage current can be measured by any one of three methods.

- A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufactures' instructions to use these instruments.
- A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
- 3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

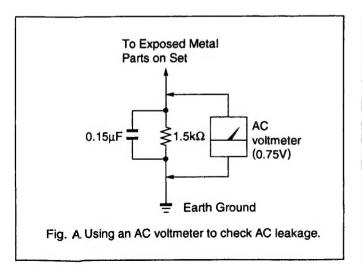

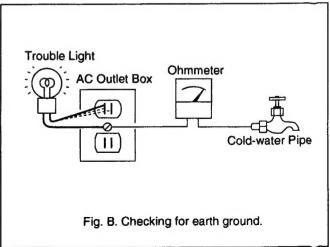


TABLE OF CONTENTS

Sec	ction	<u>Title</u>	Page	Se	ction	<u>Title</u> <u>I</u>	Page
1.	GEN	ERAL		5.	CIR	CUIT ADJUSTMENTS	
	Featu	res	8		5-1.	A Board Adjustments	. 2
	Locat	ion and Function of Parts and Controls	9			•	
	Using	On-screen Menus	11	6.	DIA	GRAMS	
	Conne	ections	13		6-1.	Block Diagrams (1)	3
						Block Diagrams (2)	
2.	DISA	ASSEMBLY			6-2.	Frame Schematic Diagram	
	2-1.	Top Cover and Rear Cover Removal	14		6-3.	Circuit Boards Location	
	2-2.	Terminal Board Removal			6-4.	Printed Wiring Boards and Schematic Diagrams	
	2-3.	J and H Boards Removal				• A Board (1/3)	
	2-4.	Picture Tube Removal	14			• A Board (2/3)	
	2-5.	Service Position	15			• A Board (3/3)	
						• Q Board	
3.	SET-	-UP ADJUSTMENTS				• G Board	
	3-1.	Preparations (1)	16			• J Board	7
	3-2.	Preparations (2) Initialization				• X Board	7
	3-3.	Writing Model Data				• H Board	7
	3-4.	Picture Output				• S Board	7
	3-5.	Landing Adjustment				• C Board	8:
	3-6.	Convergence Adjustment (1)			6-5.	Semiconductors	8
	3-7.	Deflection Yoke Neck Rotation Adjustment					
	3-8.	Convergence Adjustment (2)	22	7.	EXP	LODED VIEWS	
	3-9.	G2 Adjustment	23		7-1.	Chassis	89
	3-10.	White Balance Adjustment			7-2.	Picture Tube	90
	3-11.	Blue-Only White Balance Adjustment	24				
	3-12.	Sub Brt Adjustment	24	8.	ELE	CTRICAL PARTS LIST	91
	3-13.	Focus Adjustment	24				
4.	SAFI	ETY RELATED ADJUSTMENT	. 25				

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.

THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK A ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

(ATTENTION)

APRES AVOIR DECONNÈCTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE,

ATTENTION!!

AFIN D'EVITER TOUT RESQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÁSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÈS PAR UNE TRAME ET PAR UNE MARQUE À SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

SECTION 1 GENERAL

the Operating Instruction Manual. The page numbers of the The operating instructions mentioned here are partial abstracts from Operating Instruction Manual remain as in the manual.

Features

Picture

Horizontal resolution is more than 800 TV lines at the HR Trinitron tube provides a high resolution picture. HR (High Resolution) Trinitron " picture tube for PVM-14M4U/14M4E/20M4U/20M4E center of the picture.

Horizontal resolution is more than 600 TV lines at the Trinitron tube provides a high resolution picture. for PVM-14M2U/14M2E/20M2U/20M2E Trinitron¹⁾ picture tube center of the picture.

activates to make more accurate Y/C separation. This When NTSC video signals are received, a comb filter contributes to less of a decrease in resolution, cross color and cross luminance phenomena. Comb filter

The built-in beam current feedback circuit assures Beam current feedback circuit

The monitor can display NTSC, PAL, SECAM and NTSC4432) signals. The appropriate color system is Four color system available selected automatically. stable white balance.

display is obtained with all three cathodes driven with a blue signal. This facilitates color saturation and phase adjustments and observation of VCR noise. In the blue only mode, an apparent monochrome Blue only mode

Input

Analog RGB or component (Y, R-Y and B-Y) signals Analog RGB/component input connectors from video equipment can be input through these connectors.

The signal normally scanned outside of the screen can

Underscan mode Functions

be monitored in the underscan mode.

and the luminance signal (Y), can be input through this two signals, which tends to occur in a composite video The video signal, split into the chrominance signal (C) connector, eliminating the interference between the signal, ensuring video quality. Y/C input connectors

When the EXT SYNC selector is in the on position, the monitor can be operated on the sync signal supplied from an external sync generator. External sync input

when no cable is connected to the loop-through output The input connector is terminated at 75 ohms inside connector, the 75-ohm termination is automatically connector. When a cable is connected to an output (connector with -\\rho- mark only) Automatic termination released.

You can set color temperature, CHROMA SET UP,

On-screen menus

automatically when the power is turned on, or manually by pressing the DEGAUSS button. Degaussing of the screen can be performed

and other settings by using the on-screen menus.

You can select the menu language from among five Five menu languages languages on the menu.

By using an MB-502B mounting bracket (for a 14-inch monitor, not supplied) or SLR-103A slide rail (for a 20-inch monitor, not supplied), the monitor can be EIA standard 19-inch rack mounting mounted in an EIA standard 19-inch rack.

RGB scanning lines may appear on the top edge of the

screen. These are caused by an internal test signal,

rather than the input signal.

checked simultaneously in the H/V delay mode. The horizontal and vertical sync signals can be

Auto/manual degaussing

Horizontal/vertical delay mode

When the monitor is in the underscan mode, the dark

For details on mounting, refer to the instruction manuals supplied with the mounting bracket kit or slide rail kit. SDI (Serial Digital Interface) Kit

When the serial number of the BKM-101C you want to By using the following optional SDI Kits, the monitor can display SMPTE 259M 4:2:2 serial digital signal - BKM-101C: Component SDI Kit (for video) - BKM-102: Component SDI Kit (for audio) from a digital VCR. (ex. Sony 4:2:2 VCR)


connect is less than 2,010,000, an optional connecting Interface Kit, the monitor can be controlled from namess (part no. 1-900-230-35) will be required. By using the optional BKM-103 Serial Remote Serial Remote Interface Kit

personal computers via the RS-422A serial interface.

^{1) &}quot;Trinitron" is a registered trademark of Sony Corporation.

The NTSC.4.0 system refers to an NTSC color system in which the subcarrier frequency is modified to 4.43MHz. When
all NTSC (EURIGG) PROFINE IS Played back with a Trident (PAL/SECAMNTSC.4.3) VTR, the NTSC.4.3 signal is

Location and Function of Parts and Controls

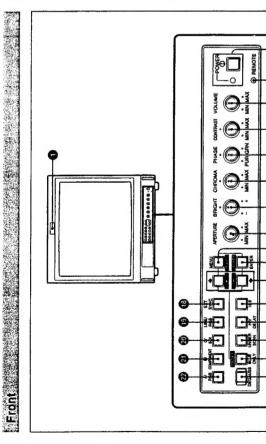

Lights up when the video camera connected to this monitor is selected, indicating that the picture is being

For details on how to light the tally lamp, see page 19.

recorded

POWER switch and indicator

Depress to turn on the monitor. The indicator will light

© REMOTE indicator

menu (see page 13), or when you connect a supplied cable to the REMOTE connector. The controls on the Lights up when you select ON on the USER PRESET front panel do not work when this indicator lights up. For details on how to connect the cable, see page 19.

ium this control clockwise or counterclockwise to obtain the desired volume **O VOLUME** control

furn this control clockwise to make the contrast higher **B** CONTRAST control

8

e

8

8

0

0

9

or counterclockwise to make it lower.

NTSCAM color systems. Turn it clockwise to make the skin tones greenish or counterclockwise to make them This control is effective only for the NTSC and D PHASE control

Turn this control clockwise to increase the color D CHROMA control

Turn this control clockwise to increase the brightness intensity or counterclockwise to decrease it. BRIGHT (brightness) control or counterclockwise to decrease it.

Turn this control clockwise to increase sharpness or counterclockwise to decrease sharpness. APERTURE control

EXT SYNC (external sync) selector

Set this selector to the off position (light off) to operate the monitor on the sync signal from the displayed video signal.

> The PHASE (6), CHROMA (4) and APERTURE (19) controls have no effect on the pictures of RGB

Principle of the Control of the Cont

· Set this selector to the on position (light on) to operate the monitor on an external sync signal through the EXT SYNC connector.

LINE/RGB input selector

When a menu is on the display, you can return to the

previous menu by pressing this button.

Press this button to display the main menu.

MENU (EXIT) button

ignals.

Press this selector to select the input to be monitored. monitor the signal through the LINE A, LINE B or · Set this selector to the off position (light off) to LINE C connectors.

monitor the signal through the RGB/COMPONENT Set this selector to the on position (light on) to connectors.

C/SDI selector

Press the buttons to move the cursor (*) or adjust

(+)/ (-) buttons selected item on the menu.

Press the button to confirm a selected item on the

D ENTER (SELECT) button

LINE position (light off), press this selector (light on) to monitor the signal through the LINE C · When the LINE/RGB input selector is set to the

RGB position (light on), press this selector (light on) to monitor the SDI signal (optional kits are required). When the LINE/RGB input selector is set to the connectors.

B/COMPONENT selector

Press this selector (light on) to observe the horizontal

H/V DELAY selector

The horizontal sync signal is displayed in the left

and vertical sync signals at the same time.

quarter of the screen; the vertical sync signal is

displayed near the center of the screen.

Press this selector (light on) to monitor the signals of

■ 16:9 selector

16:9 picture.

LINE position (light off), press this selector (light · When the LINE/RGB input selector is set to the on) to monitor the signal through the LINE B connectors

RGB position (light on), press this selector (light on) to monitor the component signal through the RGB/ When the LINE/RGB input selector is set to the COMPONENT connectors.

The display size is reduced by approximately 5% so

that four corners of the raster are visible.

BLUE ONLY selector

RESET button

Press this selector (light on) for underscanning.

© UNDER SCAN selector

A√HGB selector

LINE position (light off), press this selector (light When the LINE/RGB input selector is set to the on) to monitor the signal through the LINE A

RGB position (light on), press this selector (light on) When the LINE/RGB input selector is set to the to monitor the RGB signal through the RGB/ COMPONENT connectors.

"chroma" and "phase" adjustments and observation

of VCR noise.

monochrome picture on the screen. This facilitates

As the BLUE ONLY selector, press this selector

(light on) to eliminate the red and green signals.

Only blue signal is displayed as an apparent

"Phase" adjustment is effective only for the NTSC

settings by pressing this button when a menu is on

· As the RESET button, you can reset the menu

DEGAUSS button

Press this button momentarily. The screen will be demagnetized. Wait for 10 minutes or more before using this button again.

Location and Function of Parts and Controls



(The -\\\r mark indicates automatic termination.) 30 EXT SYNC 0 0 3.8 Y **Z** A Policy Avoid LINE B **Z**0 **@** 30 LINE A AUDIO Rear Panel 0 Ô

AC IN socket

Connect the supplied AC power cord to this socket and to a wall outlet.

Two groups (A and B) of line input connectors for the composite video and audio signals and their loop-DLINE A, LINE B connectors through output connectors.

set the LINE/RGB selector to the LINE position (light off) and press the A/RGB or B/COMPONENT selector To monitor the input signal through these connectors, (light on).

VIDEO IN (BNC)

Connect to the video output of video equipment, such For a loop-through connection, connect to the video as a VCR or a color video camera. output of another monitor.

VIDEO OUT (BNC)

Loop-through output of the VIDEO IN connector. Connect to the video input of a VCR or another When the cable is connected to this connector, the 75-ohm termination of the input is automatically released, and the signal input to the VIDEO IN connector is output from this connector.

AUDIO IN (phono jack)

For a loop-through connection, connect to the audio microphone via a suitable microphone amplifier. Connect to the audio output of a VCR or to a AUDIO OUT (phono jack) output of another monitor.

monitor.

Loop-through output of the AUDIO IN connector.

Connect to the audio input of a VCR or another

Connect to the Y/C separate output of a video camera. For a loop-through connection, connect to the Y/C VCR or other video equipment. Y/C IN (4-pin mini-DIN) **© LINE C connectors**

Connect to the Y/C separate input of a VCR or another Loop-through output of the Y/C IN connector. Y/C OUT (4-pin mini-DIN) monitor.

separate output of a VCR or another monitor.

When the cable is connected to this connector, the 75-ohm termination of the input is automatically released, and the signal input to the Y/C IN connector is output rom this connector,

Connect to the R-Y/Y/B-Y component signal inputs of To output the component signal Connect to the audio output of a VCR or a microphone (via a suitable microphone amplifier). AUDIO IN (phono jack)

Connect to the audio output of video equipment when a Betacam video recorder, etc. AUDIO IN (phono jack) Loop-through output of the AUDIO IN connector.

Loop-through outputs of the AUDIO IN connector AUDIO OUT (phono jack)

the analog RGB or component signal is input.

Connect to the audio input of a VCR or another

monitor.

AUDIO OUT (phono jack)

Press the EXT SYNC selector (light on) to use the sync signal through this connector. **© EXT SYNC** (external sync) connectors IN (BNC)

front panel will be turned on and off by the connected

equipment. This connector can also be used for

connecting a remote control unit.

For details on the pin assignment of this connector, see

page 19.

special-effect generator, etc. The tally lamp on the

Connect to the tally output of a control console,

PEMOTE connector (20-pin)

When this monitor operates on an external sync signal, connect the reference signal from a sync generator to this connector.

Loop-through output of the IN connector. Connect to the external sync input of video equipment to be OUT (BNC)

RGB signal or component signal input connectors and To monitor the input signal through these connectors,

their loop-through output connectors.

B RGB/COMPONENT connectors

on), and press the A/RGB or B/COMPONENT

selector (light on).

When the cable is connected to this connector, the 75-ohm termination of the input is automatically released, and the signal input to the IN connector is output from synchronized with this monitor. this connector. When the EXT SYNC selector is set to the off position set the LINE/RGB selector to the RGB position (light

To monitor the component signal camera, etc.

Connect to the analog RGB signal outputs of a video

To monitor the RGB signal

(light off), the monitor operates on the sync signal

from the G/Y channel.

R/R-Y IN, G/Y IN, B/B-Y IN (BNC)

Connect to the R-Y/Y/B-Y component signal outputs of a Sony Betacam video camera, etc. Loop-through outputs of the R/R-Y IN, G/Y IN, B/B-

R/R-Y OUT, G/Y OUT, B/B-Y OUT (BNC)

When the cables are connected to these connectors, the released, and the signal inputs to the R/R-Y IN, G/Y 75-ohm termination of the inputs is automatically IN, B/B-Y IN connectors are output from these Y IN connectors.


Connect to the analog RGB signal inputs of a video To output the RGB signal printer or another monitor.

Using On-Screen Menus

ou can make various settings and adjustments of the monitor using the on-screen menus.

On:Screen Menu Configuration


On-screen menu tree-chart

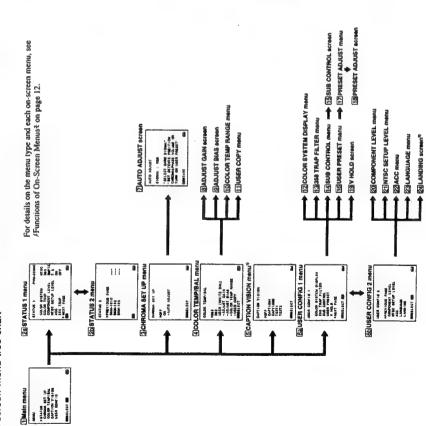

Operation through On-Screen Menus

Menu operation buttons


There are five menu operation buttons on the front panel of the monitor.

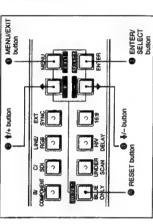

The following table shows how these five buttons function when using the menus.

MENU return to EXIT return to EXIT return to GENTER decide a SELECT select an move the	To adjust the liem selected return to the previous menu return to the previous menu	က
MENU EXIT ENTER SELECT	the previous menu	က
ENTER SELECT	the previous menu)
ENTER SELECT		
-	decide a selected item	
+	select an adjustment item	
	move the cursor (▶) upwards	4
increase	increase selected value	
+	move the cursor (IV) downwards	ı
decrease	decrease selected value	Q
C BESST reset curr	reset current settings to the factory	
setting		

adjustment screens are displayed at the bottom of the screen. You can perform menu operation using the displayed buttons. The buttons that can be used on the menus and

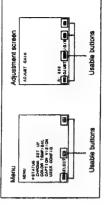

Display of the usable menu operation buttons

Operating procedures

To display the menu, follow this procedure.

Tess the MENU/EXIT (1) button.

MENU (11 : main menu) appears.

Move the cursor (\blacktriangleright) to the desired setting menu by pressing the \blacklozenge /- or \P /+ (\P , Θ) button. C

Press the ENTER/SELECT (2) button.

The setting menu selected in step 2 appears.

Move the cursor (\triangleright) to the desired item by pressing the \checkmark /- or \uparrow /+ (\bigcirc , \bigcirc) button.

Press the ENTER/SELECT (2) button.


The adjustment screen or setting menu selected in step 4 appears. For detailed information of menus, see \(\textit{Functions of On-Screen Menust on page 12.} \)

¹⁾ ⑤ CAPTION VISION mean is provided with PVM-14M4U/14M2U/20M4U/20M2U only.
2) ❷ LANDING screen is provided with PVM-20M4U/20M4E only.

Using On-Screen Menus

the previous page.

To display the next (or previous) page of the Select NEXT PAGE on the menu to display the next page and PREVIOUS PAGE on the menu to display

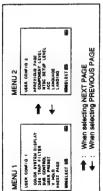

How to display the next or the previous page

Each time you press the MENU/EXIT () button, the To close the menu (to return to the regular displayed. Press the MENU/EXIT (1) button on-screen menu returns to the one previously repeatedly until the regular screen appears. screen)

For PVM-14M4E/14M2E/20M4E/20M2E: For the first time when the monitor is turned on, the LANGUAGE menu (23) will appear on the screen. So, select the language you want to use.



Move the cursor (▶) to the desired language by pressing the 4/- or 4/+ (0, 0) button.

Press the MENU/EXIT (1) button. N

Unless you press the MENU/EXIT (1) button in the procedure above, the LANGUAGE menu will always appear whenever you turn on the monitor.

Functions of On-Screen Menus

There are four types of on-screen menus.

You can enter another menu such as status menu or setting menu. Main menu

through [24]). To go to the USER CONFIG I menu

select PREVIOUS PAGE.

Status menu
You can confirm the current settings.

screen on this menu by using the 1/+, 1/- and You can select an item or enter an adjustment Setting menu

press ENTER/SELECT to start automatic "chroma"

To activate these adjustments, select ON on the CHROMA SET UP menu (3). and "phase" (NTSC signal only) adjustments.

BADJUST GAIN screen

9 ADJUST BIAS screen Adjust GAIN in USER mode.

Adjust BIAS in USER mode.

Select the color bar signal (full, SMPTE, EIA) and

7 AUTO ADJUST screen

adjustments you made remain unchanged until next You can make adjustments on this screen. The change even if you turn off the power. ENTER/SELECT buttons. Adjustment screen

([] indicates the factory setting.)

[] Main menu Select another menu and press ENTER/SELECT to go

to the menu.

2a STATUS 1 menu Shows the current settings.

25 STATUS 2 menu Shows what optional kit is installed in the monitor.

"phase" (NTSC signal only) adjustments done on the AUTO ADJUST screen ([7]). 3CHROMA SET UP menu Select ON on this menu to activate "chroma" and

and USER. USER is set to D65 as the factory setting. Select the color temperature from among D65, D93 You can adjust or change the color temperature in USER mode (a measuring instrument is required). 4 COLOR TEMP/BAL menu

[5]CAPTION VISION menu This menu is provided only for PVM-14M4U/14M2U/ 20M4U/20M2U.

Finely adjust the selected item on the SUB CONTROL menu (14). Each control (CONTRAST, BRIGHT, CHROMA and PHASE control) has a click position at the center of its adjustment range. You can adjust the setting of the click position with this feature. SSUB CONTROL screen Select an item to adjust on the menus and screens ([12] 6b USER CONFIG 2 menu Select an item to adjust on the menus and screens (20

through [19]. To go to the USER CONFIG 2 menu,

select NEXT PAGE.

if you select ON on this menu, the REMOTE indicator lights up and the controls on the front panel do not work. The monitor operates with the user preset 16 USER PRESET menu settings.

CONTRAST, VOLUME, and APERTURE controls to a desired level and can use these settings by selecting ON on the USER PRESET menu ([16]). To adjust the user preset settings, select the PRESET ADJUST menu (17). (ou can preset the BRIGHT, CHROMA, PHASE, 17 PRESET ADJUST menu

PHASE, CONTRAST, VOLUME, and APERTURE control) on the PRESET ADJUST menu ([17]). Adjust the selected item (BRIGHT, CHROMA, 18 PRESET ADJUST screen

When you cannot read the display, select the input that Adjust the vertical hold if the picture rolls vertically. 19 V HOLD screen is not connected.

Store the factory setting of D65 or D93 as the value for

USER mode.

11]USER COPY menu

12 COLOR SYSTEM DISPLAY menu

each time you change the signal input.

[5000K-10000K]

Select the color temperature range in USER mode.

10 COLOR TEMP RANGE menu

Select the component level from among three modes. For PVM-14M4U/14M2U/20M4U/20M2U for 100/7.5/75/7.5 signal N10/SMPTE for 100/0/100/0 signal for 100/0/75/0 signal 20 COMPONENT LEVEL menu BETA 7.5 BETA 0 the color system type being used appears on the screen Select the color system type. When AUTO is selected,

[N10/SMPTE] [BETA 7.5] Sor PVM-14M4E/14M2E/20M4E/20M2E

[OFF]

Color spill or color noise may be eliminated if you select ON (NTSC signal only).

Normally select OFF.

13358 TRAP FILTER menu

[OFF] Vision. To display it, select the caption type in this The monitor can display the signal with Caption

Select an item (CONTRAST, BRIGHT, CHROMA and PHASE controls on the front panel) to finely adjust on the SUB CONTROL screen ([15]) 14SUB CONTROL menu [D65]

Ç

Using On-Screen Menus-

Select the NTSC setup level from two modes. 21NTSC SETUP LEVEL menu

[7.5] [0] The 7.5 setup level is mainly used in north America. For PVM-14M4U/14M2U/20M4U/20M2U The 0 setup level is mainly used in Europe. For PVM-14M4E/14M2E/20M4E/20M2E

22ACC menu

<u>N</u> Set ACC (Auto Color Control) circuit on or off. When the fine adjustment is necessary, select OFF on the Normally select ON. ACC menu.

23LANGUAGE menu You can select the menu language from among five languages (English, German, French, Italian, Spanish). [ENGLISH]

24LANDING screen

If the color is not uniform even after you press the DEGAUSS button, you can adjust the landing so as to This menu is provided only for PVM-20M4U/20M4E. The following two methods are available to adjust the obtain color uniformity on this screen.

When the signals of the horizontal lines are input and displayed:

landing.

When the signals of the white color are input and displayed on the screen as horizontally as possible. Press the \$\int \- or \$\frac{1}{4} + button until the lines are

Press the \$\int-\ or \$\epsilon \tau \text{button until the white color on} the screen become at uniform as possible.

To reset the setting to standard (00), press the RESET button.

Connections

How to Connect the AC Power Cord

Connect the AC power cord (supplied) to the AC IN socket and to a wall outlet.




Pull out the AC plug holder while pressing the lock


levers.

To remove the AC power cord


How to Connect a Cable to a BNC Connector

BNC connectors on the rear panel as illustrated below. Connect a coaxial cable with the BNC plugs to the

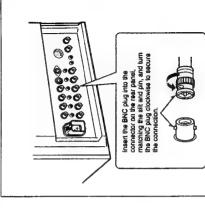


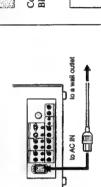

To connect an AC power cord securely with an AC plug holder

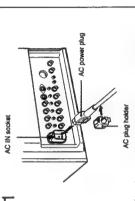

Plug the power cord into the AC IN socket. Then, attach the AC plug holder (supplied) on top of the AC power

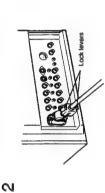


Slide the AC plug holder over the cord until it locks.


4

SECTION 2 DISASSEMBLY


2-1. TOP COVER AND REAR COVER REMOVAL

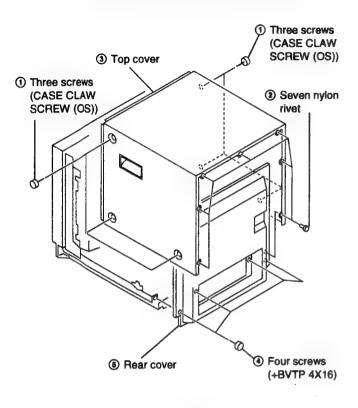

2-2. TERMINAL BOARD REMOVAL

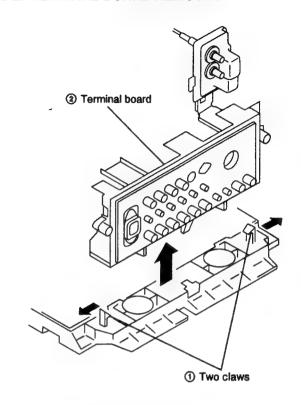


2-3. J AND H BOARDS REMOVAL

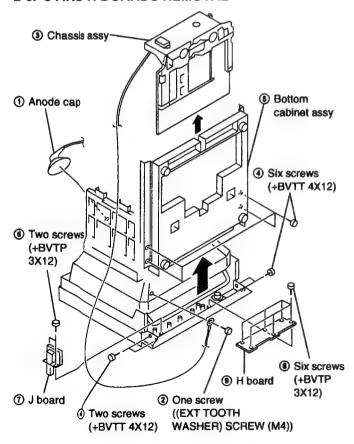


2-4. PICTURE TUBE REMOVAL

When exchange the Picture tube of PVM-20M4 series and if the magnet had stuck on the neck of the Picture tube, peel it.

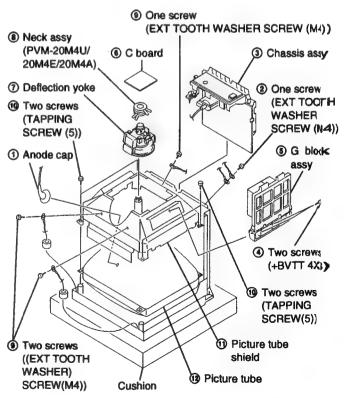


2-5. SERVICE POSITION

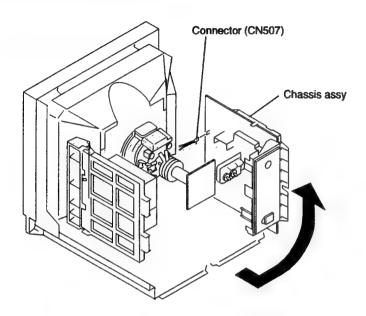


• REMOVAL OF ANODE-CAP


NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.

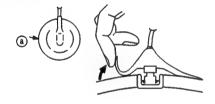

• REMOVING PROCEDURES

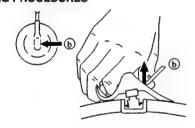


① Turn up one side of the rubber cap in the direction indicated by the arrow ①.

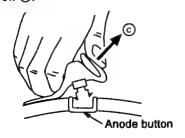

- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow **(a)**.
- When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ②.

• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anodecaps! A material fitting called as shatter-hock terminal is built in the rubber.
- 3 Don't turn the foot of rubber over hardly! The shatter-hook terminal will stick out or hurt the rubber.

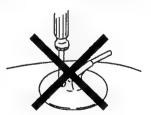



SECTION 3 SET-UP ADJUSTMENTS

3-1. PREPARATIONS (1)

Service Mode

This set is provided with a switch for service on the front panel that can be used to make various adjustments. The operation method of this switch is explained in detail below.

1. Entering the service mode

Simultaneously press the [ENTER] key and the [DEGAUSS] key shown on the display of the menu.

2. Service mode display

(1)	(5)	(4)	(3)	(6)
(2)				

Range of Service Mode Display

- The service items are largely classified into 16 types displayed by titles.
- (2) The names of the service items or READ/WRITE guidance, etc., are displayed. The names are displayed to the left and the guidance to the right.
- (3) This is the serial number for each of the service items. 1-120.
- (4) This is the adjustment data for the service items that are now stored in the RAM. Adjustments can be made by changing these values, but as long as nothing is written to the ROM the adjustment values will be erased by turning off the power or by reading, so please be careful.
- (5) When the adjustment data that is now displayed is identical with the data in the ROM, the cursor (►) is displayed.
- (6) The present status is displayed.
 - [*]: Writing to the ROM. Make sure not to turn off the power while this display is on.
 - [?]: ROM reading error. In this case, an image is output with the standard adjustment data that the microcomputer itself possesses. [¿]: Problem in the I2C bus.

3. Finishing the service mode

Simultaneously press the [ENTER] key and the [DEGAUSS] key shown on the display of the menu.

4. Easy ON/OFF of the service mode

If once entering the service mode after having turned on the power, easy ON/OFF is possible by once more pressing the A, B or C switch on the front panel (the LED lights) as long as the power is not turned off or as long as the service mode is not finished.

5. Change of position of the service mode display

If the switch is continuously pressed when turning on in the above easy mode, the display position moves in the V direction. This method is used when the display is outside of the effective screen area.

6. Change of service items

The items are returned with the [MENU] key and forwarded with the [ENTER] key. When a key is continuously pressed, the operation will be repeated.

7. Change of service data

The service data is made larger with the [†] key and smaller with the [‡] key. When continuously pressing the keys, the operation will be repeated.

8. Reading of service data

When reading data from the ROM to the RAM, press the [B / O] key once and check than the READ display is shown in the guidance, and then press the [B/O] key once again. The adjustment data that is written will return to its previous state, so please be careful.

9. Writing of service data

When writing data from the RAM to the ROM, press the [DE-GAUSS] key once and check that the WRITE display shown in the guidance, and then press the [DEGAUSS] key once again. Not only the displayed data will be written, but all data, so please be careful.

10. Carrying out FACTORY RESETTING

In case the adjustment data has been destroyed for some reason, and you keep pressing the [B/O] key at the beginning of the above reading, the READ guidance will change to FACTORY RESET guidance in approximately 3 seconds so that the factory resetting can be carried out. By once again pressing the [B/O] key after this, resetting will be carried out ([*] will be displayed as status) and factory resetting will be executed. However, in case the data available at the time of shipment from the factory has been destroyed, or if the ROM has been replaced, etc., or if factory setting mentioned later on has been carried out, factory resetting is executed.

11. Carrying out FACTORY SETTING

Make sure to make possible the above factory resetting by making a copy of the adjustment data when replacing the ROM. If you keep pressing the [DEGAUSS] key at the beginning of the above writing, the WRITE guidance will change into FACTORY RESET guidance after approximately 3 seconds. By once again pressing the [DEGAUSS] key after this, setting will be carned out ([*] will be displayed as status) and the data will be copied. By carrying out this operation, the selection items of the menu and the adjustment values will be reset to the standard conditions, so please be careful. If this operation is carried out once, it cannot be carried out again, but the FACTORY SET FLAG (No. 120) in the service mode can be set to 1.

Table 3-1 Table map (1)

** Signify (The setting is vary with the destination.)
Refer to the "Table 3-1 Table map (2)."

No.	SERVICE ITEM	<u> </u>	MAX	STD	No.	SERVICE ITEM	l	MAX	STD
1	NOR 50 DEF	H FREQUENCY	255	85	61	C/T1 D??	BIAS <red></red>	1023	376
2	HOIT SO DEI	VIDEO PHASE	255	139	62	G110	BIAS <green></green>	1023	512
3		V SIZE	255	139	63		BIAS <blue></blue>	1023	396
4	NOR 60 DEF	H FREQUENCY	255	96	64		GAIN <red></red>	1023	660
5	NOR 60 DEF	VIDEO PHASE	255	115	65		GAIN <green></green>	1023	620
6		V SIZE	255	137	66		GAIN <blue></blue>	1023	602
7	NORDEF	V CENTER	255	103	67		B/O <red></red>	255	115
8	HORBEI	HSIZE	255	108	68		B/O <green></green>	255	115
9		PIN PHASE	255	128	69	C/T2 D??	3200K SW	1	0
10		PIN AMP	255	128	70	0.120	BIAS <red></red>	1023	256
11		LOWER PIN AMP	255	128	71		BIAS <green></green>	1023	512
12		UPPER PIN AMP	255	128	72		BIAS <blue></blue>	1023	512
13		SEXY	255	128	73		GAIN <red></red>	1023	602
14		V LINEARITY	255	120	74		GAIN <green></green>	1023	700
15		VBOW	63	32	75		GAIN <blue></blue>	1023	672
16		LOWER BOW	63	32	76		B/O <red></red>	255	96
17		V ANGLE	63	32	77		B/O <green></green>	255	108
18	U/S DEF	V SIZE <50>	255	100	78	W/B	SUB CON <4 :3,NORMAL>	255	178
19	5,002,	V SIZE <60>	255	100	79		SUB CON <4:3.HN DELAY>	255	97
20		HSIZE	255	118	80		SUB CON <16 : 9,NORMAL>	255	150
21		PIN PHASE	255	128	81	· · · · · · · · · · · · · · · · · · ·	SUB CON <16 :9.H/V DELAY>	255	78
22		PIN AMP	255	100	82		SUB BRIGHT	255	69
23	16 : 9 NOR DEF	V SIZE <50>	255	72	83		USER B/O <red></red>	255	115
24	10.01101152	V SIZE <60>	255	60	84		USER B/O <green></green>	255	115
25		PIN PHASE	255	135	85	OTHER	LANDING	255	64
26		PIN AMP	255	90	86		V HOLD	255	128
27	16 : 9 U/S DEF	V SIZE <50>	255	61	87		H BLANKING	255	73
28		V SIZE <60>	255	39	88		V BLANKING <50>	255	82
29		PIN PHASE	255	135	89		16:9 BLANKING START <50>	255	32
30		PIN AMP	255	66	90		16:9 BLANKING END <50>	255	176
31	COMPONENT	SUB PHASE	255	130	91		V BLANKING <60>	255	161
32		SUB CHROMA <normal></normal>	255	182	92		16:9 BLANKING START <50>	255	42
33		SUB CHROMA <smpte></smpte>	255	170	93		16:9 BLANKING END <50>	255	226
34		R-Y LEVEL	255	163	94		H DELAY	255	142
35	NTSC	BURST GATE PULSE WIDTH	255	52	95		V DELAY	255	104
36		CRYSTAL	255	59	96		HP POSITION	255	145
37		PHASE <normal></normal>	255	80	97		HP WIDTH <normal></normal>	255	148
38		PHASE <acc off=""></acc>	255	96	98		HP WIDTH <h delay="" v=""></h>	255	62
39		B-Y PHASE	255	162	99	SYSTEM	SDI AUDIO	7	5
40		CHROMA <normal></normal>	255	98	100		358 TRAP FILTER	1	0
41		CHROMA <acc off=""></acc>	255	27	101		ACC	1	0
42		R-Y LEVEL	255	98	102		CAPTION VISION	7	0
43	NTSC 443	CRYSTAL	255	82	103		COMPONENT LEVEL	3	*
44		PHASE <normal></normal>	255	62	104		NTSC SETUP LEVEL	1	*
45		PHASE <acc off=""></acc>	255	64	105		CHROMA SET UP	1	0
46		B-Y PHASE	255	181	106		COLOR SYSTEM DISPLAY	3	0
47		CHROMA < NORMAL>	255	104	107		COLOR TEMPERATURE	3	0
48		CHROMA <acc off=""></acc>	255	36	108		USER PRESET	1	0
49		R-Y LEVEL	255	100	109		LANGUAGE	7	0
50	PAL	PHASE <normal></normal>	255	110	110		RGB SYNC	1	0
51		PHASE <acc off=""></acc>	255	105	111		OPTION BOARD	7	0
52		B-Y PHASE	255	122	112		AGING MODE	1	0
53		CHROMA < NORMAL>	255	109	113		PAL-M	1	0
54		CHROMA <acc off=""></acc>	255	41	114		MODEL	31	*
55		R-Y LEVEL	255	121	115		COLOR TEMP DISP 1	127	*
56	SECAM	CHROMA	255	93	116		COLOR TEMP DISP 2	127	*
57		R-Y LEVEL	255	181	117		REMOTE ADDRESS	63	0
58		COLOR BALANCE <r-y></r-y>	255	118	118		RESERVED 1	1	0
59		COLOR BALANCE <b-y></b-y>	225	135	119		RESERVED 2	2	0
_ œ									

Table 3-1 Table map (2)

Model Name	Component level	NTSC Set-up level	Model	Color temp disp 1	Color temp disp 2
PVM-20M4U	1	1	0	65	93
PVM-20M2U	1	1	1	65	93
PVM-20M4J	2	0	2	93	65
PVM-20M4E	2	0	3	65	93
PVM-20M2E	2	0	4	65	93
PVM-14M4U	1	1	5	65	93
PVM-14M2U	1	1	6	65	93
PVM-14M4J	2	0	7	93	65
PVM-14M1J	2	0	8	93	65
PVM-14M4E	2	0	9	65	93
PVM-14M2E	2	0	10	65	93
PVM-20M4A	2	0	11	65	93
PVM-14M4A	2	0	12	65	93
PVM-14M2A	2	0	13	65	93
PVM-14M4B	1	1	14	65	93
BVM-14M4DJ	2	0	15	93	65
BVM-14M4DE	2	0	16	65	93
PVM-20M4T	2	0	17	93	65
PVM-14M4T	1	0	18	93	65

3-2. Preparation (2). Initialization

 Supply composite video or component signals as shown in Table 3-2.

Table 3-2

Signal		Details of signal	Standard level P-W
Composite	358NT]	100% white	0.714V
video	443NT }	75% white	0.536V
	PALM	100% white	0.7V
	SECAM	75% white	0.525V
		100% white Y	0.7V
	BETAO	75% white Y	0.525V
		75%color B-Y, R-Y	0.7V
Component		(P-P for this item only)	
		100% white Y	0.7V
	SMPTE	75% white Y	0.525V
		75%color B-Y, R-Y	0.525V
		(P-P for this item only)	
Voice	/sound	-5dBs	0.436Vrms

^{*} Refer to Table 3-3 for groups of models.

Table 3-3

Group of models		Models	
1	PVM-14M4U PVM-14M4A	PVM-14M4J	PVM-14M4E
2	PVM-14M2U	PVM-14M2E	PVM-14M2A
3	PVM-14M1J		
4	PVM-20M4U PVM-20M4A	PVM-20M4J	PVM-20M4E
5	PVM-20M2U	PVM-20M2E	

^{*} In this chapter, ____ indicates the control items in the service mode.

Example: 60 H-FREQ

3-3. Writing model data

 Write model data on respective models in the service mode at the location of No.114 MODEL in accordance with Table 3-4.

Table 3-4

Model	Model data
PVM-20M4U	0
PVM-20M2U	1
PVM-20M4J	2
PVM-20M4E	3
PVM-20M2E	4
PVM-14M4U	5 .
PVM-14M2U	6
PVM-14M4J	7
PVM-14M1J	8
PVM-14M4E	9
PVM-14M2E	10
PVM-20M4A	11
PVM-14M4A	12
PVM-14M2A	13

2. Write the following data in the service mode at the location of No.115 COLOR TEMP DISP 1.

COLOR TEMP DISP 1

U/C, AEP

65 93

Write the following data in the service mode at the location of No.116 COLOR TEMP DISP 2.

COLOR TEMP DISP 2

U/C, AEP

65

* Standard inspection state

Unless otherwise specified in this manual, make adjustment under the following conditions:

APERTURE MIN (Turn FLAT fully counterclockwise.) **BRIGHT** 50% (Center click) 50% (Center click) **CHROMA** 50% (Center click) **PHASE** (Center click) **CONTRAST** 80% **VOLUME**

^{*} Before turning off the power after adjustment in the service mode, write the adjustment data. When the power is turned off before writing, adjusted data will all be lost.

3-4. Picture output

1. AC input voltage setting


- 1. Input VIDEO signals and AUDIO signals to respective terminals on the connector panel.
- 2. Set the sliduck AC voltage as shown in Table 3-5.

Table 3-5

Group o	Voltage	
PVM-14M4J(J) PVM-14M1J(J)	PVM-20M4J(J)	AC 100±3V (Distortion factor:3% max.)
PVM-14M4U(U/C) PVM-20M2U(U/C)	PVM-14M2U(U/C) PVM-20M4U(U/C)	AC 120±3V (Same as above)
PVM-14M4E(AEP) PVM-14M2A(AUS) PVM-20M4E(AEP) PVM-20M4A(AUS)	PVM-14M2E(AEP) PVM-14M4A(AUS) PVM-20M2E(AEP)	AC 220±3V (Same as above)

3-5. Landing adjustment

- 1. CONT ... MAX
 BRT ... Conspicuous position
- . Roughly adjust the white balance, G2, and convergence.
- Switch the rotary SW of the single color switch to change the color into green only.
- 4. Adjust the purity knob so that the green will come to the center of the screen. Make R and B almost identical. (Fig. 3-1)
- 5. Switch to B only, R only, and G only and verify each. (Figs.3-1, 3-2, and 3-3)
- Bring the deflection yoke gradually forward and adjust the deflection yoke so that R and B on both sides of the screen will be green. (Fig.3-2 → Fig. 3-3)
- If the deflection yoke comes forward too much, the pattern shown in Fig.3-4 will appear. If so, move the deflection yoke backward. (Fig.3-4 → Fig.3-3)
- 8. Switch the single color switch to B and verify the single color. (Fig.3-6)
- 9. Switch the single color switch to R and verify the single color. (Fig.3-9)
- 10. When two colors are mixed, set the mixed color as the standard, and repeat operations 6 and 7.
- 11. Switch to an all-white signal and check the uniformity.
- 12. When the deflection yoke position is determined, fasten it with the fixture.

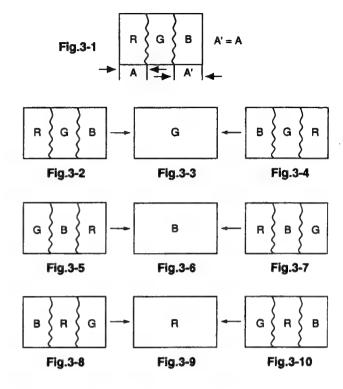

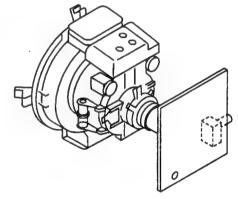


Fig.3-11

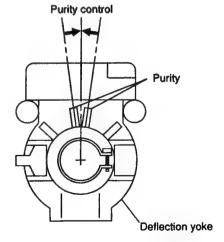


Fig.3-12

Note: Attach NTC magnets for 20M4 to the locations shown in Fig.3-13.

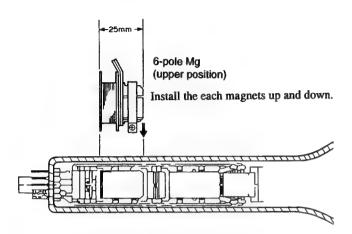


Fig. 3-13

3-6. Convergence adjustment (1)

1. Input a dot pattern signal.

CONT ... Conspicuous position

BRT ... MIN

- 2. Align the horizontal R, G, and B dots at the center of the screen with the H-START VR.
- * When H-CENT is changed after H-STAT adjustment, readjust H-STAT. (H-STAT will change by means of H-CENT VR.)
- 3. Align the vertical location of R, G, and B in the center of the screen with the V-STAT Mg. (Fig.3-14, 3-15)
- * After V-STAT adjustment, paint-lock the knob.

V-STAT Mg knob

While keeping the angles A and B equal (I = I'), align the vertical convergence.

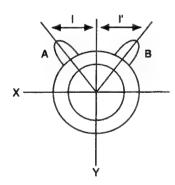


Fig. 3-14 Good example

If the A and B knobs are not symmetrical $(I \neq I')$, the focus may deteriorate, beam striking or other adverse effects may occur.

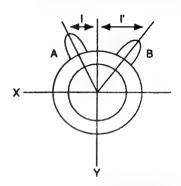


Fig. 3-15 Bad example

 For HMC, use the BMC Mg to adjust the R and B dots so that they will be symmetrical horizontally with respect to the G dot.

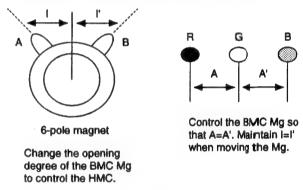


Fig. 3-16

5. For VMC, use the MBC Mg to adjust the R and B dots so that they will be symmetrical vertically with respect to the G dot.

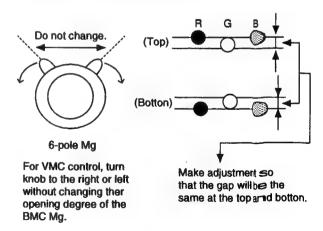


Fig. 3-17

6. Repeat adjustments 2. to 5.

- * The above adjustment may affect the landing, so after adjustment, check the landing again.
- 7. Paint-lock the knobs after adjustment.

3-7. Deflection yoke neck rotation adjustment

- If there is nonconvergence on both sides of the X or Y axis of the screen, turn the neck of the deflection yoke in the direction of the arrow to hold the nonconvergence for the entire CRT screen within the tolerance.
- * Applicable only to groups of models 1, 2, 3, and 5.
- (1) Reverse cross (2) Regular cross misconvergence misconvergence pattern pattern Move the deflection yoke Move the deflection yoke downward. upward. RGB BGR GB Ğ G G В RGB BGR Fig. 3-18 Fig. 3-19 (3) Pattern of left-sided (4) Pattern of right-sided deflection yoke deflection yoke Move the deflection Move the defication yoke to the left when yoke to the right when viewed from the CRT viewed from the CRT screen. screen. Fig. 3-20 Fig. 3-21 2 zone 1 zone

Flg. 3-23

- 2. Turn the neck of the deflection yoke to align the \boldsymbol{V} pin vertically.
- * Applicable only to group of models 4.

3. Insert the wedge between the deflection yoke and CRT funnel to lock the deflection yoke. (Fig.3-24)



Groups of models 1,2,3,and 5 have been treated.



Group of models 4 have been treated.

Fig. 3-24

4. The following patterns cannot be corrected by turning the neck. (Figs.3-25, 3-26, and 3-27)


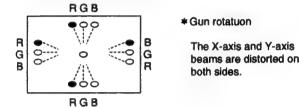



Fig. 3-25

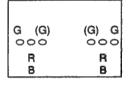

*HCR Large(Small)

The horizontal portion of the G raster is wider(narrower) than that of the RB raster on both sides of the screen.

Fig. 3-26

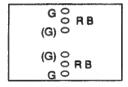

*VCR Large(Small)

The vertical portion of the G raster is wider(narrower) than that of the RB raster on both sides of the screen.

Fig. 3-27

3-8. Convergence adjustment (2)

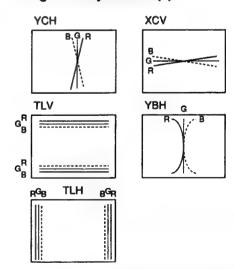


Fig. 3-28 Convergence compensation VR,coil,and compensator

Note: When adjustment is insufficient, use permalloy for perfect adjustment.

1. Group of models 4 (See Table 3-3.)

- 1. Input a cross-hatch signal.
- Make adjustment with the TLV, YCH, YBH VR, and XCV coils of the deflection yoke to minimize nonconvergence.
- When the nonconvergence of the TILT component is included in the horizontal convergence, make adjustment with the TLH compensator. (Fig. 3-28)

2. Groups of models 1, 2, and 3 (See Table 3-3.)


- 1. Input a cross-hatch signal.
- Make adjustment with the TLV, YCH VR, and XCV coils of the deflection yoke to minimize nonconvergence.
- When the nonconvergence of the TILT component is included inthe horizontal convergence, insert the TLH compensator into the deflection yoke for adjustment. (Fig.3-28)

3. Group of models 5 (See Table 3-3.)

- 1. Input a cross-hatch signal.
- Make adjustment with the XCV coil of the deflection yoke to minimize nonconvergence.
- When the nonconvergence of the TILT component is included in the vertical convergence, insert the TLV compensator into the deflection yoke for adjustment. (Fig.3-28)

3-9. G2 adjustment

- 1. Input a 525 monoscope signal.
- 2. Connect the probe of the oscilloscope to TP403 on the A board.
- 3. Measure the lowest reference pulse of the three.
- 4. Make adjustment with SCREEN VR so that the left end of the waveform will be $1.35 \text{ V} \pm 0.05 \text{ V}$.

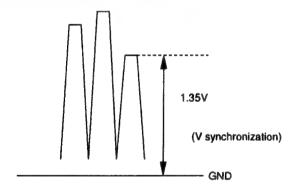

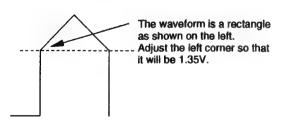


Fig. 3-29

3-10. White balance adjustment

- Input a 525 monoscope signal. (Input from LINE A or B with no burst.)
- 2. Set as follows:

CONT: 0%

BRT: 50%

 Adjust <u>SUB-BRIGHT</u> in the service mode so that the 20-tone gray scale will be as follows:

0 and 5 IRE \rightarrow Cut off

10 IRE → Slight glow

- 4. Input 525 all-white (COMPOSITE signal without burst).
- 5. Set CONT VR to 80%.
- Adjust the all-white luminance so that the screen luminance will be 3 NIT.
- 7. Press MENU and select COL TEMP/BAL.
- 8. Select 6500K.

Set 3200K SW to "0" for both 9300K and 6500K.

- 9. Put the unit into the service mode.
- Adjust to the standard values with <RED> and <BLUE> of C/T1 6500K BIAS or C/T2 6500K BIAS .
 Set cut-off to 3 NIT.

<GREEN>

Group of models (Table 3-3)	Fix as follows:
2, 3, 5	"40O"
1, 4	"512"

- 11. Switch the all-white signal luminance to 100 IRE.
- 12. Adjust to the standard values with <RED> and <BLUE> of C/T2 6500KGAIN .

 Green>

Set it to "700."

- 13. Repeat adjustment (10, 11, and 12) until the adjustment is complete, and then write the adjustment data.
- 14. Press MENU and select COL TEMP/BAL.
- 15. Select 9300K.
- Adjust CT2 9300K BIAS CT2 9300K GAIN or CT1 9300K BIAS
 CT1 9300K GAIN in the same manner as adjustments 1013.

BIAS < GREEN>

Group of models (Table 3-3)	Fix as follows:
2, 3, 5	"400"
1, 4	"512"

GAIN <GREEN>
Fix it at "700."

3-11. Blue-only white balance adjustment

- Turn ON the blue-only of the user controller SW. (To set blue-only.)
- Input all-white (COMPOSITE signal without burst). The all-white signal luminance shall be 100 IRE. CONT: 80% BRT: 50%
- 3. Select COL TEMP/BAL.
- 4. Select 6500K.
- 5. Adjust to the standard values with C/T1 6500K B/O<RED> and C/T1 6500K B/O<GREEN> or C/T2 6500K B/O<RED> and C/T1 6500K B/O<GREEN>
- 6. Select COL TEMP/BAL.
- Select 9300K.
- 8. Adjust to the standard values with C/T2 9300K B/O<RED> and C/T2 9300K B/O<GREEN> OF C/T1 9300K B/O<RED> and C/T1 9300K B/O<GREEN>
- Adjust the all-white signal luminance, and check that the white balance is satisfactory when the luminance of the screen is 8NIT.

3-12. SUB BRT adjustment

- 1. Input a 525 monoscope signal.
- 2. CONT ... MIN BRT CENTER (50&)
- 3. Select SUB BRIGHT in the service mode.
- Adjust SUB BRIGHT so that 10 IRE glows slightly and 0 IRE is cut off.

3-13. Focus adjustment

1. PVM-20M4 Series

- Adjust the H focus (upper side of focus pack) by means of a dot signal.
- Adjust the V focus (lower side of focus pack) by means of a dot signal.
- Turn the H focus fully clockwise when viewed from the front by means of a dot signal.
- Turn the H focus counterclockwise and focus well the dot in the center of the screen. When the dot is well focused, it will be divided into two sections.
- Turn the H focus VR clockwise (returning direction) so that the dot will be as shown in Fig.3-30. At that time, both ends of the central section of the screen are in the same state.



Fig. 3-30

- 6. Check that the resolution is more than 800 lines by means of a digital monoscope signal.
- Check that the magenta ring is unconspicuous by means of an all-white signal.

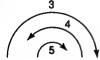


Fig.3-31 Movement of VR when viewed from the front

2. PVM-14M4 Series

- Adjust the H focus (upper side of focus pack) by means of a dot signal.
- Adjust the V focus (lower side of focus pack) by means of a dot signal.
- Turn the H focus fully clockwise when viewed from the front by means of a dot signal.
- Turn the H focus counterclockwise and focus the dot in the center of the screen well. The dot signal is divided into two sections at that time.
- Turn the H focus VR counterclockwise so that the dost will be as shown in Fig.3-32. At that time, both ends of the central section of the screen are in the same state.



Fig. 3-32

- Check that the resolution is more than 800 lines by means of a digital monoscope signal.
- Check that the magenta ring is unconspicuous by means of an all-white signal.

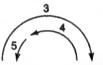
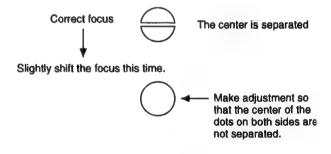


Fig.3-33 Movement of VR when viewed from the front

3. PVM-14M2 Series (CRT14MG)

Make adjustment so that the dots in the central section (right and left edges) will be undivided, respectively. (When well-focused, the dot is divided into two sections.)



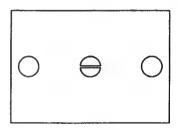


Fig. 3-34

4. PVM-20M2 Series

Focus the character "30" in the center of monoscope well is usualy.

SECTION 4 SAFETY RELATED ADJUSTMENT

When the parts (with a ⋈, ⋈ mark on the circuit diagram) shown below are replaced, confirm the matters described in items 4-1 and 4-2 shown below.

R1536

R551, R506, R519, R518, R516, R515, R508, R517, R1560,
 R1537, C549, C512, C513, C523, C592, D501, D533, Q500,
 Q511, IC500, and IC507

When the following parts are replaced, check the +B voltage: IC600, IC602, D610, C615, C631, C621, C632, and T603

Confirmation procedure

- 1. Input 120 VAC.
- Input a monoscope signal, and minimize CONTRAST and BRIGHT.
- 3. Check that the voltage of the CN605 (4) pin is 115.7 VDC.

4-1. CONFIRAMATION OF +B MAXIMUM

Standard: Less than 115.7 VDC(CN605 pin (4)) Check Condition Input voltage: 130 VAC

Note: Use NF Power Supply or make sure that distortion factor is

3% or less.

Input signal: Monoscope

Controls : BRT & CONT → Normal

4-2. CONFIRAMATION OF HOLD-DOWN CIRCUIT

Check Condition Input voltage: 130 VAC

Input signal: White &Dot

Controls : BRT & Cont → Max. & Min.

4-2-1.Hold-Down Circuit (+B)

- a) Adjust the beam current to 600±50µA with the pin ④ of CN605 with the external DC power supply (less than 127.0 VDC)to the point just before the hold-down circuit works.


 Input Signal: White
- b) Adjust the beam current to 80±20µA with the pin ④ of CN605 with the external DC power supply (less than 127.0 VDC) to the point just before the hold-down circuit works. Input Signal: Dot


4-2-2. Hold-Down Circuit (3rd Wire voltage of FBT)

Check item: Check of pin (1) of IC500 voltage: more than 110.0VDC

- a) Adjust the beam current to 600±50µA with the pin ① of IC500 with the external DC power supply (less than 141.0 VDC) to the point just before the hold-down circuit works.


 Input Signal: White
- b) Adjust the beam current to 80±20µA with the pin ① of IC500 with the external DC power supply (less than 141.0 VDC)to the point just before the hold-down circuit works. Input Signal: Dot

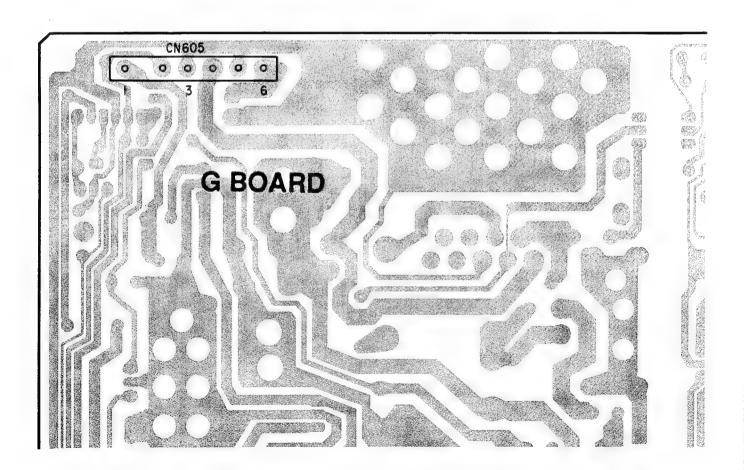

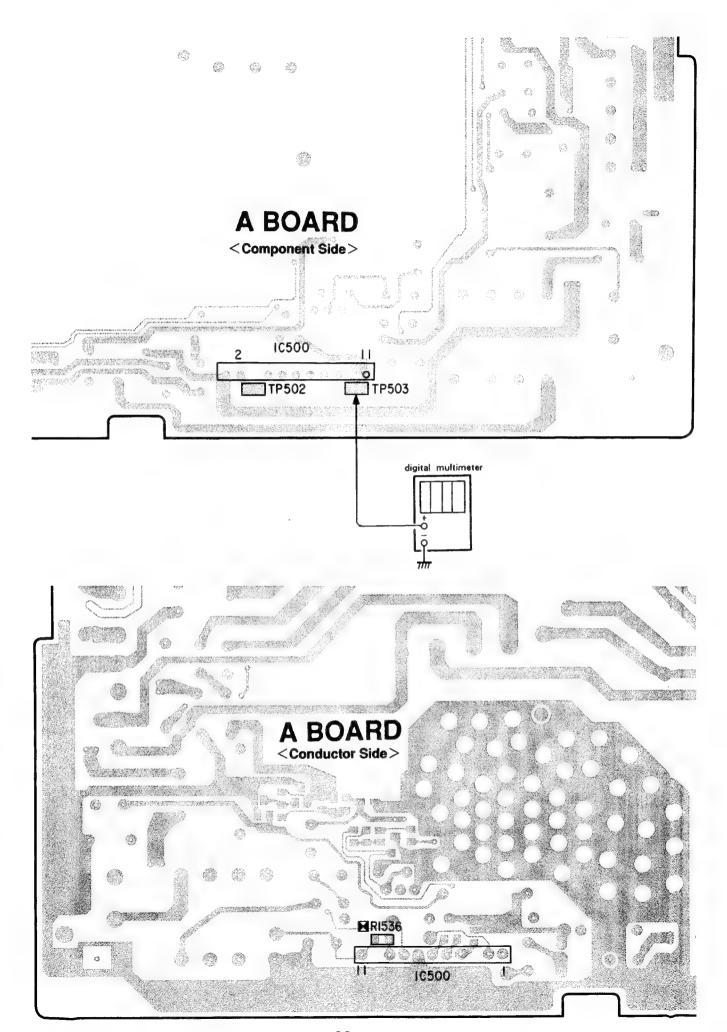

SECTION 5 CIRCUIT ADJUSTMENTS

5-1. A BOARD ADJUSTMENT

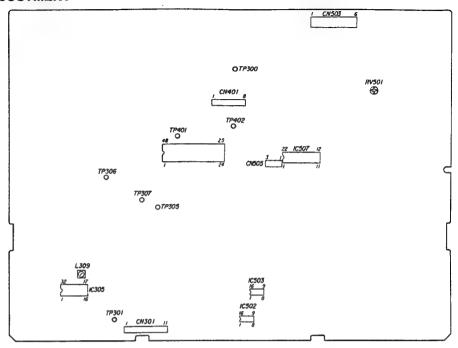

1. PREPARATION/SIGNAL SPECIFICATIONS

1. Signal specifications

 Supply a composite video or component signals from the CN301 connector. Refer to Table 5-1 to take into consideration the effect on the Q board.

The level of the signal to supply should equal to values shown in Table 5-1 plus/minus 2% max.

Table 5-1

Signal		Details ofsignal	Standard level (Pedestal white)	Reduction rate %	Connector supply level (P-W)
		100% white	0.714V	93%	0.664V
	358NT)	75% white	0.536V	*	0.498V
Composite video	443NT }	Queet	286mV (632mV)	94% (94%)	269mV (594mV)
bar)		100% white	0.7V	*	0.651V
	PAL	75% white	0.525V	4	0.488V
	SECAM } PAL M }	PAL burst (Green section) (P-P for this item only)	300mV (664mV)	94% (94%)	282mV (624mV)
	BETA 0	100% white	0.7V	94.8%	0.664V
		75% white	0.525	*	0.498V
Compo- nent		75% color B-Y, R-Y (P-P for this item only)	0.7V	•	0.664V
(75% color		100% white	0.7V	*	0.664V
bar)		75% white	0.525V	*	0.498V
	SMPTE	75% color B-Y, R-Y (P-P for this item only)	0.525	•	0.498V

2. Preparation

* In this chapter, indicates the control items in the service mode.

Example: 60 H-FRQ

Write the applicable model data at the location of NO.114 MODEL in the service mode.

Group of models 4 ... 0

Group of models 5 ... 1

Group of models 1 ... 5

Group of models 2 ... 6

Group of models 3 ... 8

* Refer to Table 5-2 for the following groups of models.

Table 5-2

Group of models		Models	
1	PVM-14M4U PVM-14M4A	PVM-14M4J	PVM-14M4E
2	PVM-14M2U	PVM-14M2E	PVM-14M2A
3	PVM-14M1J		
4	PVM-20M4U PVM-20M4A	PVM-20M4J	PVM-20M4E
5	PVM-20M2U	PVM-20M2E	

* CONT 80% is the center click position of the user controller.

2. ADJUSTMENT OF DEFLECTION SYSTEM

1. Adjustment of horizontal oscillation frequency

- 1. Input a 525 monoscope signal.
- 2. CONT ... 80%
 - BRT 50%
- 3. Set the unit in the service mode.

 Connect the IC507 ① PIN on the A board to GND via the 100μ/ 16V chemical capacitor. (Use CN505 ③ PIN for GND.) Or insert the H-FREQ jig into CN505.

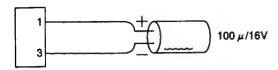


Fig.5-1 H-FREQ jig

- Adjust 60 H-FREQ so that the slanting lines on the screen will be vertical. (Fig.5-2)
- 6. Input a 625 monoscope signal.
- Adjust 50 H-FREQ so that the slanting lines on the screen will be vertical. (Fig.5-2)

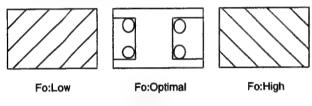


Fig.5-2

2. H BLANKING adjustment

- 1. Input a 525 monoscope signal.
- 2. CONT ... 80% BRT 50%
- 3. Set the unit in the service mode.
- Observe the anode of TP300 or D516 with an oscilloscope, and adjust <u>H-BLANKING</u> so that the waveform will be as shown in Fig.5-3.

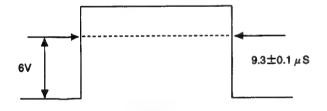


Fig.5-3

3. Picture phase adjustment

- 1. Input a 525 monoscope signal.
- 2. Set the unit in the UNDER SCAN mode.
- 3. CONT ... Min. BRT Max.
- 4. Set the unit in the service mode.
- Adjust <u>UNH-SIZE</u> so that the white frame of the monoscope will be approx. 1 cm to the inside of the effective screen.
- 6. Turn RV501 (H-CENT) so that B = B'.
- Adjust 60 VIDEO PHASE so that the signal area will be in the center (A = A') of the deflection area. (Fig. 5-4)
- 8. Input a 625 monoscope signal.
- 9. Adjust 50 VIDEO PHASE in the same manner.

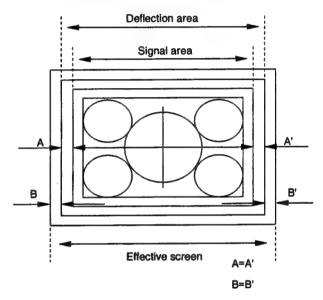


Fig.5-4

4. V BLANKING adjustment

- 1. Input a 525 monoscope signal.
- 2. Set the unit in the UNDER SCAN mode.
- 3. CONT ... Min. BRT ... Max.
- 4. Set the unit in the service mode.
- Adjust V-BLANKING <60> so that the white frame in the upper section of the monoscope will be about to be blanked.

Note: Blanking up to the point 1H away from the white frame is permissible, but the adjusting center should be up to the point 0.5H away from the frame.

- Cancel the UNDER SCAN mode, and set the unit in the normal 16:9 mode.
- 7. Adjust 16:9 BLANKING START<60> and 16:9 BLANKING END<60> that the number of frames in the vertical direction in the lumnous section of the screen will be 11.74 and the BLK quantity it the top and bottom will be the same.

Note: Make adjustment before 16:9 V-SIZE adjustment.

- 8. Input a 625 monoscope signal.
- 9. In the same way as 5. shown above, adjust V-BLANKING <50>.
- 10. Adjust 16:9 BLANKING START<50> and 16:9 BLANKING END<50>, in the same was as 6. and 7., so that the number of frames in the vertical direction in the luminous section of the screen will be 11.2 and the BLK quantity at the top and bottom will be the same.

5. Vertical deflection adjustment

- 1. Input a 525 monoscope signal.
- 2. CONT ... 80% BRT ... 50%
- 3. Set the unit in the service mode.
- 4. Roughly adjust NOR 60 V.SIZE so that the size will be 12 frames. Adjust V.LIN with V.LIN.

Adjust CENT with V.CENT

V.CENT must be reviewed after adjustment of V.LIN.

Adjust NOR 60 V.SIZE so that it will equal the standard value.

- 5. Set the unit in the 16:9 mode by the user controller SW.
- 6. Make the same adjustment with 16:9 NOR V.SIZE <60>.
- 7. Set the unit in the NORMAL SCAN mode.
- 8. Input a 625 signal.
- Adjust NOR 50 V.SIZE so that the SIZE will equal the standard value.
- 10. Set the unit in the 16:9 mode.
- 11. Adjust 16:9 NOR V.SIZE <50> so that it will equal the standard value.

Table 5-3 NORMAL V. SIZE standard

		525 625		
4:3		11.75±0.2 frames	11.2±0.2 frames	
16.0	14"	154mm	-	
16:9	20"	217mm	4	

Horizontal deflection adjustment (Normal scan adjustment)

- 1. Input a 525 monoscope signal.
- 2. CONT ... 80% BRT 50%
- 3. Set the unit in the service mode.
- 4. Rough adjustment of H.SIZE

Roughly adjust NOR H.SIZE so that H.SIZE will be 15.75 frames.

- Adjust the horizontal deflection by means of NOR PIN AMP, NOR PIN PHASE, NOR U.PIN AMP, SEXY, VBOW, VANGL, NOR H SIZE, L PIN AMP, and L V BOW.
 - (While correcting a distorted parallelogram and curvature with V.ANGL and BOW, make adjustment so that the horizontal and vertical lines of the screen will be straight.)
- 6. Set the unit in the 16:9 mode.
- 7. Make the same adjustment as 5. with 16:0 NOR PIN AMP and 16:9 NOR PIN PHASE

Table 5-4 NORMAL H. SIZE standard

	525	625
4:3	11.75±0.2 frames	15.0±0.2 frames
16:9	11.75±0.2 frames	15.0±0.2 frames

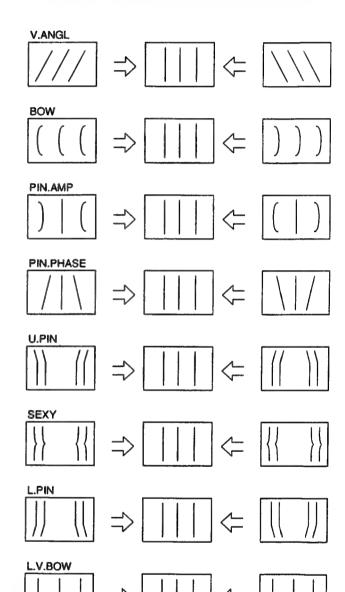


Fig.5-5

Horizontal deflection adjustment (UNDER SCAN adjustment)

- 1. Input a 525 monoscope signal.
- 2. CONT ... 80% BRT ... 50%
- 3. Set the unit in the U/S mode.
- 4. Set the unit in the service mode.
- Adjust <u>U/S V SIZE <60></u> so that UNDER V.SIZE will be within the standard.
- Adjust <u>UNSHSIZE</u> so that UNDER H.SIZE will be within the standard.
- Adjust <u>U/S PIN AMP</u> and <u>U/S PIN-PHASE</u>. (Adjust tracking according to 5., 6., and 7.)
- After adjustment, the white frame of the monoscope shall not be out of the effective screen.
- 9. Set the unit in the 16:9 mode.
- 10. Make the same adjustment with 5. and 7. by means of [16:9 U/S V SIZE <60>], [16:9 U/S PIN-AMP] and [16:9 U/S PIN-PHASE].

Table 5-5
Standerd values for groups of models 1, 2, and 3 (14")

	525	625
U/S H-SIZE V-SIZE	252mm 188mm	•
16 : 9 U/S V-SIZE	142mm	←

Table 5-6
Standerd values for groups of models 4 and 5 (20")

	525	625
U/S H-SIZE V-SIZE	364mm 272mm	←
16 : 9 U/S V-SIZE	205mm	←

- 11. Set the unit in the 16:9 mode.
- 12. Input a monoscope signal.
- 13. Make the same adjustment with 5. by means of U/S V SIZB <50>
- 14. Set the unit in the 16:9 mode.
- 15. Make the same adjustment with 5. by means of 16:9 U/S V SIZE <50>.

Note: If there is not time enough for adjustment (5. Vertical deflection adjustment and 6. and 7. Horizontal deflection adjustment), confirm that the respective sections will operate normally and that adjustment is possible, and then input standard adjustment values.

8. H/V-DELAY adjustment

Note: This item applies only to groups of models 1, 2, 4, and 5.

- 8-1. H-DELAY adjustment
- 1) Input a 525 monoscope signal.
- 2) CONT ... 80% BRT 50%
- 3) Set the unit in the H/V DELAY mode.
- 4) Set the unit in the service mode.
- Connect the probe of an oscilloscope to IC503 ⑦ PIN. Adjust
 HDELAY
 so that the output waveform will be as shown in Fig.5

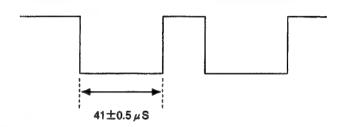


Fig.5-6

- 8-2. V-DELAY adjustment
- 1) Input a 525 monoscope signal.
- 2) CONT ... 80% BRT 50%
- 3) Set the unit in the H/V DELAY mode.
- 4) Set the unit in the service mode.
- 5) Connect the probe of an oscilloscope to IC502 ⑦ PIN. Adjust V DELAY so that the output waveform will be as shown in Fig.5-7.

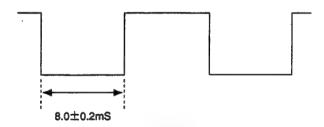


Fig.5-7

8-3. Confirmation of screen Confirm that the screen is as shown in Fig.5-8.

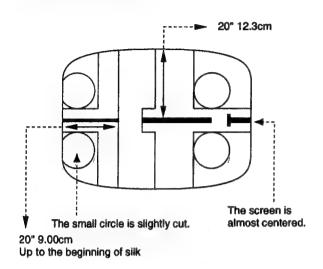


Fig.5-8

9. Writing adjustment results

Write the adjustment results.

Note: Do not turn off the power before writing the adjustment results; otherwise, they will all be lost.

3. Signal system adjustment

1. SUB CON adjustment during NORM and H/V DL

Note: H/V-DL is not applicable to the group of models 3.

Adjustment must be completed before the HUE adjustment of NTSC358/443.PAL.

1. Input a vertical white line signal.

Note: Use a vertical white line signal (without 525 burst; H width of 3µS; 100IRE).

- 2. CONT ... 80% BRT 50%
- Connect the probe of an oscilloscope to CN401 ③ PIN on the A board.
- 4. Set the unit in the service mode.
- Temporarily input "69" as an adjustment value for SUB.BRIGHT. Set the values in Table 5-7 as BIAS and GAIN data of C.TEMP1 and C.TEMP2.

Table 5-7


Group of models	1, 4	2, 3, 5
BIAS GREEN	512	400
GAIN GREEN	700	700

6. Adjust the pedestal or the distance between SYNCTIP and WHITE by means of SUB CON <4:3, NOR>,

SUB CON <4:3, H/V DELAY), SUB CON <16:9, NOR>, and

SUB CON <16:9, NOR>.

SUB CON <4:3. NOR>

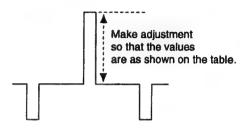


SUB-CON 4:3. H/V-DL SUB-CON 16:9. H/V-DL

SUB CON <16:9. NOR> (Fig.5-9)

Group of models	4	1	5	2	3
4:3	1.39Vp-p	1.16Vp-p	1.37Vp-p	1.47Vp-p	1.47Vp-p
16:9	1.22Vp-p	1.04Vp-p	1.19Vр-р	1.32Vp-p	1.32Vp-p

Fig. 5-9

SUB CON <4:3. H/V DELAY>
SUB CON <16:9. H/V DELAY> (Fig.5-10)

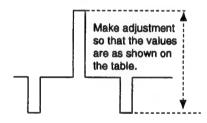

SUB-CON 4:3. H/V-DL SUB-CON 16:9. H/V-DL

Group of models	4	1	5	2
4:3	1.39Vp-p	1.16Vp-p	1.37Vp-p	1.47Vp-p
16:9	1.22Vp-p	1.04Vp-p	1.19Vp-p	1.32Vp-p


Fig. 5-10

Note: Not applicable to PVM-14M1J

2. SUB PHASE adjustment

Note: Not applicable to the group of models 3.

- Input a component color bar (R-Y) and EXT SYNC. (BETA 0 level signal)
- 2. Set the unit in the EXT SYNC mode for component input.
- 3. Connect the probe of an oscilloscope to IC404 @ PIN or TP402.
- 4. Set the unit in the service mode.
- 5. Adjust SUB PHASE so that the output waveform will be minimum (15 mVp-p or less). (Fig.5-11)

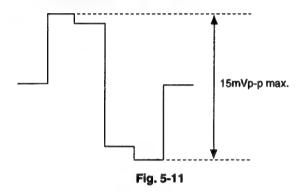

3. SUB PHASE adjustment

Note: Not applicable to groups of models 1, 2, 4, and 5.

- 1. Input an NTSC color bar.
- Connect L309 to GND and TP307 to 5V line (L320 line), respectively.
- 3. Set the unit in the service mode.
- 4. Adjust SUB PHASE so that the output waveform will be minimum (15 mVp-p or less). (Fig.5-11)

4. SUB CHROMA adjustment

Note: Not applicable to the group of models 3.

- Input component color bars (R-Y, Y, and B-Y). (BETA 0 level signal)
- 2. Set COMPONENT LEVEL to BETA 0 via MENU.
- 3. Connect the probe of an oscilloscope to IC404 @ PIN or TP402.
- 4. Set the unit in the service mode.
- 5. Adjust SUB CHROMA NORMAL so that the peaks of waveforms will be flush with each other as shown in Fig.5-12.

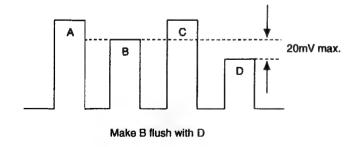


Fig. 5-12

5. SUB COL adjustment

Note: Not applicable to groups of models 1, 2, 4, and 5.

- 1. Set the unit in the service mode.
- 2. Input adjustment value 98 to SUB CHROMA NORMAL. (Fig.5-12)

6. R-Y LEVEL adjustment

Note: Not applicable to the group of models 3.

- 1. Input component color bars (R-Y, Y, and B-Y). (BETA 0 level signal)
- 2. Set COMPONENT LEVEL to BETA 0 via MENU.
- 3. Connect the probe of an oscilloscope to IC404 ① PIN or TP401.
- 4. Set the unit in the service mode.
- Adjust R-Y LEVEL COMPONENT so that the peaks of waveforms will be flush with each other as shown in Fig.5-13.

Make adjustment so that B = D as shown above. (20 mV max.) Check that the difference between B and C is 30 mV or less.

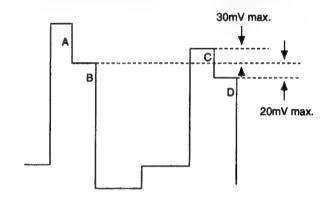


Fig. 5-13

7. SUB CHROMA N10/SMPTE

Note: Not applicable to the group of models 3.

- Input component color bars (R-Y, Y, and B-Y). (SMPTE level signal)
- 2. Set COMPONENT LEVEL to N10/SMPTE via MENU.
- 3. Connect the probe of an oscilloscope to IC404 @ PIN or TP402.
- 4. Set the unit in the service mode.
- Adjust <u>SUB CHROMA SMPTE</u> so that the levels of B and D will be the same. (Fig.5-14)

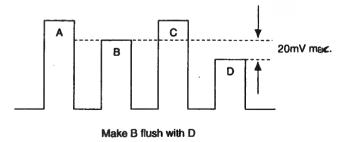


Fig. 5-14

8. Adjustment of burst gate pulse width

- 1. Input an NTSC color bar.
- 2. Connect the probe of an oscilloscope to TP301 (COMP-SYNC) and Q363 (E) or IC305 ① PIN. (Exercise care since IC305 (1) PIN is a high-impedance line.)
- 3. Set the unit in the service mode.
- Adjust BGP WIDTH so that the output waveforms will be as shown in Fig.5-15.

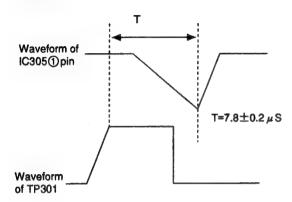



Fig. 5-15

9. VXO adjustment

9-1. X'tal 358

- 1) Input an NTSC color bar.
- 2) Connect a frequency counter to IC305 ② PIN.
- 3) Set the unit in the service mode.
- 4) Connect IC305 ① PIN as shown in Fig.5-16.
- 5) Adjust NTSC CRYSTAL so that the counter reading will be within the standard values shown below. (Adjustment may be made at a point at which the color flickering stops.)

X'tal 358 standard vlaue: 3579545±20 Hz

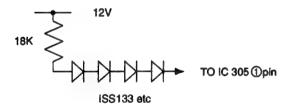

(Arrange 4 Di's as close as possible to ①PIN at the shortest possible distance.)

Fig. 5-16

9-2. X'tal 443

- 1) Input a 443 NTSC color bar.
- 2) Connect a frequency counter to IC305 ② PIN.
- 3) Set the unit in the service mode.
- Connect IC305 ① PIN in the same way as 9.-4) in 9. VXO adjustment.
- 5) Adjust NTSC 443 CRYSTAL in the same way as 9.-5) in 9. VXO adjustment.

X'tal 443 standard value: 4433619±20 Hz

10. NTSC - NTSC443 - PAL color demodulation adjustment

Note: 10-1, is not applicable to the group of models 3.

10-1. NT358PHASE (NORMAL)

- 1) Input an NTSC color bar.
- 2) Connect the probe of an oscilloscope to TP306.
- 3) Set the unit in the H/V DELAY mode.
- 4) Set the unit in the service mode.
- Adjust PHASE NTSC 358 NOR so that the burst section of the output waveform will be straight. (Fig.5-17)

10-2. NT 358 PHASE (ACC OFF)

- 1) Conduct ACC OFF via MENU.
- 2) Make adjustment in the same way as 10-1. shown above by means of PHASE NTSC 443 ACC OFF. (Fig. 5-17)

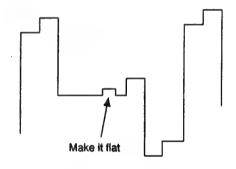


Fig. 5-17

10-3, NT 358 B-Y PHASE

Note: Make adjustment after PHASE adjustment and before CHROMA adjustment.

- Input an NTSC color bar. (Input only the R-Y component. B-Y and Y should be OFF.)
- 2) Connect the probe of an oscilloscope to TP305.
- 3) Set the unit in the service mode.
- Adjust B-Y PHASE NTSC 358 so that the color components will be straight.

10-4. NT 358 CHROMA (NORMAL)

- 1) Input an NTSC color bar.
- 2) Connect the probe of an oscilloscope to IC404 @ PN or TP402.
- 3) Set the unit in the service mode.
- Adjust CHROMA NTSC 358 NOR so that the peaks of waveforms will be flush with each other as shown in Fig.5-18.

10-5, NT 358 CHROMA (ACC OFF)

Note: 10-5, is not applicable to the group of models 3.

- 1) Conduct ACC OFF via MENU.
- Adjust CHROMA NTSC 358 ACC OFF in the same way as 10-4. shown above. (Fig. 5-18)


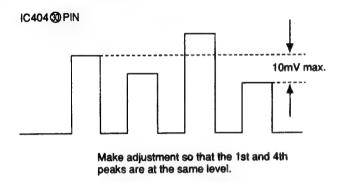


Fig. 5-18

10-6. NTSC 358 R-Y LEVEL

Note: Be sure to set ACC in the ON position before this adjustment.

- 1) Input an NTSC 358 color bar.
- 2) Connect the probe of an oscilloscope to IC 404 @PIN or TP401.
- 3) Set the unit in the service mode.
- 4) Adjust **R-Y LEVEL NTSC 358** so that the peaks of waveforms will be flush with each other as shown in Fig.5-19.

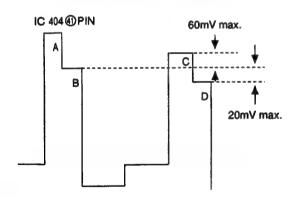

Make adjustment so that B=D as shown above.(20mV max.) Check that the difference between B and C is less than 60mV.

Fig. 5-19

10-7. NTSC 443 PHASE (NORMAL)

Note: 10-7-3). is not applicable to the group of models 3.

- 1) Input an NTSC 433 color bar.
- 2) Connect the probe of an oscilloscope to TP306.
- 3) Set the unit in the H/V DELAY mode.
- 4) Set the unit in the service mode.
- Adjust PHASE NTSC 443 NOR so that the burst section of the output waveform will be straight. (Fig. 5-20)

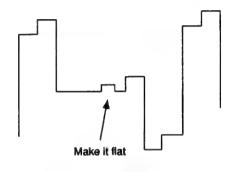


Fig. 5-20

10-8. NTSC 443 PHASE (ACC OFF)

Note: 10-8. is not applicable to group of models 3.

- 1) Conduct ACC OFF via MENU.
- 2) Adjust PHASE NTSC 443 ACC OFF in the same way as 10-7-5). (Fig.5-21)

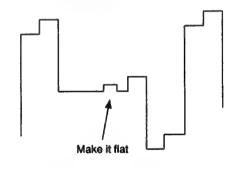


Fig. 5-21

10-9. NTSC 443 B-Y PHASE NTSC 443 CHROMA NOR

Note: Be sure to set ACC in the ON position before this adjust-

ment.

Note: Remove HV.DELAY before this adjustment.

- 1) Input an NTSC 443 color bar.
- 2) Connect the probe of an oscilloscope to TP402.
- 3) Set the unit in the service mode.
- 4) While tracking by means of **B-Y PHASE NTSC 443** and **CHROMA NTSC 443 NOR**, make adjustment so that the peaks of waveforms will be the same. (Fig. 5-22)

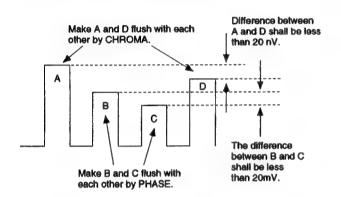


Fig. 5-22

10-10. NTSC 443 CHROMA (ACC OFF)

Note: 10-10. is not applicable to the group of models 3.

- 1) Conduct ACC OFF via MENU.
- 2) Adjust [CHROMA NTSC 443 ACC OFF] in the same way as 10-9-4). (Fig.5-23)

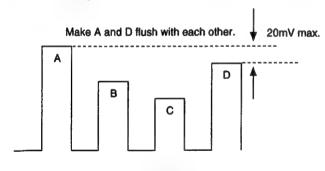


Fig. 5-23

10-11. NT 443 R-Y LEVEL

Note: Be sure to set ACC in the ON position before this adjustment.

- 1) Input an NTSC 443 color bar.
- 2) Connect the probe of an oscilloscope to TP401.
- 3) Set the unit in the service mode.
- 4) Adjust R-Y LEVEL NTSC 443 in the same way as 10-6-4). (Fig.5-24)

Make adjustment so that B = D. (20 mV max.) Check that the difference between B and C is 60 mV or less.


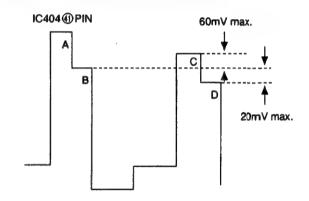


Fig. 5-24

10-12. PAL PHASE (NORMAL)

- 1) Input a PAL SP color bar.
- 2) Connect the probe of an oscilloscope to TP306.
- 3) Set the unit in the service mode.
- Adjust PHASE PAL NOR so that the waveform of the B-Y anti-PAL signal will be "0."

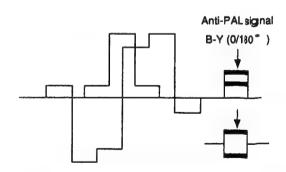

"The signal waveform differs slightly every hour. Adjust it to "0."

Fig. 5-25 R-Y OUT

10-13. PAL PHASE (ACC OFF)


Note: 10-13. is not applicable to the group of models 3.

- 1) Conduct ACC OFF via MENU.
- 2) Adjust PHASE PAL ACC OFF in the same way as 10-12-4).

10-14. PAL B-Y PHASE

Note: Be sure to set ACC in the ON position before this adjustment.

- 1) Input a PAL SP color bar.
- 2) Connect the probe of an oscilloscope to TP305.
- 3) Set the unit in the service mode.
- Adjust <u>B-YPHASEPAL</u> so that the waveform of the R-Y anti-PAL signal will be "0." (Fig.5-26)

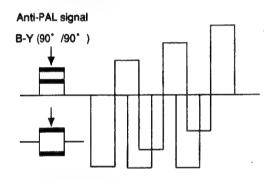

*The signal waveform differs slightly every hour. Adjust it to "0."

Fig. 5-26 B-Y OUT


10-15. PAL CHROMA (NORMAL)

- 1) Input a PAL color bar.
- 2) Connect the probe of an oscilloscope to IC404 30 PIN or TP402.
- 3) Set the unit in the service mode.
- Adjust CHROMA PAL NOR so that the peaks of waveforms will be flush with each other. (Fig.5-27)

10-16. PAL CHROMA (ACC OFF)

Note: 10-16 is not applicable to the group of model 3.

- 1) Conduct ACC OFF via MENU.
- Adjust CHROMA PAL ACC OFF in the same way as 10-15-4). (Fig.5-27)

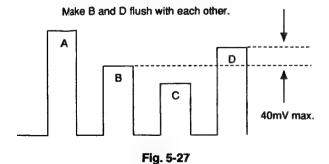

10-17. PAL R-Y LEVEL

Note: Be sure to set ACC in the ON position before this adjustment.

- 1) Input a PAL color bar.
- 2) Connect the probe of an oscilloscope to IC404 @ PIN or TP401.
- 3) Set the unit in the service mode.
- 4) Adjust R-Y LEVEL PAL so that the peaks of waveforms will be flush with each other as shown on the right, (Fig. 5-28)

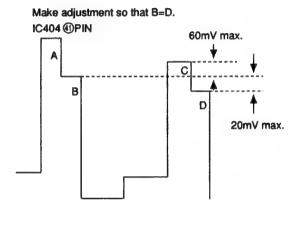


Fig. 5-28

11. SECAM adjustment

Note: Make adjustment after deflection adjustment.

Note: Subject to H-FREQ, H-BLK, VIDEO-PHASE, ANGLE,

BOW, H-DELAY, etc.


Note: 11. SECAM adjustment is not applicable to the group of models 3.

11-1. HP WIDTH (NORMAL) adjustment

1) Input a SECAM color bar.

Note: The board is roughly adjusted in 11-1., and IC317 ® PIN pulse width may be used for control.

- 2) Set the unit in the UNDER SCAN mode.
- 3) Set the unit in the service mode.
- 4) Adjust HP WIDTH NOR so that the color section at the left edge of the upper portion of the screen is about to disappear. (Fig.5-29)

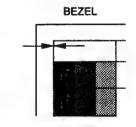

Make adjustment so that colors are about to disappear.

Fig. 5-29

11-2. Writing HP.WIDTH (NORMAL) data

Note: Not applicable to groups of models 1, 2, 4, and 5.


- 1) Set the unit in the service mode.
- 2) Input 102 to HP.WIDTH (NOR).

11-3. HP POSITION adjustment

Note: 11-3. is not applicable to the group of models 3.

- 1) Input a SECAM color bar.
- 2) Set the HV-DL mode.
- 3) Set the unit in the service mode.
- 4) Adjust HP POSITION as shown in Fig.5-30.

Note: The same as 11-3. The phase relationship between the beginning of IC317 ® PIN pulse and the input VIDEO signal may be used for control.

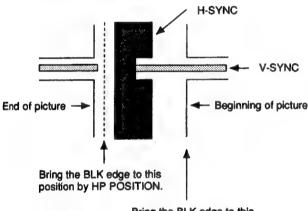

Bring the BLK edge to this position by HP WIDTH H/V.

Fig. 5-30

11-4. HP WIDTH (H/V-DL) adjustment

Note: 11-4. is not applicable to the group of models 3.

- 1) Input a SECAM color bar.
- 2) Set the unit in the HV-DELAY mode.
- 3) Set the unit in the service mode.
- Adjust HP WIDTH H/V-DELAY as shown in Fig.5-30. (Note: Check HP POSITION. If it is not in position, repeat 2) and 3).)

11-5. SECAM COL BALANCE


Note: 11-5. is not applicable to the group of models 3.

- 1) Input a SECAM color bar.
- 2) Connect the probe of an oscilloscope to TP306.
- 3) Set the unit in the service mode.
- Adjust <u>SECAM COLOR BALANCE R-Y</u> so that the level in the achromatic color will be straight.

- 5) Connect the probe of an oscilloscope to TP305.
- Adjust <u>SECAM COLOR BALANCE B-Y</u> so that the level in the achromatic color will be straight.

11-6. SECAM CHROMA

- 1) Input a SECAM color bar.
- 2) Connect the probe of an oscilloscope to IC404 @ PIN or TP402.
- 3) Set the unit in the service mode.
- Adjust CHROMA SECAM so that the peaks of waveforms will be flush with each other as shown in Fig.5-31.

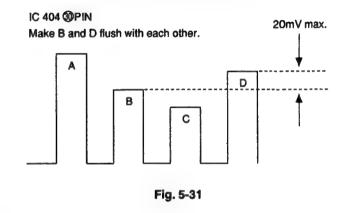

11-7. SECAM R-Y LEVEL

- 1) Input a SECAM color bar.
- 2) Connect the probe of an oscilloscope to IC404 @ PIN or TP401.
- 3) Set the unit in the service mode.
- 4) Adjust R-Y LEVEL SECAM so that the peaks of waveforms will be flush with each other as shown in Fig.5-32.

IC404 (PIN Make adjustment so that B=D.

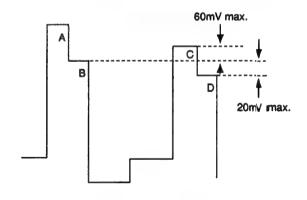



Fig. 5-32


12. Writing adjustment results


Write adjustment results in the memory.

SECTION 6 DIAGRAMS


6-1. BLOCK DIAGRAMS (1)

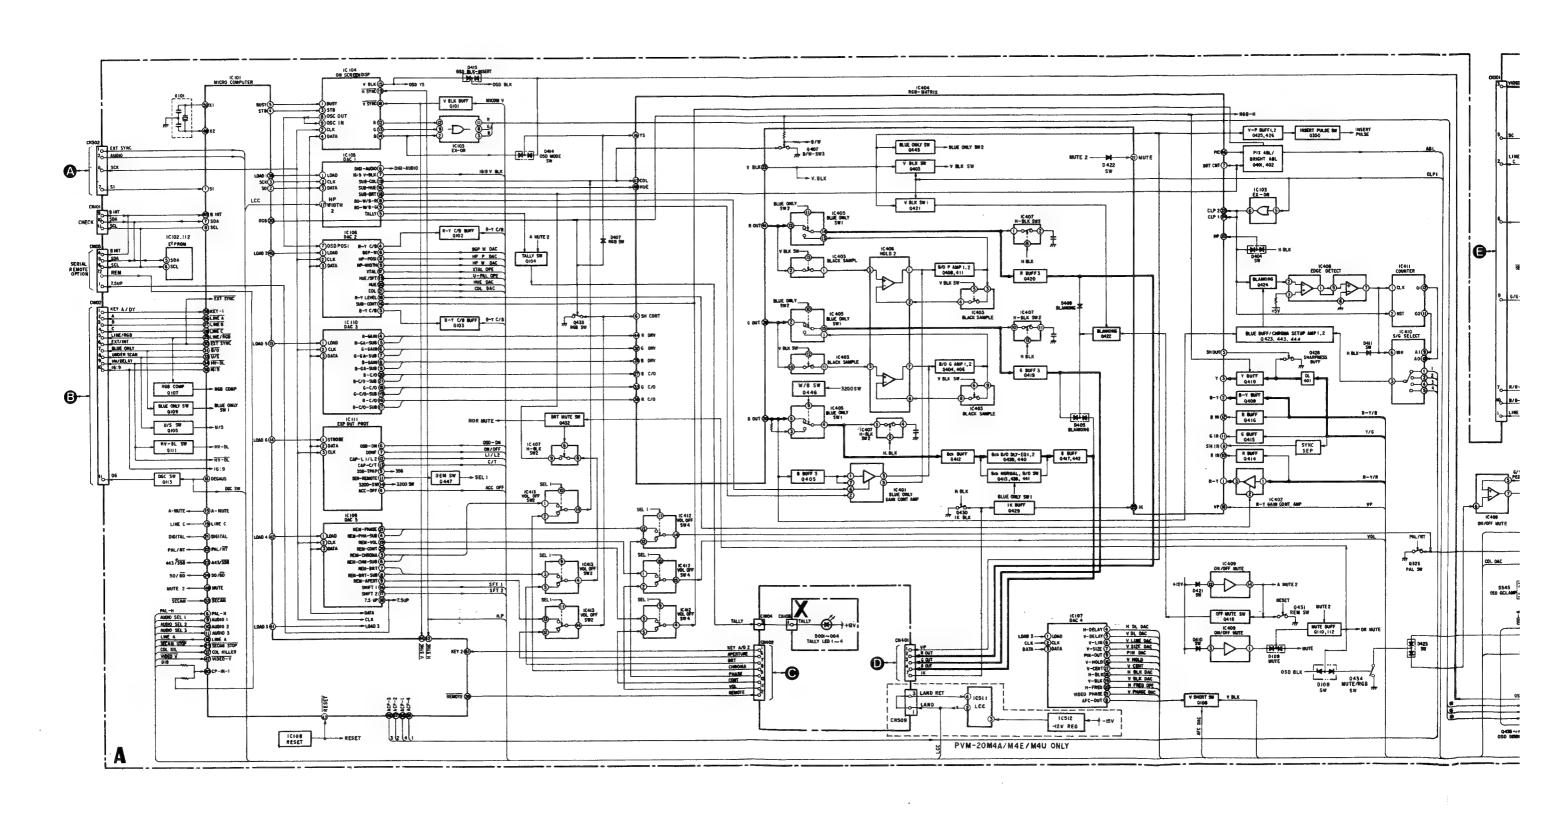


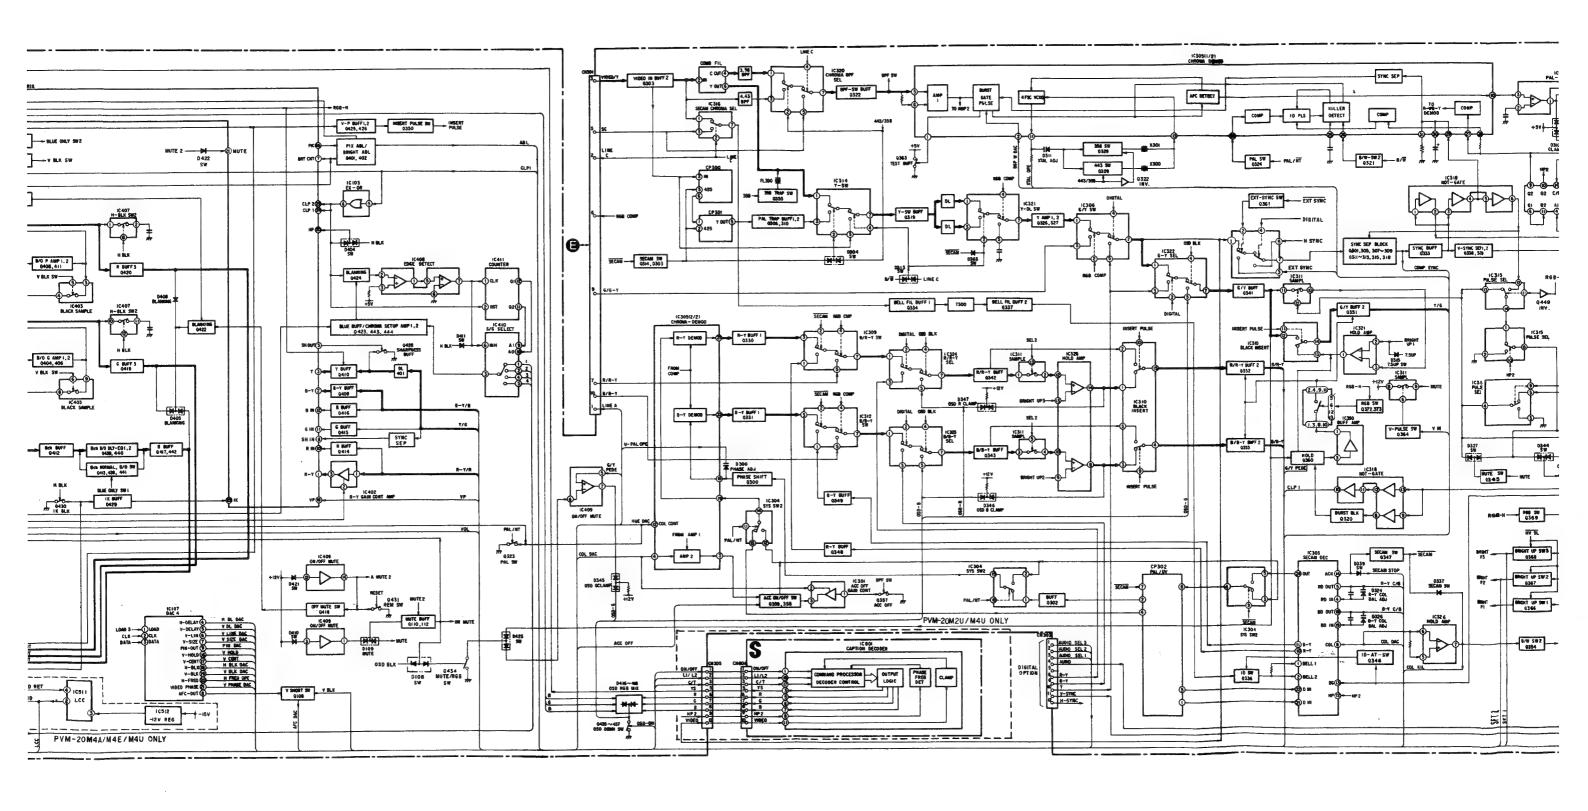


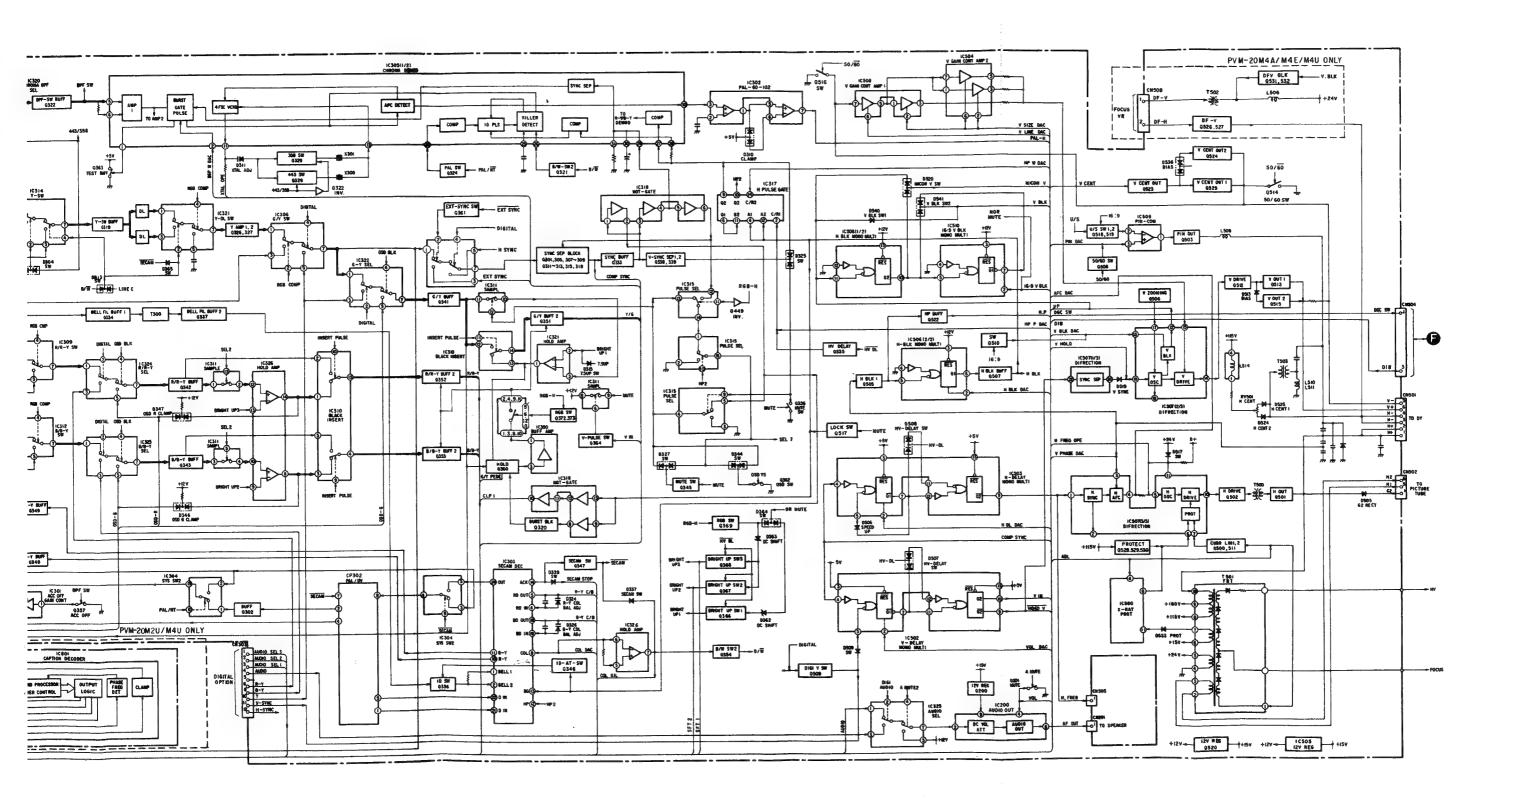



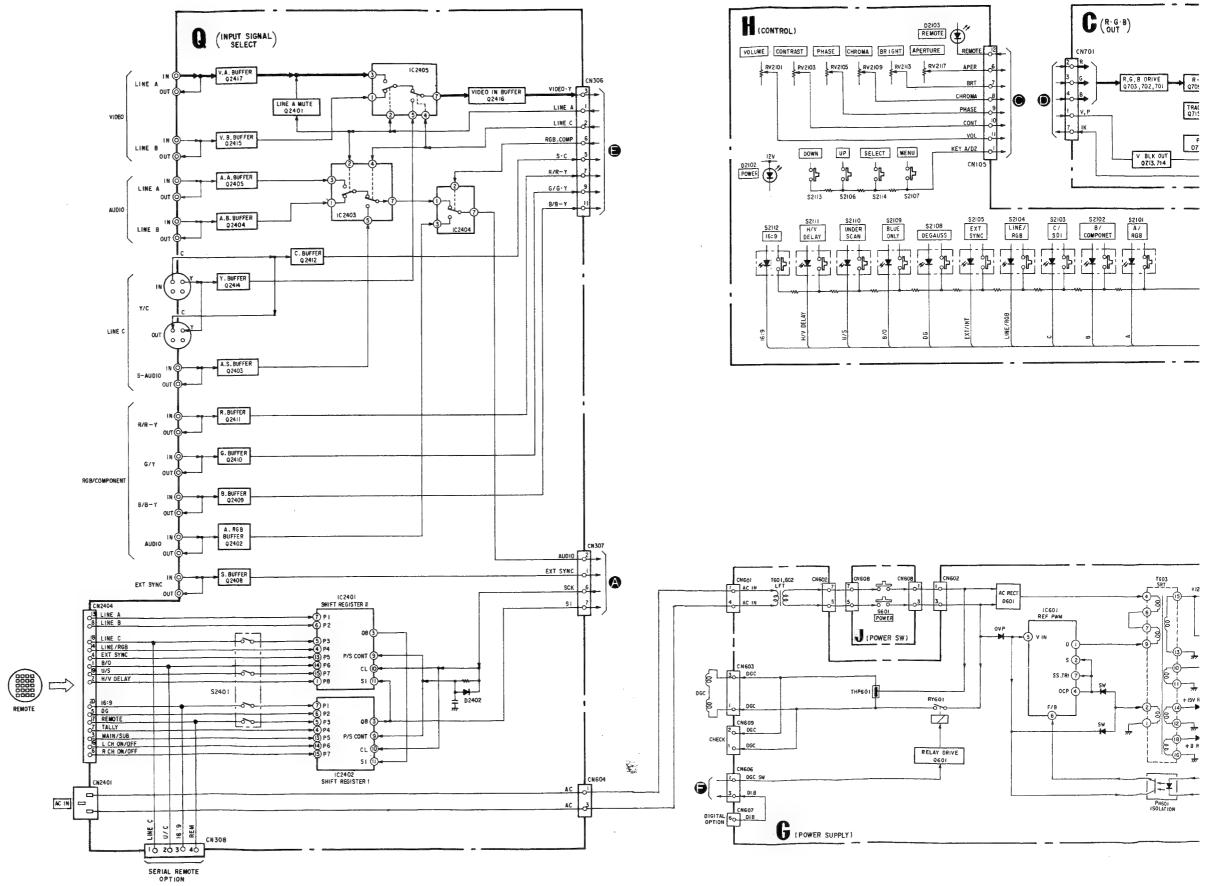


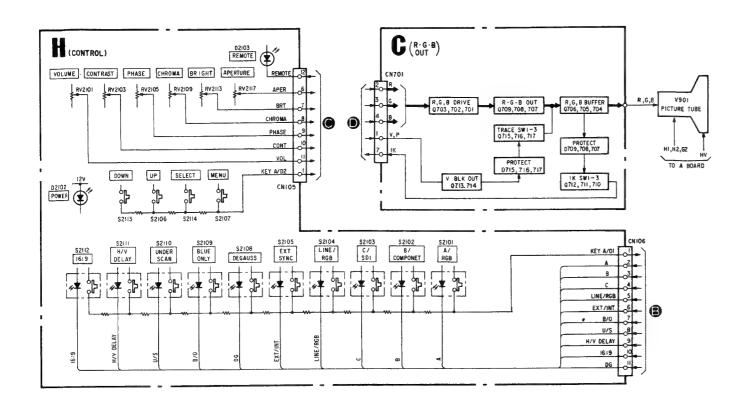

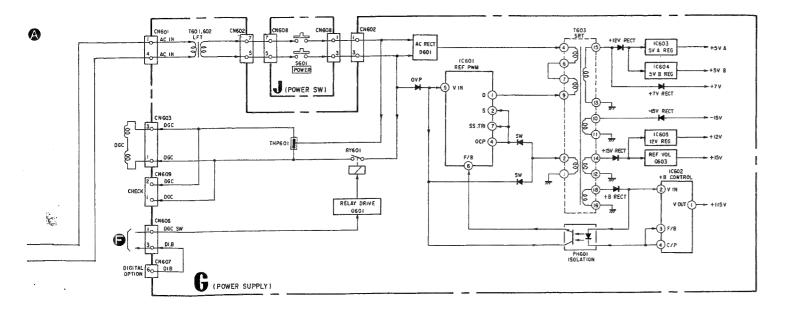


-47 -

6-2. FRAME SCHEMATIC DIAGRAM

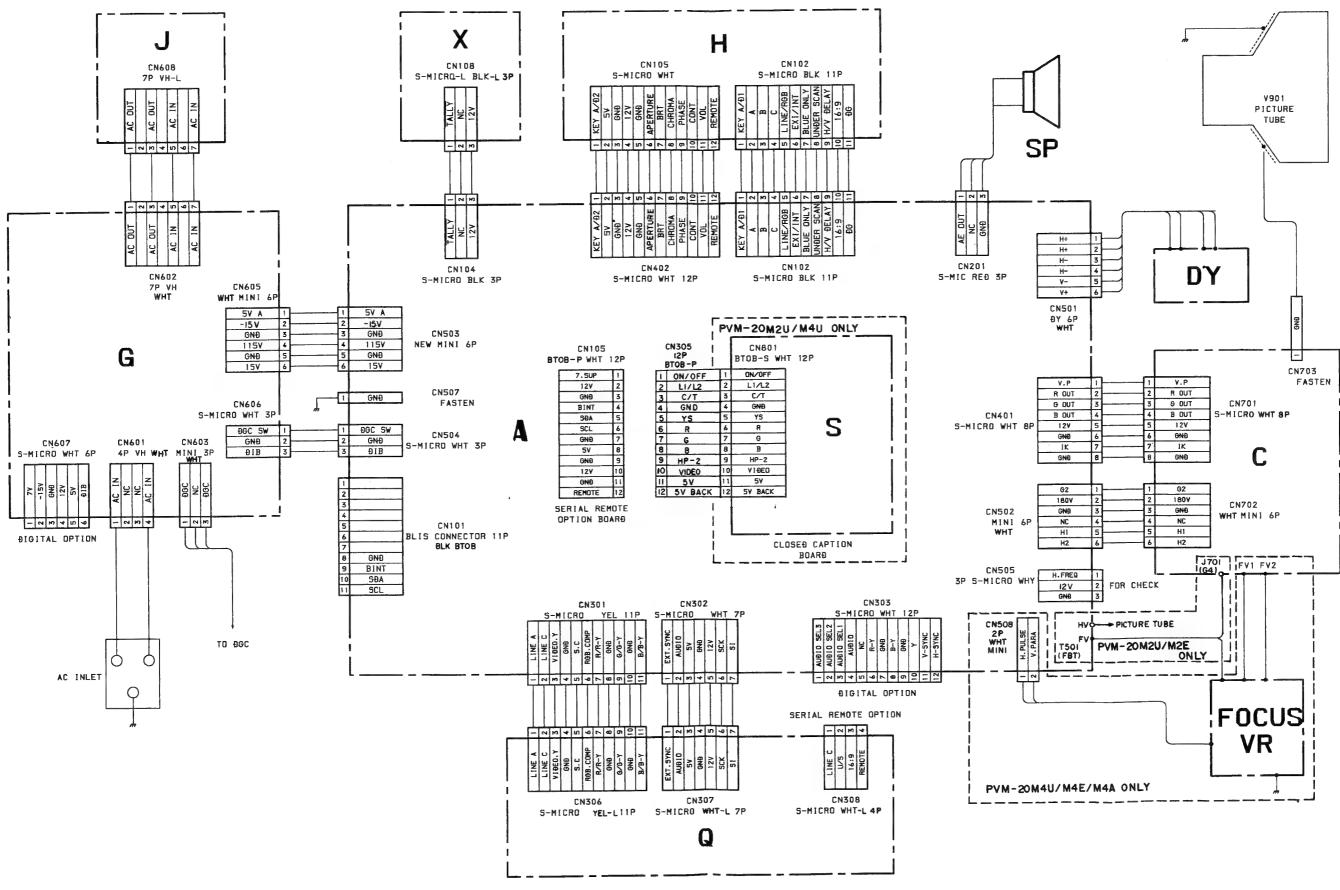


- 50 -

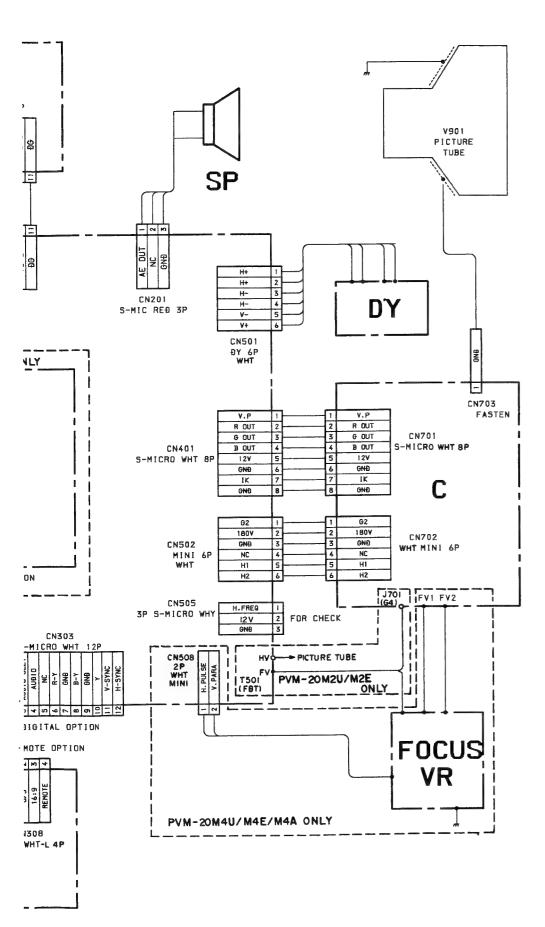

NEMO	
· · · · · · · · · · · · · · · · · · ·	
P	-
	•

6-3. CIRCUIT BOARDS LOC.

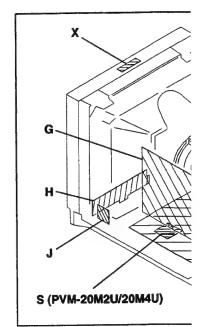

6-4. PRINTED WIRING BOAF

- All capacitors are in μF unless othe 50 WV or less are not indicated except
- Indication of resistance, which does r electrical power, is as follows.

Pitch: 5 mm Rating electrical power 1/4 W


originally used.

- All resistors are in ohms.
- nonflammable resistor.
- : fusible resistor.
- • ______ : panel designation, and adjus
- All variable and adjustable resistors ha
- B. unless otherwise noted. • The components identified by 🔀 it diagram have been carefully factory-s order to satisfy regulations regarding X-Should replacement be required, replacement
- When replacing components identifi€ necessary adjustments indicated. If r specified value, change the compone repeat the adjustment until the speci (Refer to R1536 adjust on Page 25 and
- When replacing the part in below table related adjustment.

Part replaced ()

C512, C513, C523, C549, C592, D533, IC500, IC507, Q500, Q51 R508, R515, R516, R517, R518, R551, R1537, R1560---- (A E

6-3. CIRCUIT BOARDS LOCATION

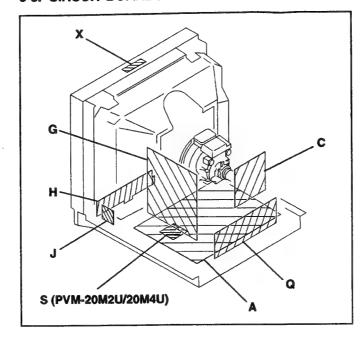

6-4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note

- All capacitors are in μF unless otherwise noted. pF: μμF
 50 WV or less are not indicated except for electrolytics.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm Rating electrical power ¼ W

- All resistors are in ohms.
- : nonflammable resistor.
- tusible resistor.
- internal component.
- in panel designation, and adjustment for repair.

 All variable and adjustable resistors have characteristic curve
- B. unless otherwise noted.
 The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation.
- Should replacement be required, replace only with the value originally used.
- When replacing components identified by . make the
 necessary adjustments indicated. If results do not meet the
 specified value, change the component identified by . and
 repeat the adjustment until the specified value is achieved.
 (Refer to R1536 adjust on Page 25 and 26.)
- When replacing the part in below table, be sure to perform the related adjustment.

Part replaced (☑)	Adjustment (►)
C512, C513, C523, C549, C592, D501, D533, IC500, IC507, Q500, Q511, R506, R508, R515, R516, R517, R518, R519, R551, R1537, R1560	R1536 (HOLD-DOWN)

- All voltages are in V.
- Voltage are dc with respect to ground unless otherwise noted.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- B + bus.
 B bus.
- signal path.
- No mark: with PAL colour-bar signal sreceived or common voltage.

METAL FILM

SOLID

For the respective voltage ratings in SECAM, NTSC 3.58, NTSC 4.43
 S-VIDEO, and ANALOG RGB modes, see the table

Reference information


: RC


RESISTOR : RN

		: FPRD	NONFLAMMABLE CARBON
		: FUSE	NONFLAMMABLE FUSIBLE
		: RW	NONFLAMMABLE WIREWOUND
		: RS	NONFLAMMABLE METAL OXIDE
		: RB	NONFLAMMABLE CEMENT
COII	L	: LF-8L	MICRO INDUCTOR
CAP	ACITOR	: TA	TANTALUM
		: PS	STYROL
		: PP	POLYPROPYLENE
		: PT	MYLAR-
		: MPS	METALIZED POLYESTER
∃)		: MPP	METALIZED POLYPROPYLENE
		: ALB	BIPOLAR
		: ALT	HIGH TEMPERATURE
M		: ALR	HIGH RIPPLE

Note: Les composants identifiés par une trame et par une marque A sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié.


A BOARD (COMPONENT SIDE)

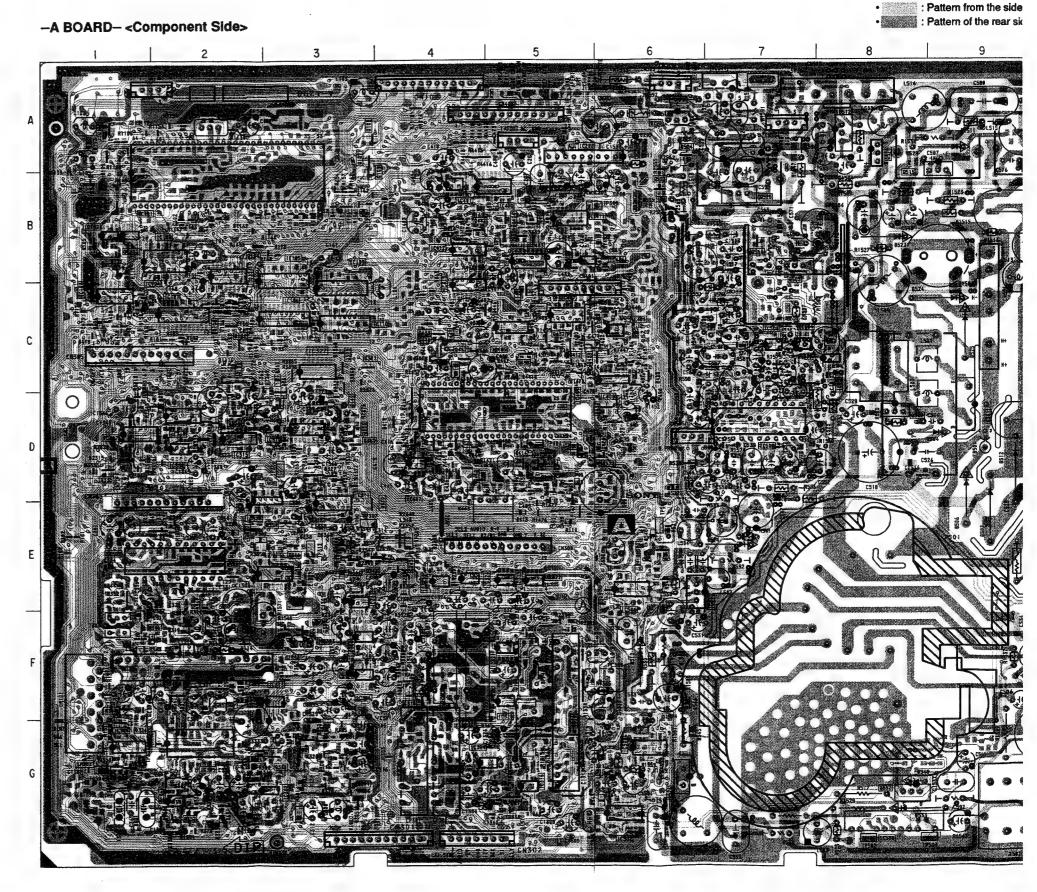

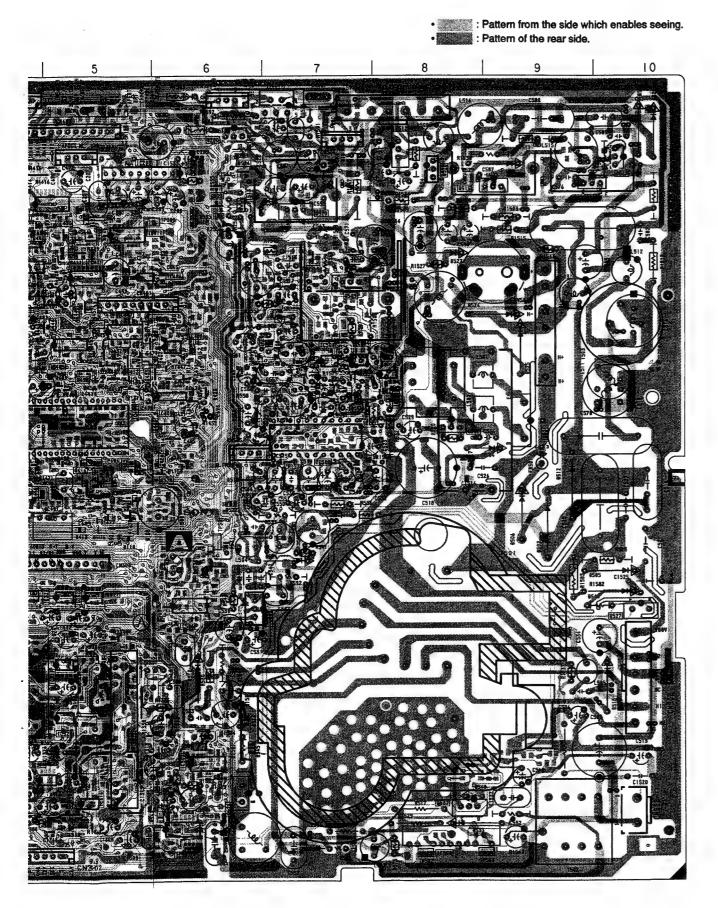

A BOARD (CONDUCTOR SIDE)

IC		Q405	C-6	D322	D-9
IC108 IC200 IC303 IC404 IC500	A-9 B-8 A-5 E-9 D-6 G-3 E-4	Q407 Q409 Q417 Q418 Q419 Q420 Q421 Q422 Q423	C-7 D-7 C-5 B-5 C-6 B-5 B-5 C-5	D323 D324 D325 D326 D333 D337 D344 D345 D346	C-9 E-9 D-8 E-9 C-9 E-8 D-8 E-7 E-7
IC507 IC511	D-4 A-4 A-3	Q424 Q428 Q431	C-5 D-6 B-5	D347 D363 D364	E-7 E-8 E-8
TRANSIS	TOR	Q434 Q439 Q444	C-5 C-6 B-5	D401 D402 D404	B-7 B-7 D-6
Q111 Q113 Q114 Q200 Q201 Q301 Q302 Q303 Q305 Q306 Q307	A	Q448 Q500 Q501 Q502 Q503 Q505 Q506 Q507 Q508 Q509 Q510 Q511 Q512 Q513 Q514 Q515 Q516 Q517 Q516 Q520 Q522 Q525 Q526 Q527 Q528 Q529 Q530 Q531 Q532 Q2501	992235545454545454545454545454565565	D405 D407 D410 D411 D421 D422 D425 D427 D500 D501 D502 D503 D504 D506 D507 D508 D509 D510 D511 D512 D513 D514 D515 D516 D517 D518 D519 D523 D524 D525	B D C B C C C B G G E D D E E G F G F E D E E F F E E C A C C
Q334 Q336	F-9 E-10	DIO		D526 D527	B-4 B-3
Q338 Q339 Q345 Q349 Q350 Q351 Q352 Q355 Q361 Q363 Q364 Q367	C-8 8 9 8 8 5 8 9 8 E-D D D F F G D E-8	D101 D102 D103 D107 D111 D115 D116 D200 D301 D303 D304 D307	B-10 B-9 B-9 B-9 B-9 G-2 A-4 G-8 F-7 G-7 G-8	D528 D529 D530 D531 D532 D533 D534 D536 D542 D546 D547 D548	A-1 A-1 B-4 B-4 B-4 B-4 B-1 B-1 B-1 B-1 B-1 B-1 B-1 B-1 B-1 B-1
Q368 Q369 Q375	E-8 E-8 D-8	D309 D310 D311	G-8 G-8 G-9	VARI/ RESIS	
Q401 Q402 Q403	B-6 B-6 B-6	D315 D317 D320	E-8 D-9 D-9	RV501	B-2

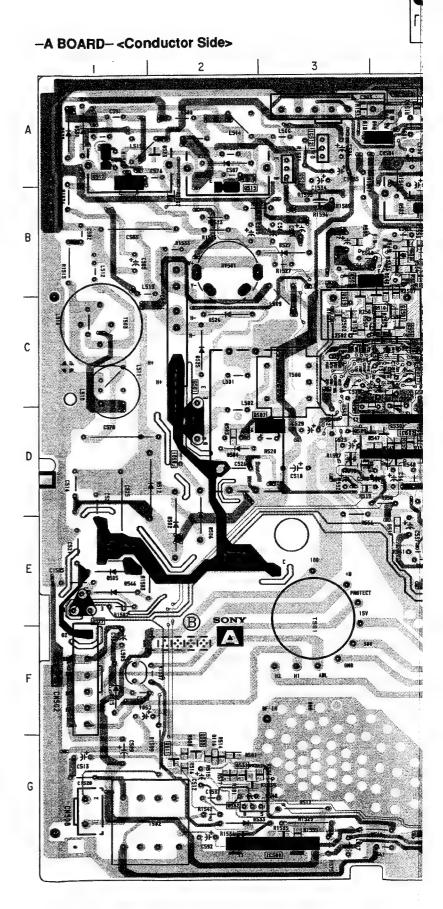

A BOARD (CONDUCTOR SIDE)


Q401 Q402 Q403	Q368 Q369 Q375 Q401	Q336 Q338 Q339 Q345 Q349 Q351 Q351 Q352 Q355 Q361 Q363 Q364	Q333 Q334	Q101 Q111 Q113 Q114 Q200 Q201 Q301 Q302 Q303 Q305 Q306 Q307 Q309 Q310 Q312 Q318 Q319 Q321 Q322 Q322 Q323 Q325 Q326 Q327 Q328 Q329 Q329 Q329 Q329	TRANS	IC108 IC200 IC303 IC404 IC500 IC505 IC507 IC511 IC512	IC101
B-6 B-6	E-8 E-8 D-8 B-6	E-10 C-8 D-8 D-8 D-8 D-8 D-8 D-8 D-8 F-5 F-9 D-8 E-9	D-9 F-9	A-9 10 A-7 8 A-5 8 10 G-8 7 8 8 8 7 7 8 6 10 8 F-6 9 9 9 9 10 10 10 10 10 10 10 10 10 10 10 10 10		B-8 A-5 E-9 D-6 G-3 E-4 D-4 A-4 A-3	; A-9
D315 D317 D320	D309 D310 D311	D101 D102 D103 D107 D111 D115 D116 D200 D301 D303 D304 D307	DIO	Q449 Q444 Q444 Q500 Q501 Q502 Q503 Q506 Q506 Q507 Q508 Q509 Q510 Q511 Q512 Q513 Q514 Q515 Q516 Q517 Q519 Q520 Q522 Q525 Q526 Q527 Q528 Q529 Q530 Q531 Q531 Q532 Q531 Q532 Q532	Q434 Q439	Q417 Q418 Q419 Q420 Q421 Q422 Q423 Q424 Q428 Q431	Q405 Q407 Q409 Q417
E-8 D-9 D-9	G-8 G-8 G-9	B-10 B-9 B-9 B-9 B-9 G-2 A-4 G-8 F-7 G-7 G-8		\$\#\#\#\#\#\#\\$\#\#\\$\#\#\\$\#\#\#\#\#\#	C-5 C-6	B-5 6 6 B-5 5 5 6 B-5 B-5 B-5	C-6 C-7 D-7 C-5
RV501	RESI	D527 D528 D529 D530 D531 D532 D533 D534 D536 D542 D546 D547 D548	D525 D526	D404 D405 D407 D410 D411 D421 D422 D425 D427 D500 D501 D502 D503 D504 D505 D506 D507 D508 D509 D510 D511 D512 D513 D514 D515 D516 D517 D518 D519 D523 D524	D401 D402	D326 D333 D337 D344 D345 D346 D347 D363 D364	D322 D323 D324 D325
D-2	ABLE STOR B-2	B-3 A-1 A-2 A-1 B-4 B-4 G-2 B-4 A-5 B-4 E-1 D-4 G-2	C-2 B-4 B-3	\$\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	B-7 B-7	E-9 C-9 E-8 D-8 E-7 E-7 E-7 E-8 E-8	D-9 C-9 E-9 D-8





NOTE:


The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

Pattern from the side which enables seeing.
 Pattern of the rear side.

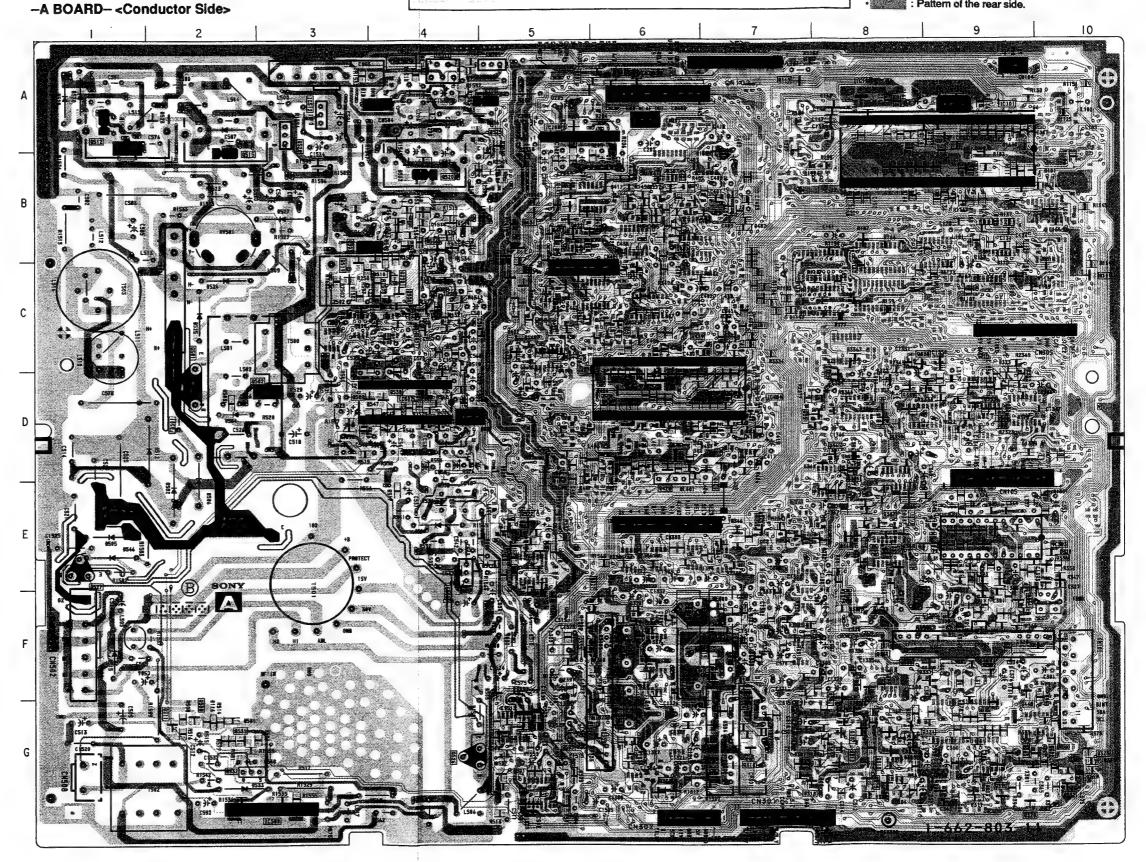

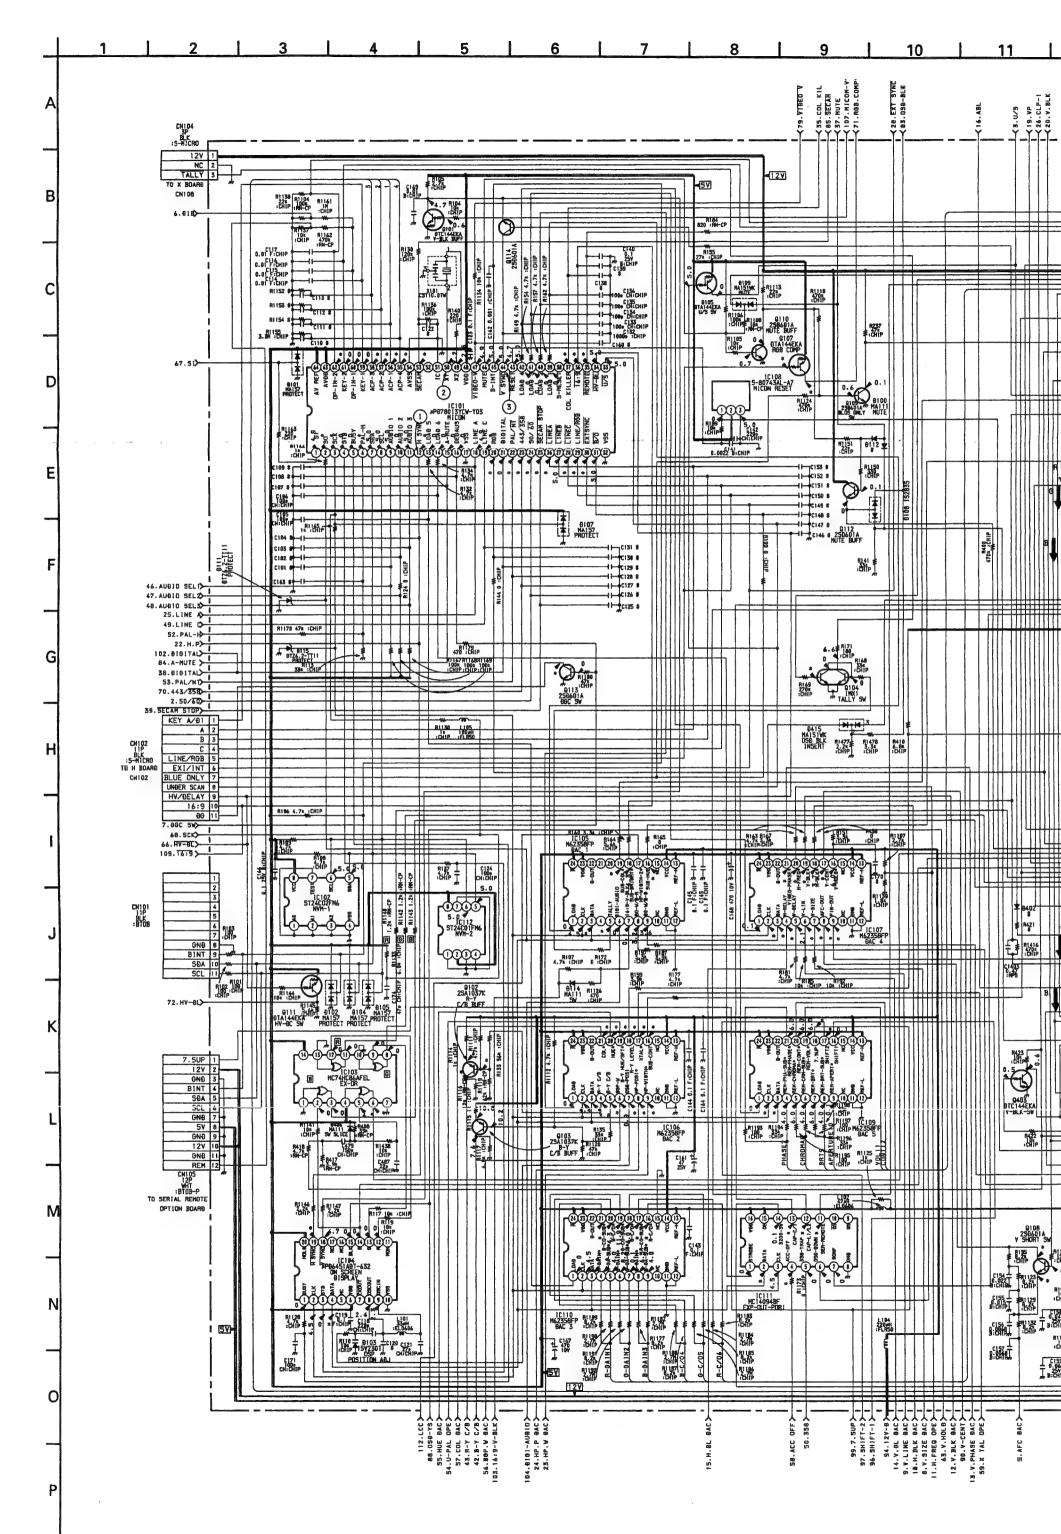

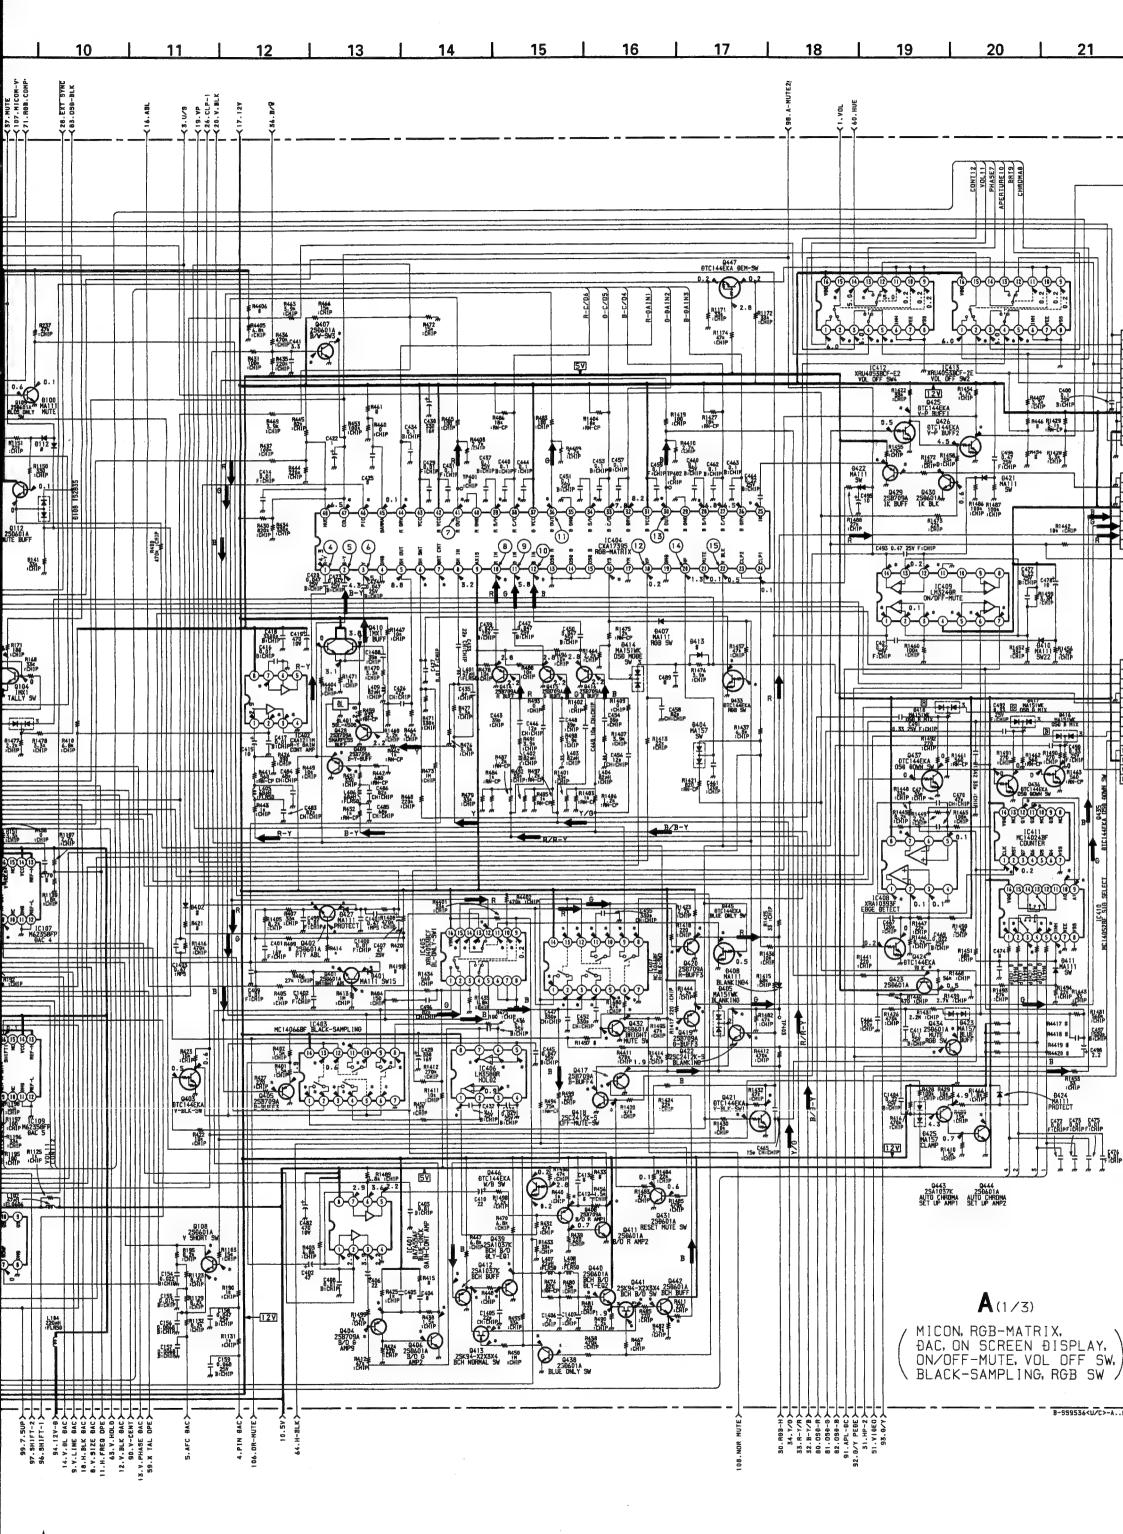

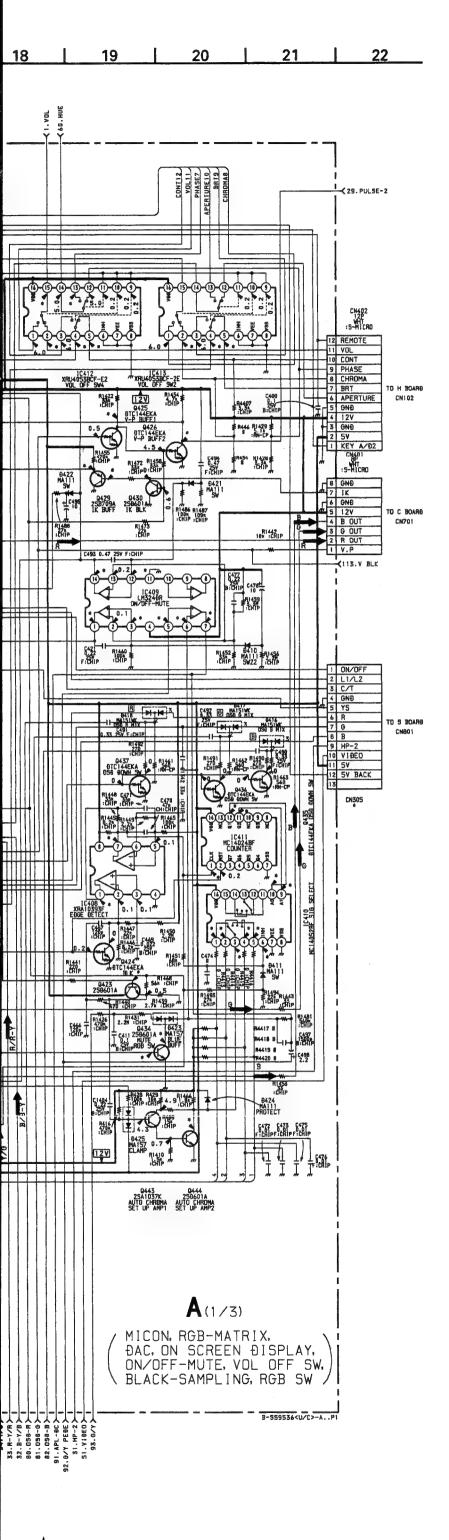

• A BOARD WAVEFORMS

· A BOARD WAVE	runivi3	
1	②	3
	<i>///</i>	
4.3 Vp-p(H)	5.6 Vp-p (10MHz)	4.8 Vp-p (V)
PAL 0.3 Vp-p (H) SECAN 0.32 Vp-p (H)	(4) 1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-	5
5 -24 Muy Muy 0.42 Vp-p (H) NT9C4.43 0.38 Vp-p (H)	5 -4/Ml/4/Ml/4, 5-41860 0.45 Vp-p (H)	6 PAL 57 Vp-p (H) SECAM 0.45 Vp-p (H)
(6) (1) (1) (1) (1) (1) (1) (1) (1) (1) (1	PAL 2.4 Vp-p(H) SECAM 2.3 Vp-p(H)	TSC3.58 2.1 Vp-p(H) NTSC4.43 2.2 Vp-p(H)
3-V1060 2.4 Vp-p (H)	② 	(B) AMALOO, 200 p - p (H)
ANALOG ROB O. 6 Vp-p (H)	AMALOG POS 0.6 Vp-p (H)	PAL 2.6 Vp-p (H) SECAM 2.5 Vp-p (H)
MTSC3.58 2.4 Vp-p (H) 2.5 Vp-p (H)	5-VIDEO (H)	MALOC FOR 3. 0 Vp-p (H)
12 4.6 Vp-p (V)	PAL 1 . 8 Vp - p (H) SECAM 1 . 9 Vp - p (. H)	MTSC3.58 Vp-p (H) MTSC4.7 Vp-p (H)
э-v1 <u>0e0</u> ур-р (Н)	(3) 	3.7 Vp-p(H)

A BOARD (1/3) * MARK LIST

3.6 Vp-p (V)

	PVM-20M4U/E/A	PVM-20M2U/E
R414	10k : CHIP	0 : CHIP
		# : Not Used

A BOARD (1/3) * MARK

C101	A BOARD (1/3) * MARK								
0						S-VIDE			
⊕ 3,4 35 35 35 35 36 ⊕ 0 0 0 0 0 0 ⊕ 0 0 0 0 0 0 ⊕ 49 50 0 0 0 0 ⊕ 50 50 0 0 0 0 ⊕ 50 50 0 0 0 0 ⊕ 50 50 50 0 0 0 ⊕ 50 50 50 50 50 0 ⊕ 50 50 50 50 50 49 ⊕ 50 50 50 50 50 49 ⊕ 50 50 50 50 50 49 ⊕ 50 50 50 50 50 39 ⊕ 40 40 46 50 39 ⊕ 40 40 46 50 39 ⊕ 40 34 36 37 35 ⊕ 40 34 36 37 33 ⊕ 05 09 10 08 31 ⊕ 30 25 26 23 38 ⊕ 40 40 40 40 40 22 ⊕ 316 30 29 32 33 ⊕ 36 30 29 32 23 ⊕ 36 30 29 32 23 ⊕ 36 30 29 32 23 ⊕ 35 35 35 35 35 35 ⊕ 40 40 40 40 40 22 ⊕ 23 23 22 22 20 ⊕ 315 35 35 35 35 35 ⊕ 54 54 54 54 54 ⊕ 52 27 27 26 28 ⊕ 54 54 54 54 54 ⊕ 52 27 27 26 28 ⊕ 54 54 54 54 54 ⊕ 25 27 70 70 70 70 ⊕ 24 46 21 22 21 ⊕ 25 27 70 70 70 70 ⊕ 24 46 21 22 21 ⊕ 25 27 70 70 70 70 ⊕ 24 46 21 22 21 ⊕ 25 27 27 28 28 ⊕ 26 36 31 19 90 10 ⊕ 27 46 45 45 44 ⊕ 28 28 28 28 28 28 ⊕ 30 30 30 30 30 30 ⊕ 36 36 36 48 36 32 ⊕ 27 27 70 70 70 70 ⊕ 28 28 28 28 28 28 ⊕ 30 30 30 30 30 30 ⊕ 36 36 36 36 36 36 36	3	4.5	4.6	4.5	4.4	2.0 4.4			
⊕ 0 0 0 0 0 0 0 0 0	(6)	4.1	3.4	0	0.1				
⊕ 4.99 5.00 0		0	0			4.8 0			
	₫			Ö					
\$\frac{\text{\$\text{\$\frac{\text{\$\frac{9}{\text{\$\text{\$\text{\$\frac{9}{\$\text{\$\te	8	0	5.0	0	0	0			
9 50 50 50 50 50 9 9 50 50 50 50 50 50 9 42 41 46 50 30 9 40 40 46 50 30 9 40 40 46 50 30 9 40 34 36 37 38 9 40 34 36 37 38 9 30 25 26 23 38 9 30 25 26 23 38 9 30 25 26 23 38 9 30 25 26 23 38 9 30 25 26 23 38 9 30 25 26 23 38 9 30 25 26 23 38 9 30 25 26 23 38 9 30 25 26 23 38 9 30 25 32 32 22 22 0 0 0 0 0 0 0 0 35 35 35 35 35 35 0 0 0 0 0 0 0 0 23 23 22 22 20 0 0 0 0 0 0 0 0 0 54 54 54 54 54 54 0 54 54 54 54 54 54 0 24 24 24 24 24 0 7.9 7.9 7.9 7.9 7.7 0 51 51 51 51 51 51 0 0 31 31 26 31 27 0 24 24 46 21 22 21 0 0 0 0 105 105 105 0 0 31 31 26 31 27 0 28 28 28 28 28 28 0 29 29 29 29 29 29 0 29 29 29 29 29 29 0 29 29 29 29 29 29 0 29 29 29 29 29 29 0 29 29 29 29 29 29 0 20 23 23 23 22 22 0 0 0 0 0 0 0 0 0					5.0	4.9			
■ 42	3	5.0	5.0	5.0	5.0	4.9 5.0			
⊕ 0.3	■ 58	4.2	4.1	4.6	5.0	3.9			
\$\begin{array}{c c c c c c c c c c c c c c c c c c c	Ø	0.3	4.4	0.1	0.7	0.1			
● 30 25 26 26 23 38 9	49	4.0	3.4	3.6	3.7	3.9			
■ 40 40 40 40 29	•	3.0	2.5	2.6	2.3	3.8			
CIOH	•	4.0	4.0	4.0	4.0	3.9 2.9			
Cities C	IC104 @	2.3	2.3	2.2	2.2	2.0			
⊕ 2.6 2.7 2.7 2.6 2.8 9.5 5.4 5.5 6.5	IC105 3	2.3	2.3	2.2	2.2	0			
Citie	- 6	2.6	2.7	2.7	2.6	2.8			
⊕ 5.4 5.4 5.4 2.4 2.4 2.4 2.4 2.4 2.6 ⊕ ⊕ 7.8 7.8 7.6 7.7 9.5 ⊕ ⊕ 9.5 1.5 1.5 1.5 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 ⊕ 9.0 1.0 0.0 2.2 2.2 2.2 1.0 ⊕ 9.0 2.2 2.2 2.2 9.0 2.2 2.2 2.2 2.2 2.2 2.2 2.2 2.2 2.2 2.2	IC106 (3)	2.3	2.3	2.2	2.2				
⊕ 5.1 5.1 5.1 5.1 5.0 ⊕ 0.1 10.5 10.5 10.5 ⊕ 0.1 10.5 10.5 10.5 ⊕ 0.1 10.5 10.5 10.5 ⊕ 0.1 10.5 10.5 10.5 ⊕ 0.1 10.5 10.5 10.5 ⊕ 0.3 1.3 1.2 2.2 2.1 ⊕ 0.3 6.3 6.3 11.9 9.0 10. ⊕ 0.6 3.6 3.1 19.9 9.0 10. ⊕ 0.8 1.8 0.4 0.3 24. ⊕ 0.8 1.8 0.4 0.3 24. ⊕ 0.2 2.3 2.3 2.2 0. ⊕ 2.3 2.3 2.2 0. ⊕ 2.8 2.8 2.8 2.8 2.8 2.3 ⊕ 1.5 1.4 1.4 1.4 2.3 ⊕ 2.6 2.6 2.6 2.6 2.6 2.9 ⊕ 2.6 2.6 2.6 2.8 2.9 ⊕ 2.6 2.6 2.6 2.8 2.9 ⊕ 2.6 2.6 2.8 2.8 2.9 ⊕ 3.2 3.2 3.2 5.4 5.4 5.4 ⊕ 1.3 3.2 3.2 5.4 5.4 5.4 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 1.9 11.9 11.9 ⊕ 1.9 11.9 11.9 11.9 ⊕ 1.9 11.9 11.9 11.9 ⊕ 0.7 7.9 7.9 7.8 ⊕ 5.8 5.8 5.8 5.8 6.2 ⊕ 1.1 1.1 1.1 1.1 1.1 ⊕ 0.2 0.3 0.3 0.3 0.3 0.3 ⊕ 0.2 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 □ 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5	0	2.4	2.4	2.4	2.4	0.5			
□ 31 31 26 31 27 □ 24 46 21 22 21 □ 63 63 11 9 9.0 11 □ 9 36 36 48 36 43 □ 08 18 04 03 42 □ 18 04 03 23 23 22 20 □ 28 28 28 28 28 33 □ 15 1.4 1.4 1.4 23 □ 29 29 2.9 2.9 2.9 □ 26 26 26 26 26 26 □ 29 2.9 2.9 2.9 2.9 □ 26 26 26 28 28 28 □ 32 32 54 54 54 □ 26 36 53 61 61 60 □ 19 11 9 11 9 11 9 □ 11 9 11 9 11 9 □ 11 9 11 9 11 9 □ 11 9 11 9 11 9 □ 11 9 11 9 11 9 □ 11 9 11 9 11 9 □ 11 9 11 9 11 9 □ 11 9 11 9 11 9 □ 0 3 3 3 3 3 3 □ 0 0 7.9 7.9 7.9 7.9 □ 0 0 7.9 7.9 7.9 7.9 □ 0 0 0 0 0 0 0 □ 0 0 0 0 0 0 □ 0 0 0 0 0 0 0 □ 0 0 0 0 0 0 0 □ 0 0 0 0 0 0 0 □ 0 0 0 0 0 0 0 □ 0 0 0 0 0 0 0 □ 0 0 0 0 0 0 0 □ 0 0 0 0 0 0 0 □ 0 0 0 0 0 0 0 0 0	(D)	5.1	5.1	5.1	5.1	4.0			
⊕ 6.3 6.3 11.9 9.0 10. ⊕ 3.6 3.6 4.8 3.6 4.8 ⊕ 0.8 1.8 0.4 0.3 2.4 ⊕ 0.8 4.5 4.5 4.5 4.5 4.5 ⊕ 2.8 2.8 2.8 2.8 3.3 ⊕ 1.5 1.4 <td>0</td> <td>3.1</td> <td>3.1</td> <td>2.6</td> <td>3.1</td> <td></td>	0	3.1	3.1	2.6	3.1				
(□010	(3)	6.3	6.3	11.9	9.0	10.7			
C107	0	0.8	1.8	0.4	0.3	4.3 2.4			
⊕ 2.8 2.8 2.8 3.3 ⊕ 1.5 1.4 1.4 1.4 2.3 ⊕ 2.9 2.1 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.9 1.1.	1C107 ②	4.6 2.3	4.5 2.3	4.5 2.2	4.5 0	4.4 2.1			
⊕ 2.9	(4)	2.8 1.5	2.8 1.4	2.8	2.8	3.3 2.3			
● 2.9 2.9 2.9 2.9 2.8 2.8 2.8 ● 3.2 3.2 5.4 5.4 5.4 5.4 5.4 5.4 5.4 5.4 5.4 5.4	①	2.9 2.6	2.9 2.6	2.9	2.9				
⊕ 3.2 3.2 5.4 5.3 ⊕ 4.5 4.6 5.0 5.0 3.7 ⊕ 6.3 6.3 6.1 6.1 6.1 6.1 ⊕ 6.3 6.3 6.1 6.1 6.1 4.5 4.5 4.5 4.5 4.4 4.4 4.5 4.5 4.5 4.4 4.5 4.5 4.5 4.4 4.4 4.4 4.5 4.5 4.5 4.4 4.5 4.5 4.5 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.5 4.5 4.4 4.4 4.5 4.5 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.5 4.4 4.4 4.4 4.5 4.4 4.4 4.4 4.5 4.4 4.5 4.4 4.5 4.4 4.5 4.5 4.5 4.5 4.5 4.5 4.5 <th< td=""><td>(9)</td><td>2.9 2.6</td><td>2.9 2.6</td><td>2.9 2.8</td><td>2.9</td><td>2.6</td></th<>	(9)	2.9 2.6	2.9 2.6	2.9 2.8	2.9	2.6			
⊕ 6.3 6.3 6.1 6.1 6.0 ⊕ 0.2.3 2.3 2.2 2.2 2.1 ⊕ 11.9 7.2	(B)	3.2	3.2	5.4	5.4	5.3			
① 2.3 2.3 2.2 2.2 2.1 ① 11.9 11.9 11.9 11.9 11.9 11.9 ① 11.9 11.9 11.0 0 0.1 IC110 2.3 2.4 2.2 2.2 2.0 ④ 7.2 <	D	6.3	6.3	6.1	6.1	6.0			
□ 11.9 11.9 0.1 0 0.1 □ □ 0.1 0 0.1 □ 0 2.3 2.4 2.2 2.2 2.0 □ 0 7.2 7.2 7.2 7.2 8.3 □ 5.8 5.8 5.8 5.8 5.8 □ 11.9 11.9 11.9 11.9 7.9 7.9 □ 0 7.9 7.9 7.9 7.8 □ 0 0 7.9 7.9 7.9 7.8 □ 0 0 3.7 3.7 3.5 3.5 3.5 □ 0 0.2 0 0.1 0.1 0.1 □ 0 0 5.0 5.0 5.0 5.0 □ 0 0 5.0 5.0 5.0 5.0 □ 0 0 0 0 0.5 5.0 5.0 □ 0 0 2.3 2.3 0 2.2 □ 0 0 2.3 2.3 0 2.2 □ 0 0 2.9 2.9 2.9 0 2.9 □ 0 0 0.8 0.8 0.8 0.8 0.8 □ 1.2 1.2 0.8 0.8 0.8 0.8 □ 1.4 1.3 0.9 0.9 0.8 □ 0 0.5 0.6 0.6 0.6 0.6 □ 0 0.5 0.6 0.6 0.6 0.6 □ 1.0 1.0 1.0 1.0 1.0 □ 0.8 0.8 0.8 0.8 0.8 □ 1.4 1.4 1.0 1.0 1.0 □ 0.9 1.0 1.0 1.0 1.0 □ 0.9 1.0 1.0 1.0 0.8 □ 0.6 0.6 0.6 0.6 0.6 □ 0.6 0.6 0.6 0.6 0.6 □ 0.7 0.8 0.8 0.8 0.8 □ 1.4 1.4 1.0 1.0 1.0 □ 0.9 1.0 1.0 1.0 0.8 □ 0.6 0.6 0.6 0.6 0.6 □ 0.6 0.6 0.6 0.6 0.6 □ 0.7 0.8 0.8 0.8 0.8 □ 1.4 1.4 1.0 1.0 1.0 □ 0.9 1.0 1.0 1.0 1.0 □ 0.9 1.0 1.0 1.0 1.0 □ 0.9 1.0 1.0 1.0 1.0 □ 0.9 1.0 1.0 1.0 1.0 □ 0.9 1.0 1.0 1.0 1.0 □ 0.8 0.8 0.8 0.8 0.8 □ 1.4 1.3 1.2 1.1 1.2 □ 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0.8 0	3	2.3	2.3	2.2	2.2				
∅ 7.2 7.2 7.2 8.3 ∅ 5.8 5.8 5.8 5.8 5.8 ∅ 11.9 11.9 11.9 7.9 7.8 ∅ 0 7.9 7.9 7.9 7.8 ∅ 0 7.9 7.9 7.8 3.5 3.5 IC111 0.3 0.3 0.3 0.3 0.3 0.3 0.0 ∅ 0.5 5.0 5.0 5.0 5.0 0 0 0 0 5.0 5.0 5.0 5.0 5.0 0 0 0 2.3 2.3 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 2.2 0 0 0 0 0 0 0 0 </td <td>100</td> <td>11.9</td> <td>11.9</td> <td>0.1</td> <td>0</td> <td></td>	100	11.9	11.9	0.1	0				
⊕ 11.9 11.9 11.9 7.8 7.8 ⊕ 3.7 3.7 3.5 3.5 3.5 3.5 IC111 ⊕ 0.3 0.3 0.3 0.3 0.3 0.3 ⊕ 0.2 0 0.1 0.1 0.1 ⊕ 0.50 5.0 5.0 5.0 5.0 ⊕ 0.50 5.0 6.0 <t< td=""><td>(</td><td>7.2</td><td>7.2</td><td>7.2</td><td>7.2</td><td>8.3</td></t<>	(7.2	7.2	7.2	7.2	8.3			
○ 3.7 3.7 3.5	1	11.9	11.9	11.9	11.9	7.8			
⊕ 0.2 0 0.1 0.1 0.1 ⊕ 0 5.0 5.0 5.0 0 ⊕ 5.0 5.0 5.0 0 ⊕ 5.0 5.0 5.0 0 ⊕ 0 2.5 5.0 0 ⊕ 0 2.3 2.9 3.0 3.0 ⊕ 0 2.9 3.0 2.2 3.0 2.0 2.0 6.0 6.0 6.0 6.0 6.0 6.0 6.0 6.0 6.0 6.0 6.0 6.0 6.0	•	3.7	3.7	3.5	3.5	7.8 3.5			
(□ 5.0	0	0.2	0	0.1	0.1	0.1			
CAO2	0	5.0	5.0	5.0	5.0	0			
CAO3	IC402 ② ③	3.1	3.9 2.3	2.9	3.0 0	3.0 2.2			
② 1.2 1.2 0.8 0.8 1.2 ③ 1.4 1.3 0.9 0.9 0.9 ⑤ 0.6 0.5 0.6 0.6 0.6 ⑤ 0.5 0.6 0.6 0.6 0.6 ⑥ 1.0 1.0 1.0 1.0 1.0 1.0 0.0 0.6 ⑥ 1.4 1.4 1.0 1.0 1.0 0.0 1.2 0.0 0.6 <td>IC403 ①</td> <td>8.0</td> <td>0.8</td> <td>0.8</td> <td>O.B</td> <td>2.9 0.8</td>	IC403 ①	8.0	0.8	0.8	O.B	2.9 0.8			
(♣) 0.8 0.8 0.9 0.9 0.9 0.8 (♣) 0.6 0.6 0.5 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6	3	1.2	1.3	0.8 0.9	0.8 0.9	1.2			
(๑) 0.5 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6	4	0.8	0.8	0.9	0.9	0.8			
● 1.6 1.5 1.1 1.1 1.4 1.4 1.0 1.0 1.2 1.0 0.8 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6 0.6	(6)	0.5	0.6	0.6	0.6	0.6			
① 0.9 1.0 1.0 1.0 0.8 ① 0.6 0.6 0.6 0.6 0.6 0.6 ① 4.9 4.9 4.9 4.9 4.9 4.7 ① 5.6 5.6 5.6 5.6 5.6 5.6 ① 5.6 5.6 5.6 5.6 5.6 5.6 ① 0.0 0.0 0.0 0.0 0.0 ③ 3.8 4.0 4.1 4.2 4.0 ④ 7.1 6.6 8.0 8.0 7.7 ⑤ 1.4 1.3 1.2 1.1 1.2 ④ 7.8 7.8 7.7 7.8 8.0 ⑤ 6.9 7.1 7.8 7.7 7.8 8.0 ⑥ 1.2 1.2 1.0 1.0 1.0 ⑥ 1.2 1.2 1.0 1.0 1.0 ① 1.2 1.2 0.9 0.1.0 ⑥ 1.4 1.3 1.0 0.1.2 ④ 7.2 7.2 7.2 7.2 7.2 6.9 ④ 6.6 6.6 6.6 6.6 6.5 5.5 ⑥ 1.4 1.3 1.0 0.1.2 ⑥ 1.4 1.3 1.0 0.1.2 ⑥ 1.4 1.3 1.0 0.1.2 ⑥ 1.4 1.3 1.0 0.1.2 ⑥ 1.4 1.3 1.0 0.1.2 ⑥ 1.4 1.4 1.3 1.0 0.1.2 ⑥ 1.4 1.4 1.3 1.0 0.1.2 ⑥ 1.5 1.1 1.3 1.0 ⑥ 1.1 1.2 1.2 1.9 0.9 0.1.1 ⑥ 1.1 1.2 1.2 1.9 0.9 0.1.1 ⑥ 1.2 1.2 0.9 0.1.1 ⑥ 1.4 1.3 1.0 0.1.2 ⑥ 1.5 0.5 0.6 1.0 0.3 ⑥ 1.2 1.2 0.9 0.1.1 ⑥ 1.4 1.3 1.0 0.1.2 ⑥ 1.5 1.1 1.3 1.0 ⑥ 1.5 1.1 1.3 1.0 ⑥ 1.5 0.5 0.6 1.0 0.3 ⑥ 1.0 0.9 1.3 1.3 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.3 ⑥ 1.4 1.3 1.0 1.3 1.3 ⑥ 1.2 1.2 0.8 1.1 1.2 ⑥ 1.4 1.3 1.0 1.3 1.3 ⑥ 1.4 1.3 1.0 1.3 1.3 ⑥ 1.2 1.2 0.9 0.3 ⑥ 1.1 1.2 1.2 0.8 1.1 1.2 ⑥ 1.4 1.3 1.0 1.3 1.3 ⑥ 0.5 0.5 0.6 1.3 0.3 ⑥ 1.0 0.9 1.3 1.3 ⑥ 1.0 0.9 1.0 1.0 0.8 ⑥ 1.0 0.9 1.0 1.0 0.8 ⑥ 1.0 0.9 1.0 1.0 0.8 ⑥ 1.0 0.9 1.0 1.0 0.8 ⑥ 1.0 0.9 1.0 1.0 0.8 ⑥ 1.0 0.9 1.0 1.0 0.8 ⑥ 1.0 0.9 1.0 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.3 ⑥ 0.5 0.5 0.6 1.3 0.3 ① 0.5 0.5 0.6 0.6 1.3 0.3 ② 0.8 0 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 0.9 0.9 ⑥ 1.0 0.9 0.9 0.9 0.9 0.9 0.9 0.9 0.9 0.9 0	(9)	1.6	1.5	1,1	1.1	1.4			
CA04	0	0.9	1.0	1.0	1.0	0.8			
● 5.6 5.6 5.6 5.6 5.6 5.6 ● 0 5.6 5.6 5.6 5.6 5.6 5.6 ● 0 0 0.7	IC404 (B)	3.0 4.9	3.0	3.0	3.0	4.5			
⊕ 0 0.7 0 0 0 0 0 0 0 0 0 3.8 4.0 4.1 4.2 4.0 ⊕ 7.1 6.6 8.0 8.0 8.0 7.7 ⊕ 1.4 1.3 1.2 1.1 1.2 ⊕ 7.0 7.3 8.1 7.8 7.8 7.8 7.8 7.8 7.8 7.7 7.8 8.0 6.9 7.1 7.8 7.7 7.8 8.0 1.4 1.3 1.2 1.1 1.2 ⊕ 7.2 7.2 7.2 7.2 7.2 7.2 7.2 7.2 7.2 7.2		5.6	5.6	5.6	5.6	5.6 5.6			
⊕ 7.1 6.6 8.0 8.0 7.7 ⊕ 1.4 1.3 1.2 1.1 1.2 ⊕ 1.4 1.3 1.2 1.1 1.2 ⊕ 1.4 1.3 1.2 1.1 1.2 ⊕ 7.8 7.8 7.7 7.8 8.0 ⊕ 7.8 7.7 7.8 7.7 7.8 8.0 ⊕ 6.9 7.1 7.8 7.7 7.8 8.0 ⊕ 7.2 7.2 7.2 7.2 7.2 7.2 7.2 8.3 ⊕ 7.2 7.2 7.2 7.2 7.2 5.9 9.0 1.1 1.3 1.4 1.3 1.0 1.2 1.3 1.4 1.3 1.0 0 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2	00	0	0.1	0	0	0			
⊕ 7.0 7.3 8.1 7.8 7.8 ⊕ 1.4 1.3 1.2 1.1 1.2 ⊕ 7.8 7.8 7.7 7.8 8.0 ⊕ 7.8 7.7 7.8 8.0 ⊕ 7.2 7.2 7.2 7.2 7.2 8.3 ⊕ 7.2 7.2 7.2 7.2 7.2 5.9 9.9 ⊕ 6.6 6.6 6.6 6.6 6.6 6.6 6.6 5.5 5.1 ICAOS ① 1.6 1.5 1.1 1.3 1.4 1.4 0.9 0 1.2 ① 1.4 1.4 0.9 0 1.1 1.3 1.4 ① 1.2 1.2 0.9 0 1.1 1.2 ① 1.3 1.3 1.0 0 1.2 ① 0.5 0.5 0.6 1.0 0.3 ① 1.2	(b)	7.1	6.6	8.0	8.0	7.7			
● 7.8 7.8 7.7 7.8 8.0 ● 6.9 7.1 7.8 7.7 7.6 ● 1.2 1.2 1.0 1.0 1.2 ● 7.2 7.2 7.2 7.2 7.2 7.2 ● 6.6 6.6 6.6 6.6 6.6 6.6 5.5 IC405 ① 1.6 1.5 1.1 1.3 1.4 ② 1.2 1.2 0.9 0 1.7 ④ 1.4 1.3 1.0 0 1.2 ④ 1.3 1.3 1.0 0 1.2 ④ 1.3 1.3 1.0 0 1.2 ④ 0.5 0.5 0.6 1.3 0.3 ④ 1.2 1.2 0.8 1.1 1.2 ④ 1.4 1.3 1.0 1.3 1.3 ④ 1.4 1.3 1.0 1.3 <t< td=""><td>9</td><td>7.0</td><td>7.3</td><td>8.1</td><td>7.8</td><td>7.8</td></t<>	9	7.0	7.3	8.1	7.8	7.8			
⊕ 1.2 1.2 1.0 1.0 1.0 1.2 ⊕ 7.2 7.2 7.2 8.3 ⊕ 7.2 7.2 7.2 7.2 5.9 ⊕ 6.6 6.6 6.6 6.6 6.6 5.5 5.5 6.5 5.5 5.5	3	7.8	7.8	7.7	7.8	8.0			
★ 7.2 7.2 7.2 7.2 5.9 ★ 6.6 6.6 6.6 6.6 6.6 5.5 IC405 ① 1.6 1.5 1.1 1.3 1.4 ② 1.4 1.4 0.9 0 1.7 ④ 1.4 1.3 1.0 0 1.2 ④ 1.4 1.3 1.0 0 1.2 ⑤ 0.5 0.5 0.6 1.0 0.3 ⑥ 0.5 0.5 0.6 1.3 0.3 ④ 1.2 1.2 0.8 1.1 1.2 ④ 1.4 1.3 0.9 1.3 1.3 ④ 1.4 1.3 1.0 1.3 1.2 ⑤ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.4 1.3 1.0 1.3 1.2 ⑥ 1.0 0.9 1.0 1.0 0.8 <th< td=""><td>0</td><td>1.2</td><td>1.2</td><td>1.0</td><td>1.0</td><td>7.6</td></th<>	0	1.2	1.2	1.0	1.0	7.6			
⊕ 6.6 6.6 6.6 5.5 IC405 ① 1.6 1.5 1.1 1.3 1.4 ② 1.4 1.4 0.9 0 1.7 ③ 1.2 1.2 0.9 0 1.1 ④ 1.3 1.3 1.0 0 1.2 ④ 0.5 0.5 0.6 1.0 0.3 ④ 0.5 0.5 0.6 1.0 1.3 ④ 1.4 1.3 0.9 1.3 1.3 □ 0.5 0.5 0.6 1.0 1.3 □ 1.2 1.2 0.8 1.1 1.2 ⑤ 1.4 1.3 0.9 1.3 1.3 □ 1.4 1.3 1.0 0 1.3 1.3 □ 1.4 1.3 1.0 1.1 1.2 □ 1.4 1.3 1.0 1.3 1.3 □ 1.5 1.4 1.3 1.0 1.3 1.2 □ 1.4 1.3 1.0 1.3 1.3 □ 1.5 1.4 1.3 1.0 1.3 1.2 □ 1.4 1.3 1.0 1.3 1.2 □ 1.4 1.3 1.0 1.3 1.2 □ 1.4 1.3 1.0 1.3 1.2 □ 1.4 1.3 1.0 1.3 1.2 □ 1.4 1.3 1.0 1.3 1.2 □ 1.4 1.3 1.0 1.3 1.2 □ 1.4 1.3 1.0 1.3 1.2 □ 0.8 0 0.9 0.9 0.9 0.8 □ 1.0 1.0 1.0 1.1 1.1 0.8 □ 1.0 1.0 1.0 1.1 1.1 0.8 □ 5.1 5.1 4.9 4.9 4.9 IC407 ① 1.2 1.2 0.9 1.2 1.2 ② 0.4 -0.1 0.5 0.3 0.4 ③ 1.4 1.3 1.0 1.3 1.2 ④ 0.6 0 0.7 0.5 0.5 ⑤ 2.0 1.8 2.0 2.0 2.0 □ 11.7 10.7 11.6 11.3 11.3 □ 5.5 5.5 5.5 5.5 5.5 □ 5.5 5.5 5.5 5.5 □ 1.4 1.4 1.4 1.0 1.3 1.2 □ 0.6 -0.1 0.7 0.6 0.5 □ 0.7 0.6 0.5 □ 0.1 1.4 1.3 8.3 9.9 4.1 4.2 IC408 ① 3.1 2.9 2.9 3.1 3.7 □ 4.1 3.8 3.9 4.1 4.2 IC409 ① 0 8.8 9.0 9.4 0 □ 0 0 0.6 0.4 0.3 0.3 □ 5.9 5.9 5.9 6.3 6.0 5.9 □ 5.9 5.9 5.9 6.3 6.0 5.9 □ 5.9 5.9 5.9 6.3 6.0 5.9 □ 5.9 5.9 5.9 6.3 6.0 5.9 □ 5.9 5.9 5.9 6.3 6.0 5.9 □ 5.9 5.9 5.9 6.3 6.0 5.9	€	7.2	7.2	7.2	7.2	8.3 6.9			
Q 1.4 1.4 0.9 0 1.7 ③ 1.2 1.2 0.9 0 1.1 ④ 1.4 1.3 1.0 0 1.2 ④ 1.4 1.3 1.0 0 1.2 ④ 0.5 0.5 0.6 1.0 0.3 Φ 0.5 0.5 0.6 1.3 0.3 Φ 1.2 1.2 0.8 1.1 1.2 Φ 1.4 1.3 1.0 1.3 1.2 Φ 1.4 1.3 1.0 1.3 1.2 Φ 1.0 0.9 1.0 1.0 0.8 4.8 4.8 4.8 </td <td>IC405 ①</td> <td>1.6</td> <td>1.5</td> <td>1.1</td> <td>6.6 1.3</td> <td></td>	IC405 ①	1.6	1.5	1.1	6.6 1.3				
(a) 1.4 1.3 1.0 0 1.2 (b) 1.3 1.3 1.0 0 1.2 (c) 1.3 1.3 1.0 0 1.2 (c) 1.2 (c) 1.3 1.3 1.0 0 1.2 (c) 1.2 (c) 1.3 1.3 1.3 1.0 1.2 (c) 1.2 1.2 1.2 1.2 1.2 1.3 1.3 1.3 1.3 1.3 1.4 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2 1.2	3	1.2	1.4	0.9 0.9	0	1.2			
⊕ 0.5 0.5 0.6 1.0 0.3 ⊕ 0.5 0.5 0.6 1.3 0.3 ⊕ 1.2 1.2 1.2 0.8 1.1 1.2 ⊕ 1.4 1.3 0.9 1.3 1.3 ⊕ 1.2 1.2 0.8 1.2 1.2 ⊕ 1.4 1.3 1.0 1.3 1.2 € 1.4 1.3 1.0 1.3 1.2 € 0 0.9 0.9 0.9 0.8 ⊕ 1.0 0.9 1.0 1.0 0.8 ⊕ 1.0 0.9 1.0 1.0 0.8 ⊕ 1.0 0.9 1.0 1.0 0.8 ⊕ 1.0 0.9 1.0 1.0 0.8 ⊕ 1.0 0.1 1.1 1.1 0.8 ⊕ 1.0 1.1 1.1 0.8 ⊕ 0.4	(4) (5)	1.4	1.3	1.0	0	1.2			
⊕ 1.2 1.2 0.8 1.1 1.2 ⊕ 1.4 1.3 0.9 1.3 1.3 ⊕ 1.2 1.2 0.8 1.2 1.2 ⊕ 1.4 1.3 1.0 1.3 1.2 ⊕ 1.4 1.3 1.0 1.3 1.2 IC406 ⊕ 4.8 5.1 4.8 4.8 4.8 ⊕ 0.8 0 0.9 0.9 0.9 0.8 ⊕ 1.0 0.9 1.0 1.0 0.8 ⊕ 1.0 1.0 1.0 0.8 ⊕ 1.0 1.0 1.0 0.8 ⊕ 1.0 1.0 1.0 0.8 ⊕ 1.0 1.0 1.1 1.1 0.8 ⊕ 5.1 5.1 4.9 4.9 4.9 4.9 4.9 LC407 ⊕ 1.2 1.2 0.9 1.2 1.2 1.2	0	0.5 0.5	0.5 0.5	0.6 0.6	1.0	0.3			
⊕ 1.2 1.2 0.8 1.2 1.2 ⊕ 1.4 1.3 1.0 1.3 1.2 ⊕ 1.4 1.3 1.0 1.3 1.2 ⊕ 1.0 4.8 4.8 4.8 4.8 ⊕ 0.8 0 0.9 0.9 0.9 0.8 ⊕ 1.0 0.9 1.0 1.0 0.8 4.9 4.9 4.9 4.9 4.9 4.9 4.9 4.9 4.9 1.2 1.2 1.2 0.9 1.2 1.2 1.2 0.9 1.2 1.2 1.2 0.9 1.2 1.2 1.2 0.9 1.2 1.2 0.9 1.2 1.2 0.9 1.2 1.2 0.0 0.5 0.3 0.4 0.3 0.4 0.1 0.3 0.4 0.1 0.3 1.2 0.0 0.2 0.3 0.4 0.3 0.4 0.3 0.3 0.4 0.3 0.3	0	1.2	1.2	0.8	1.1	1.2			
1C406	0	1.2	1.2	0.8	1.2	1.2			
\$\begin{array}{c c c c c c c c c c c c c c c c c c c	IC406 ① ③	4.8 0.8	5.1 0	4.8	4.8	4.8 0.8			
⊕ 5.1 5.1 4.9 4.9 4.9 4.9 IC407 ⊕ 1.2 1.2 0.9 1.2 1.2 ⊕ 0.4 -0.1 0.5 0.3 0.4 ⊕ 0.6 0 0.7 0.5 0.5 ⑤ 2.0 1.8 2.0 2.0 2.0 ⑥ 11.7 10.7 11.6 11.3 11.7 ⑥ 5.5 5.5 5.5 5.5 5.5 ⑩ 1.4 1.4 1.0 1.3 1.2 ⑩ 1.4 1.4 1.0 1.3 1.2 ⑩ 1.4 1.4 1.0 1.3 1.2 ⑩ 2.0 1.7 2.0 2.0 2.0 ⑩ 2.0 1.7 2.0 2.0 2.0 ⑩ 2.0 1.7 2.0 2.0 2.0 ऻ 2.0 1.7 2.0 2.0 2.0	(5)	1.0	0.9	1.0	1.0	0.8 0.8			
① 0.4 -0.1 0.5 0.3 0.4 ③ 1.4 1.3 1.0 1.3 1.2 ④ 0.6 0 0.7 0.5 0.5 ⑤ 20 1.8 2.0 2.0 2.0 ⑥ 11.7 10.7 11.6 11.3 11.7 ⑥ 5.5 5.5 5.5 5.5 5.5 5.5 ④ 1.4 1.4 1.4 1.0 1.3 1.2 ① 0.6 -0.1 0.7 0.6 0.5 ④ 2.0 1.7 2.0 2.0 2.0 ⑥ 1.4 1.4 1.4 1.0 1.3 1.2 ① 0.8 -0.1 0.7 0.6 0.5 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 2.0 1.7 2.0 2.0 2.0 ⑥ 5.9 5.9 6.3 6.0 5.9 ⑥ 5.9 5.9 6.3 6.0 5.9 ⑥ 5.9 5.9 6.3 6.0 5.9 ⑥ 5.9 5.9 6.3 6.0 5.9	0	5.1	5.1	4.9	4.9	4.9			
⊕ 0.6 0 0.7 0.5 0.5 ⑤ 2.0 1.8 2.0 2.0 2.0 2.0 ⑥ 11.7 10.7 11.6 11.3 11.3 11.3 11.3 11.3 11.3 11.3 11.3 12.5 5.5 <td>2</td> <td>0.4</td> <td>- 0.1</td> <td>0.5</td> <td>0.3</td> <td>0.4</td>	2	0.4	- 0.1	0.5	0.3	0.4			
(a) 11.7 10.7 11.6 11.3 11.7 (b) 5.5 5.5 5.5 5.5 5.5 5.5 5.5 5.5 5.5 5.	•	0.6	0	0.7	0.5	0.5			
 ⑤ 5.5 ⑤ 5.5 ⑤ 5.5 ⑥ 1.4 ○ 1.4 ○ 1.0 ○ 1.3 ○ 1.2 ○ 2.0 ○ 3.1 ○ 3.7 ○ 4.1 ○ 3.8 ○ 9.9 ○ 4.1 ○ 3.8 ○ 9.9 ○ 9.4 ○ 0 ○ 0.8 ○ 9.9 ○ 4.1 ○ 3.0 ○ 3.0 ○ 5.9 ○ 5.9 ○ 6.3 ○ 6.0 ○ 5.9 ○ 5.9 ○ 6.3 ○ 6.0 ○ 5.9 ○ 0.1 ○ 1.8 ○ 5.9 ○ 1.2 ○ 1.1 	6	11.7	10.7	11.6	11.3	2.0			
⊕ 1.4 1.4 1.0 1.3 1.2 ⊕ 0.6 -0.1 0.7 0.6 0.5 ⊕ 2.0 1.7 2.0 2.0 2.0 2.0 ⊕ 2.0 1.7 2.0 2.0 2.0 2.0 (C408 ⊕ 3.1 2.9 2.9 3.1 3.7 ⊕ 4.1 3.8 3.9 4.1 4.2 (C409 ⊕ 0 8.8 9.0 9.4 0.3 0.3 ⊕ 5.9 5.9 6.3 0 5.9 ⊕ 5.9 5.9 6.3 6.0 5.9 ⊕ 0.1 1.8 0.5 1.2 0.1	9	5.5	5.5	5.5	5.5	5.4 5.4			
⊕ 2.0 1.7 2.0 2.0 2.0 ⊕ 2.0 1.7 2.0 2.0 2.0 IC408 ⊕ 3.1 2.9 2.9 3.1 3.7 ⊕ 4.1 3.8 3.9 4.1 4.2 IC409 ⊕ 0 8.8 9.0 9.4 0 ⊕ 0 0.6 0.4 0.3 0.3 ⊕ 5.9 5.9 6.3 0 5.9 ⊕ 5.9 5.9 6.3 6.0 5.9 ⊕ 5.9 5.9 6.3 6.0 5.9 ⊕ 0.1 1.8 0.5 1.2 0.1	0	1.4 0.6	1.4 - 0.1	1.0 0.7	1.3 0.6	1.2 0.5			
C408 (1) 3.1 2.9 2.9 3.1 3.7 (1.408 (1) 4.1 3.8 3.9 4.1 4.2 (1.409 (1) 0 0.6 0.4 0.3 0.3 (1.408 (1) 0.5 0.5 0.5 (1.408 (1) 0.5	0	2.0 2.0	1.7	2.0 2.0	2.0 2.0	2.0			
C409 ⊕ 0 8.8 9.0 9.4 0 ⊕ 0 0.6 0.4 0.3 0.3 ⊕ 5.9 5.9 6.3 0 5.9 ⊕ 5.9 5.9 6.3 6.0 5.9 ⊕ 5.9 5.9 6.3 6.0 5.9 ⊕ 0.1 1.8 0.5 1.2 0.1	IC408 ①	3.1 4.1	2.9 3.8	2.9 3.9	3.1 4.1				
Φ 5.9 5.9 6.3 0 5.9 Φ 5.9 5.9 6.3 6.0 5.9 Φ 5.9 5.9 6.3 6.0 5.9 Φ 0.1 1.8 0.5 1.2 0.1	IC409 ①	0	8.8 0.6	9.0 · 0.4	9.4	0			
① 5.9 5.9 6.3 6.0 5.9 ② 0.1 1.8 0.5 1.2 0.1	S	5.9 5.9	5.9 5.9	6.3 6.3	6.0	5.9			
	O	5.9	5.9 1.8	6.3	6.0	5.9			
(b) 0 10.7 6.6 6.9 0	0	0	10.7	6.6	6.9				

• A BOARD WAVEFORMS

· A BOARD WAVE	FORMS	
1	② ∧ ∧	3
	<i>J V \</i>	
4.3 Vp-p(H)	5.6 Vp-p (10MHz)	4.8 Vp-p (V)
PAL 0.3 Vp-p (H)	4 +1 NTSC3.58 4.43 0.28 Vp-p (H)	5 ~ Mhy Mhy Po. 45 Vp-p (H)
SECAM 0.32 Vp-p (H)	s-v1860 0.35 Vp-p (H)	SECAM 0.5 Vp-p (H)
5 	5 - 1060 1060 0.45 Vp-p (H)	6 0.57 Vp-p(H) SECAM 0.45 Vp-p(H)
6 - 4 Vp-p (H) 5-4 Vp-p (H)	PAL 2. 4 Vp-p (H) SECAM 2. 3 Vp-p (H)	TSC3.58 Vp-p(H) NTSC4.43 Vp-p(H)
(T) (H) (H)	7 1 1 1 1 2.7 Vp-p (H)	8 MALOO ROB ANALOO ROB O . 6 Vp - p (H)
ANALOG RIGB O.6 V p - p (H)	AMALOG POB P-p (H)	PAL 2.6 Vp-p(H) SECAH 2.5 Vp-p(H)
NTSC3.58 2.4 Vp-p (H) NTSC4.43 2.5 Vp-p (H)	(1) 	1) AMALDO ROB 3.0 Vp-p(H)
12 4.6 Vp-p (V)	PAL 1 . 8 Vp-p (H) SECAM 1 . 9 Vp-p (. H)	13
(3) • • • • • • • • • • • • • • • • • • •	13 	3.7 Vp-p(H)
3.6 Vp-p (V)		

A BOARD (1/3) * MARK LIST

	PVM-20M4U/E/A	PVM-20M2U/E
R414	10k : CHIP	0 : CHIP
		# : Not Used

A BOARD (1/3) * MARK

IC101 @	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	ANALOG
			3.30	7.70		RGB
1 03		2.4 4.6	2.2 4.5	2.2	2.0	2.3 4.5
6	4.1	3.4	0	0.1	0	0
0	0	3.5 0	3.5 0	3.5	3.1 4.8	3.5
- 6		5.0	0	0	0	4.9
8		5.0 5.0	0	5.0	0	0
6	0	5.0	0	0	0	0
8	5.0	5.0	5.0	5.0	4.9 0	5.0
9		5.0	5.0	5.0 5.0	5.0	0.1
- \$9 - \$6		4.1	4.6 4.6	5.0 5.0	3.9 3.6	3.9
9	0.3	4.4	0.1	0.7	0.1	0.1
<u> </u>	4.0	3.4	4.3 3.6	4.2 3.7	4.2 3.9	4.3
9		0.9 2.5	1.0	0.8	3.1	1.9
9	3.6	3.0	2.9	3.2 4.0	3.9	4.0
IC103 ®	0.2	0	0.2	0.2	2.9 0	4.0
IC104 @	3.5	2.3 3.5	2.2 3.5	2.2 3.5	3.1	2.3 3.5
IC105 (3)		0.1	0.1	0	11.8	2.3
6	2.6	2.7 5.4	2.7 5.4	2.6 5.4	2.8	2.8 8.1
IC106 (3)	2.3	2.3	2.2	2.2	2.1	2.3
<u> </u>	2.4	5.4 2.4	5.4 2.4	5.4 2.4	4.1 0.6	5.4 2.4
(4)	7.8 5.1	7.8 5.1	7.6 5.1	7.7 5.1	5.5 4.0	7.8
	3.1	10.5	10.5	10.5 3.1	10.9	10.5 2.5
99	2.4	4.6 6.3	2.1	2.2	2.1	3.2
0	3.6	3.6	11.9 4.8	9.0 3.6	10.7 4.3	9.5
1C107 ②	0.8 4.6	1.8 4.5	0.4 4.5	0.3 4.5	2.4	3.1 4.5
3	2.3	2.3 2.8	2.2 2.8	0 2.8	2.1 3.3	0 2.8
6	1.5	1.4	1.4	1.4	2.3	1.4
0	2.6	2.6	2.6	2.6	2.9	2.6
0	2.6	2.6	2.9	2.9	2.6 2.8	2.9 2.8
19	3.2 4.5	3.2 4.6	5.4	5.4 5.0	5.3 3.7	5.4
IC109 (2)	6.3	6.3 4.5	6.1 4.5	4.5	6.0	6.1
(D)	2.3	2.3 11.9	2.2 11.9	2.2	2.1	2.3 0.1
IC1 10 ③	11.9	11.9	0.1	0 2.2	0.1	11.8
(4)	7.2	7.2	7.2	7.2	8.3	7.2
®	5.8 11.9	5.8 11.9	5.8 11.9	5.8 11.9	6.2 7.8	5.8 11.9
Ø	3.7	7.9 3.7	7.9 3.5	7.9 3.5	7.8 3.5	7.9
IC111 @	0.3	0.3	0.3	0.3	0.1	0.3
0	5.0	5.0 5.0	5.0 5.0	5.0 5.0	0	5.0
IC402 ②	3.1	3.9 2.3	2.9	3.0	3.0	3.6
(C403 (D	2.9	2.9	2.9	0	2.2	2.2
2	1.2	1.2	0.8	0.8	1.2	0.9
	0.8	1.3 0.B	0.9	0.9	0.8	1.4
	0.6	0.5 0.6	0.6	0.6	0.6	0.6
(B)	1.6	1.0	1.0	1.0	0.8	1.1
0	0.9	1.4	1.0	1.0	1.2 0.8	1.5
(3) IC404 (6)	0.6 3.0	0.6 3.0	0.6 3.0	0.6	0	0.6
0	4.9	4.9	4.9	4.9	4.5 4.7	6.1
0	5.6 5.6	5.6 5.6	5.6 5.6	5.6 5.6	5.6 5.6	5.8 5.8
6	3.8	4.0	4.1	4.2	4.0	3.6
	7.1	6.6	8.0 1.2	8.0	7.7 1.2	7.9
9	7.0	7.3 1.3	8.1	7.8 1.1	7.8 1.2	7.8 1.5
9	7.8	7.8	7.7	7.8	8.0	7.7
•	1.2	7.1	7.8	7.7	7.6	7.6
9	7.2	7.2	7.2	7.2 7.2	8.3 6.9	7.2 7.0
(D)	6.6 1.6	6.6 1.5	6.6 1.1	6.6	5.5 1.4	0
② ③	1.4	1.4	0.9	0	1.2	1.5 1.2
(4)	1.4	1.3	1.0	0	1.2	1,4
8	0.5	0.5 0.5	0.6	1.0	0.3	0.2
6	1.2	1.2	0.6	1.3	1.2	1.3
0	1.4	1.3	0.9	1.3	1.2	1.4
(S)	1.4 4.8	1.3 5.1	1.0 4.8	1.3 4.8	4.8	1.5 5.1
(3) (S)	0.8	0.9	0.9	1.0	0.8	1.0
<u> </u>	1.0 5.1	1.0 5.1	1.1	1.1 4.9	0.8 4.9	1,1 5.1
IC407 ①	1.2 0.4	1.2	0.9	1.2	1.2	1.3
<u> </u>	1.4	1.3	1.0	1.3	1.2	0.5 1.4
(5)	0.6 2.0	1.8	2.0	0.5 2.0	0.5 2.0	0.7 2.0
(§	11.7 5.5	10.7 5.5	11.6 5.5	11.3 5.5	11.7 5.4	11.2 8.5
9	5.5 1.4	5.5 1.4	5.5 1.0	5.5 1.3	5.4 1.2	8.4 1.5
0	0.6 2.0	- 0.1	0.7	0.6	0.5	0.6
(C408 (D	2.0	1.7	2.0	2.0	2.0	2.0
0	4.1	3.8	2.9 3.9	3.1 4.1	3.7 4.2	3.4 4.1
1C409 (I)	0	0.6	9.0	9.4 0.3	0.3	7.5 1.6
6	5.9 5.9	5.9 5.9	6.3 6.3	0 6.0	5.9 5.9	5.9 5.9
0	5.9 0.1	5.9 1.8	6.3 0.5	6.0 1.2	5.9 0.1	5.9 0
•	0	10.7	6.6	6.9	0	10.7

	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	ANALO:
IC410 ①	3.8	4.0	4.0	4.0	0	3.9
2	3.0	3.1	2.4	3.1	0	4.0
3	1.3	0.7	1.4	1.6	2.3	1.5
(3.5	3.6	3.0	3.8	3.9	3.9
\$	0.6	1.3	1.1	1.1	3.1	1.7
6	4.0	4.0	4.0	3.9	0	0
®	0	2.0	1.9	1.8	2.5	1.4
•	2.0	2.3	2.3	2.0	1.8	3.0
IC411 ①	4.1	4.0	3.9	3.8	4.2	4.1
0	1.8	2.0	1.9	1.8	2.5	1.3
0	2.0	2.3	2.3	2.1	1.8	3.0
IC412 ②	0.4	0.5	0.4	0.4	5.9	0.6
(1)	8.9	8.9	8.9	8.9	8.9	8.3
<u> </u>	9.0	8.9	9.0	8.9	8.9	8.3
0	6.0 0.4	6.0	6.0	6.0	6.0	0
IC413 ②	7.9	0.5 8.0	8.0	0.4	5.9	0.5
<u> </u>	0	5.5	5.5	8.0	0	6.9
6	5.5	5.5	5.5	5.5 5.5	5.4	0
					5.4	8.6
0	3.1	3.1	3.1	3.1	0	5.1
			3.1	3.1	6.0	5.1
- 6	7.9	7.9	8.0	7.9	6.3	6.9
□102 B	10.9	10.9	10.9	10.9	10.7	10.9
c	8.1	8.1	8.1	8.1	0	8.1
E .	11.5	11.5	11.5	11.5	11.3	11.5
0104 I B	- 0.2	0	- 0.2	0	0	- 0.2
Q107 B	5.0	5.0	5.0	5.0	5.0	0.1
C C	0	0	0	0	0	5.0
0108 C	2.6	2.6	2.6	2.6	2.9	2.6
(E	2.6	2.6	2.6	2.6	2.9	2.6
0111 B	5.0	5.0	0	0	4.9	4.9
Q113 C	0.4	0.4	0	0	0.4	0.4
Q113 C	1.1	4.3	4.2	4.2	3.8	4.0
C	7.5	0.8 5.5	6.0	1.6	1.2	1.0
Ē	1.4	1.6	3.2	5.2	8.4	10.0
Q402 B	0.5	0.5	0.5	0.5	3.1	1.0
C	9.5	7.7	8.1	7.4	10.4	0.5
E	1.4	1.6	3.2	3.3		6.9
Q404 B	5.3	4.1	4.9	5.2	3.2 5.3	1.0
E	6.1	6.3	6.0	6.1	6.1	5.2 6.2
Ω405 B	1.3	1.3	1,2	1.1	1.2	1.4
Q406 B	0.7	0.7	0	0.7	0.7	0.7
С	1.6	1.5	1.0	1.5	1.4	1.6
Q407 B	0	0	0	0	0	0.6
c	6.6	6.6	6.6	6.6	5.4	0
Q408 B	5.3	4.7	4.9	5.0	5.2	5.2
E	6.0	6.2	5.9	6.1	6.0	6.1
Q409 B	1.9	1.6	1.6	1.6	1.7	1.6
E	2.0	2.2	2.2	2.2	2.3	2.2
0411 C	1.4	1,4	0.9	1.3	1.3	1.4
Q412 B	1.3	1.3	1.0	1.3	1.1	1.4
Ε	2.0	1.9	1.7	1.9	1.8	2.0
Q413 G	2.0	- 15.1	1.6	- 2.2	1.8	- 2.1
D	2.0	1.9	- 4.3	0	2.2	2.0
S	2.0	1.9	1.7	1.9	1.8	2.0
Q417 B	1.4	1.4	1.2	1.2	1.2	1.4
Q418 C	2.1	2.1	1.7	1.7	1.7	2.0
O419 B	1.4	1.4	1.2	1.1	1.2	1.5
E E	2.0	1.9	1.7	1.7	1.8	2.0
Q420 B	1.2	1.2	1.0	1.0	1.2	1.3
0422 E	1.8	1.8	1.6	1.6	1.8	1.9
0422 C	2.1	2.1	1.7	1.7	1.8	2.0
O423 B	0.5	0.3	0.4	0.4	0.4	0.2
	15					
0425 C	4.5	4.5	4.5	4.5	4.7	4.5
0426 C	0.8	8.0	0.7	4.5 0.7	4.7 0.7	4.5 0
0426 C 0429 B	0.8 0.1	8.0 8.0	0.7	4.5 0.7 0.4	4.7 0.7 0.1	4.5 0 0.1
0426 C 0429 B E	0.8 0.1 0	0.8 0.8 - 2.3	0.7 0.4 - 1.2	4.5 0.7 0.4 - 1.2	4.7 0.7 0.1 0.4	4.5 0 0.1 0.4
0426 C 0429 B E 0432 B	0.8 0.1 0 - 0.3	0.8 0.8 - 2.3 - 3.8	0.7 0.4 - 1.2 - 3.4	4.5 0.7 0.4 - 1.2 - 2.7	4.7 0.7 0.1 0.4 - 0.1	4.5 0 0.1 0.4 - 3.9
0426 C 0429 B E 0432 B C	0.8 0.1 0 - 0.3 11.9	0.8 0.8 - 2.3 - 3.8 11.6	0.7 0.4 - 1.2 - 3.4 11.8	4.5 0.7 0.4 - 1.2 - 2.7 11.8	4.7 0.7 0.1 0.4 - 0.1 12.0	4.5 0 0.1 0.4 - 3.9 11.6
O426 C O429 B E O432 B C O433 B	0.8 0.1 0 - 0.3 11.9	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1	0.7 0.4 - 1.2 - 3.4 11.8	4.5 0.7 0.4 - 1.2 - 2.7 11.8	4.7 0.7 0.1 0.4 - 0.1 12.0	4.5 0 0.1 0.4 - 3.9 11.6 2.7
O426 C O429 B E O432 B C O433 B	0.8 0.1 0 - 0.3 11.9 0 3.0	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0	0.7 0.4 - 1.2 - 3.4 11.8 0 3.0	4.5 0.7 0.4 - 1.2 - 2.7 11.8 0 3.0	4.7 0.7 0.1 0.4 - 0.1 12.0 0 4.5	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0
O426 C O429 B E O432 B C O433 B C	0.8 0.1 0 - 0.3 11.9 0 3.0 - 0.1	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0 0	0.7 0.4 - 1.2 - 3.4 11.8 0 3.0 0	4.5 0.7 0.4 - 1.2 - 2.7 11.8 0 3.0	4.7 0.7 0.1 0.4 - 0.1 12.0 0 4.5 - 0.1	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4
O426 C O429 B E O432 B C O433 B C O433 B C	0.8 0.1 0 -0.3 11.9 0 3.0 -0.1 3.6	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0 0 4.7	0.7 0.4 -1.2 -3.4 11.8 0 3.0 0 4.5	4.5 0.7 0.4 -1.2 -2.7 11.8 0 3.0 0	4.7 0.7 0.1 0.4 - 0.1 12.0 0 4.5 - 0.1 2.9	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0
O426 C O429 B E O432 B C O433 B C O434 B C O438 B	0.8 0.1 0 -0.3 11.9 0 3.0 -0.1 3.6 -0.4	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0 0 4.7 - 2.9	0.7 0.4 -1.2 -3.4 11.8 0 3.0 0 4.5 -3.1	4.5 0.7 0.4 - 1.2 - 2.7 11.8 0 3.0 0 4.8 - 2.4	4.7 0.7 0.1 0.4 - 0.1 12.0 0 4.5 - 0.1 2.9 0	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4
O426 C O429 B E O432 B C O433 B C O434 B C O438 B C O438 B C	0.8 0.1 0 - 0.3 11.9 0 3.0 - 0.1 3.6 - 0.4 11.7	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0 0 4.7 - 2.9 11.4	0.7 0.4 - 1.2 - 3.4 11.8 0 3.0 0 4.5 - 3.1 11.7	4.5 0.7 0.4 - 1.2 - 2.7 11.8 0 3.0 0 4.8 - 2.4 11.7	4.7 0.7 0.1 0.4 - 0.1 12.0 0 4.5 - 0.1 2.9 0 11.8	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4 11.7
O426 C O429 B E O432 B C O433 B C O434 B C O438 B C O438 B	0.8 0.1 0 - 0.3 11.9 0 3.0 - 0.1 3.6 - 0.4 11.7 2.0	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0 0 4.7 - 2.9 11.4 1.9	0.7 0.4 - 1.2 - 3.4 11.8 0 3.0 0 4.5 - 3.1 11.7 1.8	4.5 0.7 0.4 - 1.2 - 2.7 11.8 0 3.0 0 4.8 - 2.4 11.7 1.7	4.7 0.7 0.1 0.4 - 0.1 12.0 0 4.5 - 0.1 2.9 0 11.8	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4 11.7 2.0
O426 C O429 B E O432 B C O433 B C O433 B C O434 B C O438 B C O438 B C O439 B	0.8 0.1 0 - 0.3 11.9 0 3.0 - 0.1 3.6 - 0.4 11.7 2.0 2.6	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0 0 4.7 - 2.9 11.4 1.9 2.5	0.7 0.4 - 1.2 - 3.4 11.8 0 3.0 0 4.5 - 3.1 11.7 1.8 2.4	4.5 0.7 0.4 - 1.2 - 2.7 11.8 0 3.0 0 4.8 - 2.4 11.7 1.7	4.7 0.7 0.1 0.4 - 0.1 12.0 0 4.5 - 0.1 2.9 0 11.6 1.8	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4 11.7 2.0 2.6
O426 C O429 B E O432 B C O433 B C O434 B C O438 B C O438 B C O439 B E O440 B	0.8 0.1 0 -0.3 11.9 0 3.0 -0.1 3.6 -0.4 11.7 2.0 2.6 2.6	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0 0 4.7 - 2.9 11.4 1.9 2.5 2.5	0.7 0.4 - 1.2 - 3.4 11.8 0 3.0 0 4.5 - 3.1 11.7 1.8 2.4 2.5	4.5 0.7 0.4 -1.2 -2.7 11.8 0 3.0 0 4.8 -2.4 11.7 2.4 2.5	4.7 0.7 0.1 0.4 - 0.1 12.0 0 4.5 - 0.1 2.9 0 11.8 0 2.4	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4 11.7 2.0 2.6 2.7
0426 C 0429 B E E 0432 B C C 0433 B C C 0434 B C C 0438 B C C 0439 B E E 0440 B 0441 G	0.8 0.1 0 - 0.3 11.9 0 3.0 - 0.1 3.6 - 0.4 11.7 2.0 2.6 2.6 - 1.1	0.8 0.8 - 2.3 - 3.8 11.6 - 0.1 3.0 0 4.7 - 2.9 11.4 1.9 2.5 - 13.0	0.7 0.4 - 1.2 - 3.4 11.8 0 3.0 0 4.5 - 3.1 11.7 1.8 2.4 2.5 1.7	4.5 0.7 0.4 -1.2 -2.7 11.8 0 3.0 0 4.8 -2.4 11.7 1.7 2.4 2.5 -4.8	4.7 0.7 0.1 0.4 0.4 0.1 12.0 0 4.5 - 0.1 2.9 0 11.6 1.8 0 2.4	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4 11.7 2.0 2.6 2.7 - 0.7
0426 C 0429 B E 0432 B C 0433 B C 0433 B C 0434 B C 0438 B C 0439 B E 0440 B 0441 G	0.8 0.1 0 -0.3 11.9 0 3.0 -0.1 3.6 -0.4 11.7 2.0 2.6 2.6 -1.1	0.8 0.8 -2.3 -3.8 11.6 -0.1 3.0 0 4.7 -2.9 11.4 1.9 2.5 -13.0 1.9	0.7 0.4 - 1.2 - 3.4 11.8 0 3.0 0 4.5 - 3.1 11.7 18 2.4 2.5 1.7 - 8.1	4.5 0.7 0.4 -1.2 -2.7 11.8 0 3.0 0 4.8 -2.4 11.7 1.7 2.4 2.5 -4.8 1.9	4.7 0.7 0.1 0.4 -0.1 12.0 0 4.5 -0.1 2.9 0 11.8 1.8 0 2.4 0	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4 11.7 2.0 2.6 2.7 - 0.7 2.0
0426 C 0429 B E 0432 B C 0433 B C 0434 B C 0438 B C 0438 B C 0439 B E 0440 B 0441 G D S	0.8 0.1 0 -0.3 11.9 0 3.0 -0.1 3.6 -0.4 11.7 2.0 2.6 -1.1 2.0 2.0	0.8 0.8 -2.3 -3.8 11.6 -0.1 3.0 0 4.7 -2.9 11.4 1.9 2.5 2.5 -13.0 1.9	0.7 0.4 -1.2 -3.4 11.8 0 3.0 0 4.5 -3.1 11.7 1.8 2.4 2.5 1.7 -8.1	4.5 0.7 0.4 -1.2 -2.7 11.8 0 3.0 0 4.8 -2.4 11.7 1.7 2.4 2.5 -4.8 1.9	4.7 0.7 0.1 0.4 -0.1 12.0 0 4.5 -0.1 2.9 0 11.8 0 2.4 0 1.8 1.8	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 - 2.4 11.7 2.0 2.6 2.7 - 0.7 2.0 2.0 2.0
0426 C 0429 B E 0432 B C 0433 B C 0433 B C 0434 B C 0438 B C 0438 B E 0440 B 0441 G D S 0442 B	0.8 0.1 0 0 -0.3 11.9 0 3.0 -0.1 3.6 -0.4 11.7 2.0 2.6 -1.1 2.0 2.6 -1.1	0.8 0.8 -2.3 -3.8 11.6 -0.1 3.0 0 4.7 -2.9 11.4 1.9 2.5 -13.0 1.9 1.9	0.7 0.4 -1.2 -3.4 11.8 0 3.0 0 4.5 -3.1 11.7 18.8 2.4 2.5 1.7 -8.1 1.6 1.1	4.5 0.7 0.4 -1.2 -2.7 11.8 0 0 4.8 -2.4 11.7 2.4 2.5 -4.8 1.9 1.9	4.7 0.7 0.1 0.4 -0.1 12.0 0 4.5 -0.1 2.9 0 11.6 1.8 0 1.8 1.1	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4 11.7 2.0 2.6 2.7 - 0.7 2.0 2.1
0426 C 0429 B E 0432 B C 0433 B C 0434 B C 0438 B C 0438 B C 0439 B E 0440 B 0441 G D S	0.8 0.1 0 -0.3 11.9 0 3.0 -0.1 3.6 -0.4 11.7 2.0 2.6 -1.1 2.0 2.0	0.8 0.8 -2.3 -3.8 11.6 -0.1 3.0 0 4.7 -2.9 11.4 1.9 2.5 2.5 -13.0 1.9	0.7 0.4 -1.2 -3.4 11.8 0 3.0 0 4.5 -3.1 11.7 1.8 2.4 2.5 1.7 -8.1	4.5 0.7 0.4 -1.2 -2.7 11.8 0 3.0 0 4.8 -2.4 11.7 1.7 2.4 2.5 -4.8 1.9	4.7 0.7 0.1 0.4 -0.1 12.0 0 4.5 -0.1 2.9 0 11.8 0 2.4 0 1.8 1.8	4.5 0 0.1 0.4 - 3.9 11.6 2.7 0 0.4 0 - 2.4 11.7 2.0 2.6 2.7 - 0.7 2.0 2.0

A BOARD (2/3) * MARK


	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	ANALOG RGB
C301 ①	2.8	0	2.8	3.0	3.0	2.3
2	2.0	0	1.8	1.7	1.7	3.5
C302 ①	2.9	2.9	2.9	0.3	2.9	2.9
\$	5.3	5.1	4.5	4.5	4.5	4.5
	10.5	8.4	0	0	0	0
C303 ®	2.3	2.6	2.2	2.2	2.6	2.8
0	0.1	4.2	0.6	0.6	0.6	0.1
<u> </u>	3.9	2.8	3.1	3.1	3.3	3.9
IC304 @	2.2	2.6	2.2	2.2	2.2	2.2
<u> </u>	9.4	0.1	9.4	9.4	9.4	9.4
	7.3	7.3	2.5	2.5	2.6	2.5
0	7.3	7.3	2.5	2.6	2.6	2.5
(4)	1.9	1.9	2.2	2.2	2.2	2.2
(3)	2.5	2.5	2.2	2.2	2.3	2.2
C305 ①	2.8	2.8	2.8	0	2.8	2.8
(4)	2.5	1.1	2.5	2.4	2.4	1.3
0	4,1	4,1	4.1	4.1	4.2	4.5
9	0.4	0.2	0	0	0	0.1
0	2.6	2.6	2.5	2.4	2.5	2.7
Ø	0	0	0.8	0.8	0.9	0.9
®	2.1	2.7	1.9	1.9		2.7
C306 ①					1.9	
-	8.1	8.1	8.1	8.1	8.1	0
② (2)	0	0	0	0.1	0.1	4.4
C309 ②	3.6	0	3.6	3.6	3.6	3.6
④	0	0	0	0	0	4.4
C310 ①	6.2	6.2	6.2	6.2	6.2	5.9
3	6.3	6.3	6.2	6.2	6.2	5.9
0	5.9	5.9	6.0	6.3	5.9	5.9
IC311 ①	0	6.2	6.2	6.2	6.2	6.2
2	6.2	6.2	6.2	6.2	6.2	5.9
•	6.2	6.3	6.3	6.2	6.2	5.9
6	3.3	3.3	2.9	2.9	2.9	0
- 0	5.9	5.9	5.9	6.2	5.8	5.9
0	0.4	0.4	0.4	0.4	0.5	0.7
C312 ②	3.6	0	3.6	3.6	3.6	3.6
(1)	0	Ō	0	12.0	0.1	4.5
IC313 ①	0	6.3	Ö	6.3	6.3	6.3
C314 ②	Ö	3.0	7.6	0	3.0	0.3
(Ö	0	0	ö	2.9	
C315 ①	0.4	0.4	0.4	0.4		0.1
(CS15 (F)	0.4				0.4	0.6
		0	0.6	0.6	0.6	0.6
9	9.4	9.3	9.3	9.2	9.3	9.4
0	2.5	2.5	2.5	2.5	2.5	7.2
	0.4	0.4	0.4	0.4	0.4	0.6
(3)	0.4	0.4	0.4	0.4	0.4	0.6
C317 @	2.0	0	2.0	2.1	2.0	12.0
6	12.0	0	12.0	12.0	12.0	12.0
(D)	10.7	10.6	10.6	10.6	10.5	10.7
(8)	9.4	9.4	9.4	9.4	9.1	9.4
C318 (5)	11.5	11.5	0	11.4	11.4	11.4
C320 ①	6.3	6.3	6.3	6.3	6.3	. 0
(2)	3.0	0	0	3.1	0	0
•	0	0	0	0	3.3	0
C321 ②	0	0.1	0.1	0	2.9	0
•	0	0	0	Ô	0.1	2.7
C322 🕲	5.8	5.9	6.0	6.3	5.9	5.9
C323 (\$)	6.2	6.3	6.2	6.2	6.2	5.9
0	0	5.6	5.6	5.6	5.6	5.6
C324 (\$)	6.2	6.2	6.2	6.2	6.2	5.9
C326 ①	5.9	5.9	6.0	6.3	5.9	5.9
②	5.9	5.9	5.9	6.2	5.8	5.9
3	5.9	5.9	5.9	6.2	5.8	5.9
5	1.7	1.9	1.6			
	2.4			1.6	2.1	2.1
<u> </u>		1.0	2.3	2.3	2.3	4.6
0	0	- 0.1	10.B	0	- 0.1	0
	6.3	6.3	6.3	6.3	6.2	5.9
(9)	6.3	6.3	6.3	6.3	6.2	5.9
100	6.3	6.3	6.2	6.2	6.2	5.9

	PAL	SECAM	NTSC	NTSC	S-VIDEO	ANALOG
IC326 🚯	6.2		3.58	4.43		RGB
0	6.2	6.2 6.2	6.2	6.2	6.2	5.9 5.9
10	6.2	6.2	6.2	6.2	6.2	5.9
IC350 ①	6.6	6.5	6.4	6.3	6.1	6.9
0	6.2	6.2	6.2	6.3	6.0	6.4
3	6.2	6.2	6.2	6.3	6.0	6.4
Q300 B	2.5	2.5	2.2	2.2	2.2	2.2
С	10.2	10.2	10.4	10.5	10.4	10.5
Ε	1.9	1.9	1.6	1.6	1.6	1.6
0301 E	B.6	8.5	8.2	8.3	8.5	9.8
Q303 E	5.7	5.7	5.7	5.7	5.5	5.7
Q304 B	6.3	6.3	6.3	6.4	6.2	6.3
Q305 B	5.7	5.7	5.7	5.7	5.5	5.7
	7.9	8.5	8.2	8.3	8.5	9.8
Q307 E	1.4	7.9	7.6	7.7	7.9	9.1
0307 E	1.4	1.4	1.1	1.2	1.4	2.7
C C	0.1	0.1	0.2	0.1		2.6
E	0.7	1.8	1.7	1.8	0.1	0
0312 C	B.2	8.2	8.6	8.3	0 8.3	1.8
0312 C	B.2	8.2	8.6	8.3	8.2	8.1
E E	8.8	8.8	9.3	9.0	8.9	8.1
0314 B	11,9	6.4	11.9	11.9	11.9	8.7 11.9
C	0	11.9	0	0	0	
0315 B	3.3	3.2	2.9	3.1	3.2	3.3
E	3.9	3.9	3.5	3.8	3.8	4.0
Q316 B	12.1	12.0	11.7	11.9	12.1	12.1
C	1.0	1.0	1.2	1.0	1.0	0.9
Q322 B	2.4	2.4	2.3	2.3	5.6	2.4
Ε	1.8	1.8	1.8	1.8	5.0	1.8
Q323 B	5.0	5.0	0	0	0	0
С	0	0	3.5	3.5	3.5	3.6
Q324 B	4.1	4.2	0	0	0	0
C	0	0	0.8	0.8	0.8	0.9
Q328 B	2.2	2.2	2.2	2.2	2.0	1.3
C	2.8	2.8	2.8	2.8	0	0
Q329 D	2.1	2.1	2.2	2.4	0	2.2
G	0	0	1.6	0	2.9	2.8
Q332 B	4.9	5.0	0	4.9	0	0
c	0	0	4.4	0	4.3	4.4
Q333 B	1.7	1.7	1.9	1.8	1.7	1,7
E	1.5	1.5	1.7	1.5	1.5	1.4
Q336 G	4.7	4.6	4.6	4.7	4.2	4.8
D	4.3	4.3	4.3	4.3	4.5	4.3
Q339 B	12.3	12.5	12.5	12.4	12.5	12.3
0347 B	0.1	4.2	0.1	0.1	0.6	0.1
C	9.4	0.1	9.4	9.4	9.4	9.4
0349 B	3.4	2.7 3.3	2.7	2.7	2.2	2.8
Q354 B	12.0	0.6	3.4	3.4	2.8	3.4
U354 B	12.0	0.6	0	0	0	-03
Q358 E	2.2	2.2	0	2.2	2.2	- 0.2 2.2
				4.4		
	6.2	6.2	6.2		61	64
0360 1	6.2	6.2	6.2 6.2	6.3	6.0	6.4
3	6.2	6.2	6.2	6.3 6.3	6.0	6.4
				6.3	6.0 5.3	6.4 3.8
3 5	6.2 1.3	6.2 4.7	6.2 2.2	6.3 6.3 4,1	6.0 5.3 5.0	6.4 3.8 0.8
3 5 Q361 B	6.2 1.3 4.9	6.2 4.7 4.9	6.2 2.2 5.0	6.3 6.3 4.1 5.0	6.0 5.3	6.4 3.8 0.8 4.9
3 5 Q361 B C	6.2 1.3 4.9 0.1	6.2 4.7 4.9 0	6.2 2.2 5.0 0	6.3 6.3 4.1 5.0	6.0 5.3 5.0 0.1	6.4 3.8 0.8
3 5 Q361 B C Q362 C	6.2 1.3 4.9 0.1 9.0	6.2 4.7 4.9 0 9.0	6.2 2.2 5.0 0 9.0	6.3 6.3 4.1 5.0 0 9.5	6.0 5.3 5.0 0.1 9.2	6.4 3.8 0.8 4.9 8.5
3 5 Q361 B C Q362 C Q364 C	6.2 1.3 4.9 0.1 9.0 3.3	6.2 4.7 4.9 0 9.0 3.3	6.2 2.2 5.0 0 9.0 2.9	6.3 6.3 4.1 5.0 0 9.5 2.9	6.0 5.3 5.0 0.1 9.2 2.8	6.4 3.8 0.8 4.9 8.5 2.9
3 5 Q361 B C Q362 C Q364 C Q365 B	6.2 1.3 4.9 0.1 9.0 3.3 0.4	6.2 4.7 4.9 0 9.0 3.3 0	6.2 2.2 5.0 0 9.0 2.9 0.3	6.3 6.3 4.1 5.0 0 9.5 2.9 0.3	6.0 5.3 5.0 0.1 9.2 2.8 0.4	6.4 3.8 0.8 4.9 8.5 2.9 0.4
3 5 0361 B C 0362 C 0364 C 0365 B 0369 B	6.2 1.3 4.9 0.1 9.0 3.3 0.4 0.8	6.2 4.7 4.9 0 9.0 3.3 0	6.2 2.2 5.0 0 9.0 2.9 0.3 0.8	6.3 6.3 4.1 5.0 0 9.5 2.9 0.3	6.0 5.3 5.0 0.1 9.2 2.8 0.4 0.9	6.4 3.8 0.8 4.9 8.5 2.9 0.4 4.9
3 5 5 C 361 B C C C C C C C C C	6.2 1.3 4.9 0.1 9.0 3.3 0.4 0.8	6.2 4.7 4.9 0 9.0 9.0 3.3 0 0.9	6.2 2.2 5.0 0 9.0 2.9 0.3 0.8	6.3 6.3 4.1 5.0 0 9.5 2.9 0.3 0.8	6.0 5.3 5.0 0.1 9.2 2.8 0.4 0.9	6.4 3.8 0.8 4.9 8.5 2.9 0.4 4.9
3 5 5 C C C C C C C C	6.2 1.3 4.9 0.1 9.0 3.3 0.4 0.8 0	6.2 4.7 4.9 0 9.0 3.3 0 0.9 0	6.2 2.2 5.0 0 9.0 2.9 0.3 0.8 0	6.3 6.3 4.1 5.0 0 9.5 2.9 0.3 0.8 0	6.0 5.3 5.0 0.1 9.2 2.8 0.4 0.9 0	6.4 3.8 0.8 4.9 8.5 2.9 0.4 4.9 4.9
3 5 5 C C C C C C C C	6.2 1.3 4.9 0.1 9.0 3.3 0.4 0.8 0 11.7	6.2 4.7 4.9 0 9.0 3.3 0 0.9 0 11.7 10.3	6.2 2.2 5.0 0 9.0 2.9 0.3 0.8 0 11.8	6.3 6.3 4.1 5.0 0 9.5 2.9 0.3 0.8 0 11.8	6.0 5.3 5.0 0.1 9.2 2.8 0.4 0.9 0 11.7	6.4 3.8 0.8 4.9 8.5 2.9 0.4 4.9 4.9 0 6.4
3 5 5 6 6 6 6 6 6 6 6	6.2 1.3 4.9 0.1 9.0 3.3 0.4 0.8 0 11.7 10.4	6.2 4.7 4.9 0 9.0 3.3 0 0.9 0 11.7 10.3	6.2 2.2 5.0 0 9.0 2.9 0.3 0.8 0 11.8 10.1	6.3 6.3 4.1 5.0 0 9.5 2.9 0.3 0.8 0 11.8 10.3	6.0 5.3 5.0 0.1 9.2 2.8 0.4 0.9 0 11.7 10.7 6.2	6.4 3.8 0.8 4.9 8.5 2.9 0.4 4.9 4.9 0 6.4 6.7
3 5 5 6 6 6 6 6 6 6 6	6.2 1.3 4.9 0.1 9.0 3.3 0.4 0.8 0 11.7 10.4 0	6.2 4.7 4.9 0 9.0 3.3 0 0.9 0 11.7 10.3 0 6.4	6.2 2.2 5.0 0 9.0 2.9 0.3 0.8 0 11.8 10.1	6.3 6.3 4.1 5.0 0 9.5 2.9 0.3 0.8 0 11.8 10.3 0 6.3	6.0 5.3 5.0 0.1 9.2 2.8 0.4 0.9 0 11.7 10.7 6.2 6.1	6.4 3.8 0.8 4.9 6.5 2.9 0.4 4.9 0 6.4 6.7


A BOARD (2/3) * MARK LIST

	PVM-20M4U/E/A	PVM-20M2U/E
C525	0.0115 2kV : PP	0.012 2kV : PP
C1524	100	# #
C1525	0.0047 2kV E	#
C1531	0.1 25V B :CHIP	#
C1532	47 25V B CHIP	#
C1534	47 25V	#
C1535	47 25V	#
C1536	0.1 :MPS	#
C1537	0.33 100V :MPS	#
CN509	3P WHT :S-MICRO	#
D544	MA111	#
D545	MATTI	#
D546	V11N	#
D548	RD16ESB2	
ICE11		#
IC511 IC512	LA6500-FA	#
L506	NJM79M12FA 1-459-087-00	# 450 404 00
L509	1-459-067-00	1-459-104-00
Q526	1-459-087-00	1-459-104-00
Q526 Q527	2SC4686A	#
Q527	2SC4686A	#
Q531	2SA1037K	#
Q532	IRF520	#
R562	47 1/4W : FPRD	22 1/4W : FPRD
R566	47k : RN-CP	27k : RN-CP
R574	47k : CHIP	#
R577	10k : CHIP	#
R581	1k : CHIP	#
R584	3.9k : CHIP	10k : CHIP
R1506	1k: CHIP	470 : CHIP
R1539	100k : CHIP	#
R1542	22 : FPRD	#
R1564	560 : RN-CP	#
R1580	27k : CHIP	#
R1581	10M 1W:RS	#
R1582	2M 1W : RS	#
R1583	470 1/2W : RF	#
R1584	9.1k : RN-CHIP	#
R1585	1.8k : CHIP	#
R1586	47k : RN-CHIP	#
R1587	2.2k : CHIP	#
R1588	2.2 : CHIP	#
R1590	10 : CHIP	#
R1591	0.47 : FPRD	#
R1592	4.7k 1/2W : FPRD	#
R1593	8.2 1/2W : FPRD	#
R1594	8.2 1W : RS	#
R1599	10k 1/2W : RC	#
R2506	150k : CHIP	120k : CHIP
	330k : CHIP	

A BOARD IC303 CXA1214P

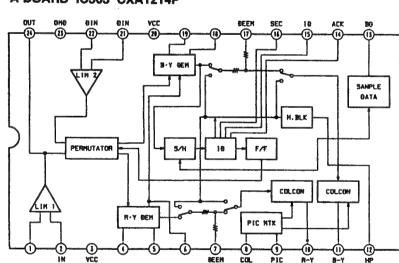



A BOARD IC305 M51279FP

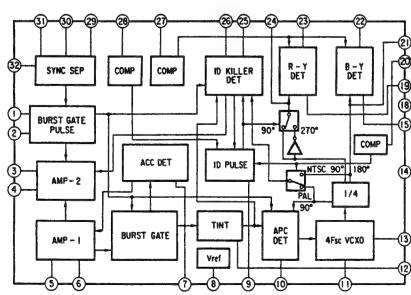



A BOARD WAVEFORMS

162		
16	10	()
1	ALT PARTY	Januar J.
1.0 Vp-p (H)	5-VIDED 0.94 Vp-p (H)	0.85 Vp-p(H)
①	(18)	()
ALES-ALES-Y		
5-V18E0 0.94 Vp-p (H)	3-VIDED 0.6 Vp-p (H)	S-VIBEO 0.6 Vp-p (H)
20	20	
A	D-14 2 11 11 11 11 11 11 11 11 11 11 11 11 1	
PAL 0.2 Vp-p (H)	NTSC3.58 0.24 Vp-p(H) NTSC4.43 0.12 Vp-p(H)	
2		60
	(2)	
PAL	SECAM	NTSC3.58. 4.43 0.24 Vp-p (H) 5-V10E0
0.27 Vp-p(H)	0.17 Vp-p(H)	U. 2/ Vp-p(H)
(5) Jume L	(3) June L	(2)
PAL 0.4 Vp-p (H)	MTSC3.58 0.37 Vp-p(H) NTSC4.43 4.0 Vp-p(H)	-yl T-b-yl
0.36 Vp-p (H)	NTSC4.43 4.0 Vp-p (H)	0.4 Vp-p(H)
3	3	29
	VVV	B-11 (MB-114)
1.9 Vp-p (H)	1.0 Vp-p (H)	0.26 Vp-p (H)
29	23	23
	D (
SECAN 0.2 Vp-p (H)	NTSC3.58.4.43 0.23 Vp-p (H)	S-VIDEO 0.18 Vp-p (H)
29	Ø	7
	mangling ar	in Mindle
5.4 Vp-p (H)	PAL 1.0 Vp-p (H)	NTSC3.58. 4.43 9-Y10E0 1.1 Vp-p(H)
②3 _ .	28 _	29
1000m	1000hm 1000hm	מחח חחחה
0.8 Vp-p (H) NTSC3.50 0.85 Vp-p (H)	MTSC4.43 0.73 Vp-p (H) s-vioeo	ANALDG RGB 0.7 Vp-p (H)
	0.9 Vp-p (H)	
(3)		3
ANALOG RGB	ANAL DIG RIGH	3-V1050
ANALOG RGB 0.7 Vp~p(H)	ANALDO RGB 0.7 Vp-p (H)	1.7 Vp-p (H)
32	③	(3) n n
		\sim
	Thomas	
ANALOG RGB	5-VIBED 1.3 Vp-p (H)	AMALOG RGB 1.4 Vp-p(H)
ANALOG RGB 1.4 Vp-p (H)		
ANALOG RGB p-p (H) 34 1.4 Vp-p (H)	5-VIDEO 1.3 Vp-p (H)	AMALOG RGB 1.4 Vp-p (H)
ANALOG RGB 1.4 Vp-p (H)	5-V10E0 1.3 Vp-p (H)	ANALOG RGB 1.4 Vp-p (H)
ANALOO RGB p-p (H)	5-VIDEO 1.3 Vp-p (H)	AMALOG RGB 1.4 Vp-p (H)
ANALOO RGB 1.4 Vp-p (H) 3 1.4 Vp-p (H) 5-vieed Vp-p (H)	S-VIÐEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H)	AMALOG RGB 1.4 Vp-p(H) 39 PAL 0.3 Vp-p(H)
ANALOG RGB 1.4 Vp-p (H) 3 1.4 Vp-p (H) 5-vieed Vp-p (H)	S-VIÐEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H)	AMALOG RGB 1.4 Vp-p(H) 39 PAL 0.3 Vp-p(H)
ANALOO ROB 1.4 Vp-p (H) 3 5-V10E0 1.3 Vp-p (H) 35	S-VIDEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 35	AMALOG RGB 1.4 Vp-p(H) 35 PAL 0.3 Vp-p(H) 35
ANALOO RGB 1.4 Vp-p (H) 3 5-V10ED 1.3 Vp-p (H) 35 SECAM 0.1 Vp-p (H)	S-VIÐEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 39 NTSC3.50 Vp-p (H)	AMALOG RGB 1.4 Vp-p(H) 39 PAL 0.3 Vp-p(H) 35 MTSC4.3 Vp-p(H)
ANALOG RGB 1.4 Vp-p (H) 34	S-VIDEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 35 NT3C3,50 Vp-p (H)	AMALOG RGB 1.4 Vp-p(H) 39 PAL 0.3 Vp-p(H) 35 MTSC4.3 Vp-p(H)
ANALOO RGB 1.4 Vp-p (H) 34	S-VIDEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 35 NTSC3.50 Vp-p (H) 36 PAL 0.3 Vp-p (H)	AMALOG RGB 1.4 Vp-p(H) 39 PAL 0.3 Vp-p(H) 39 MTSCA.3 Vp-p(H) 36 SECAM 0.1 Vp-p(H)
ANALOG RGB 1.4 Vp-p (H) 34 5-V1060 1.3 Vp-p (H) 35 SECAM 0.1 Vp-p (H)	S-VIDEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 35 NT3C3,50 Vp-p (H)	AMALOO RGB 1.4 Vp-p(H) 39 PAL 0.3 Vp-p(H) 39 NT9C4.3 Vp-p(H) 36
ANALOG RGB 1.4 Vp-p(H) 34	S-VIDEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 35 NTSC3,56 Vp-p (H) 36 PAL 0.3 Vp-p (H)	AMALOO RGB 1.4 Vp-p(H) 39 PAL 0.3 Vp-p(H) 39 MT9C4.43 Vp-p(H) 30 SECAM 0.1 Vp-p(H) 30
ANALOG RGB 1.4 Vp-p(H) 34	S-VIDEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 35 NTSC3.58 Vp-p (H) 36 PAL 0.3 Vp-p (H) 36 NTSC4.43 Vp-p (H)	AMALOG RGB 1.4 Vp-p(H) 39 PAL 0.3 Vp-p(H) 39 MTSCA.3 Vp-p(H) 36 SECAM 0.1 Vp-p(H)
ANALOG RGB 1.4 Vp-p(H) 34	S-VIDEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 35 NTSC3,56 Vp-p (H) 36 PAL 0.3 Vp-p (H)	AMALOO RGB 1.4 Vp-p (H) 39 PAL 0.3 Vp-p (H) 39 MT9C4. XI Vp-p (H) 30 SECAM 0.1 Vp-p (H) 30
ANALOG RGB 1.4 Vp-p(H) 34	S-VIBED 1.3 Vp-p (H) 34 AMALOG ROB 7.4 Vp-p (H) 35 NTSC3.50 Vp-p (H) 36 PAL 0.3 Vp-p (H) 36 NTSC4.43 Vp-p (H) 38	AMALOO RGB 1.4 Vp-p (H) 39 PAL 0.3 Vp-p (H) 39 MT9C4. XI Vp-p (H) 30 SECAM 0.1 Vp-p (H) 30
ANALOG RGB 1.4 Vp-p(H) 34 5-V10ECD 0.1 Vp-p(H) 35 5-V10ECD 0.2 Vp-p(H) 36 NTSC3.58 0.07 Vp-p(H)	S-VIDEO 1.3 Vp-p (H) 34 ANALOG ROB 1.4 Vp-p (H) 35 NTSC3.58 Vp-p (H) 36 PAL 0.3 Vp-p (H) 36 NTSC4.43 Vp-p (H)	AMALOO RGB 1.4 Vp-p (H) 39 PAL 0.3 Vp-p (H) 39 MT9C4. XI Vp-p (H) 30 SECAM 0.1 Vp-p (H) 30

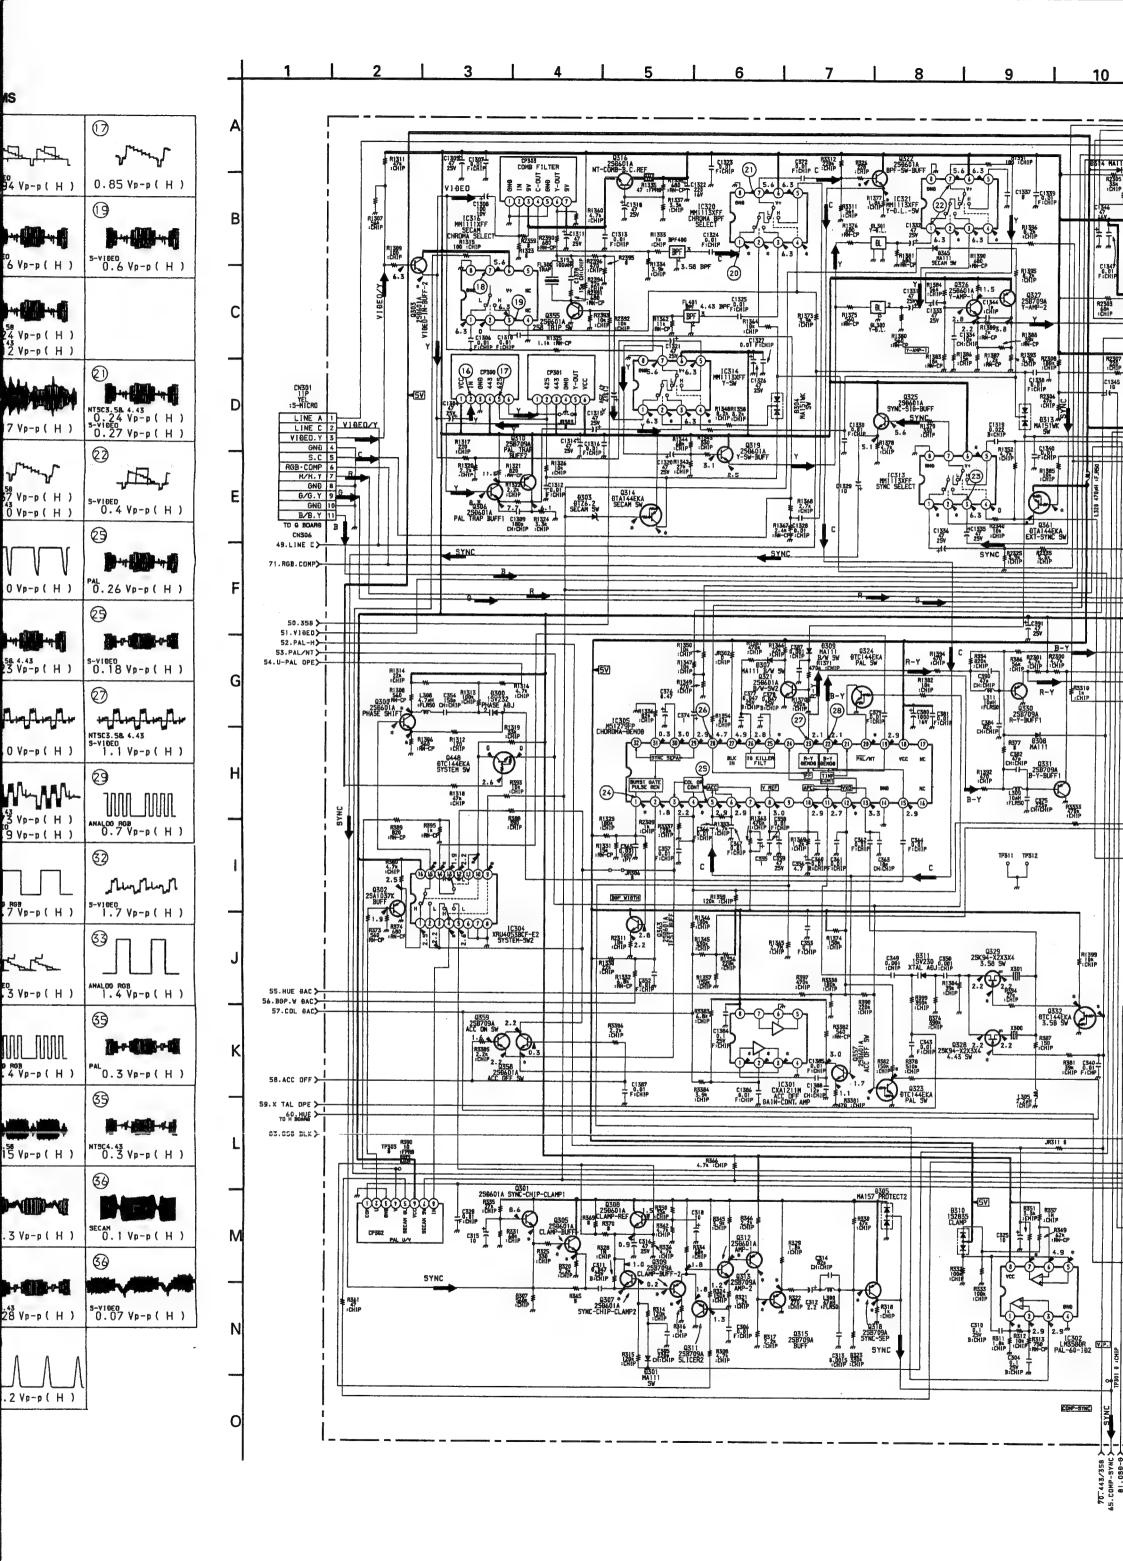

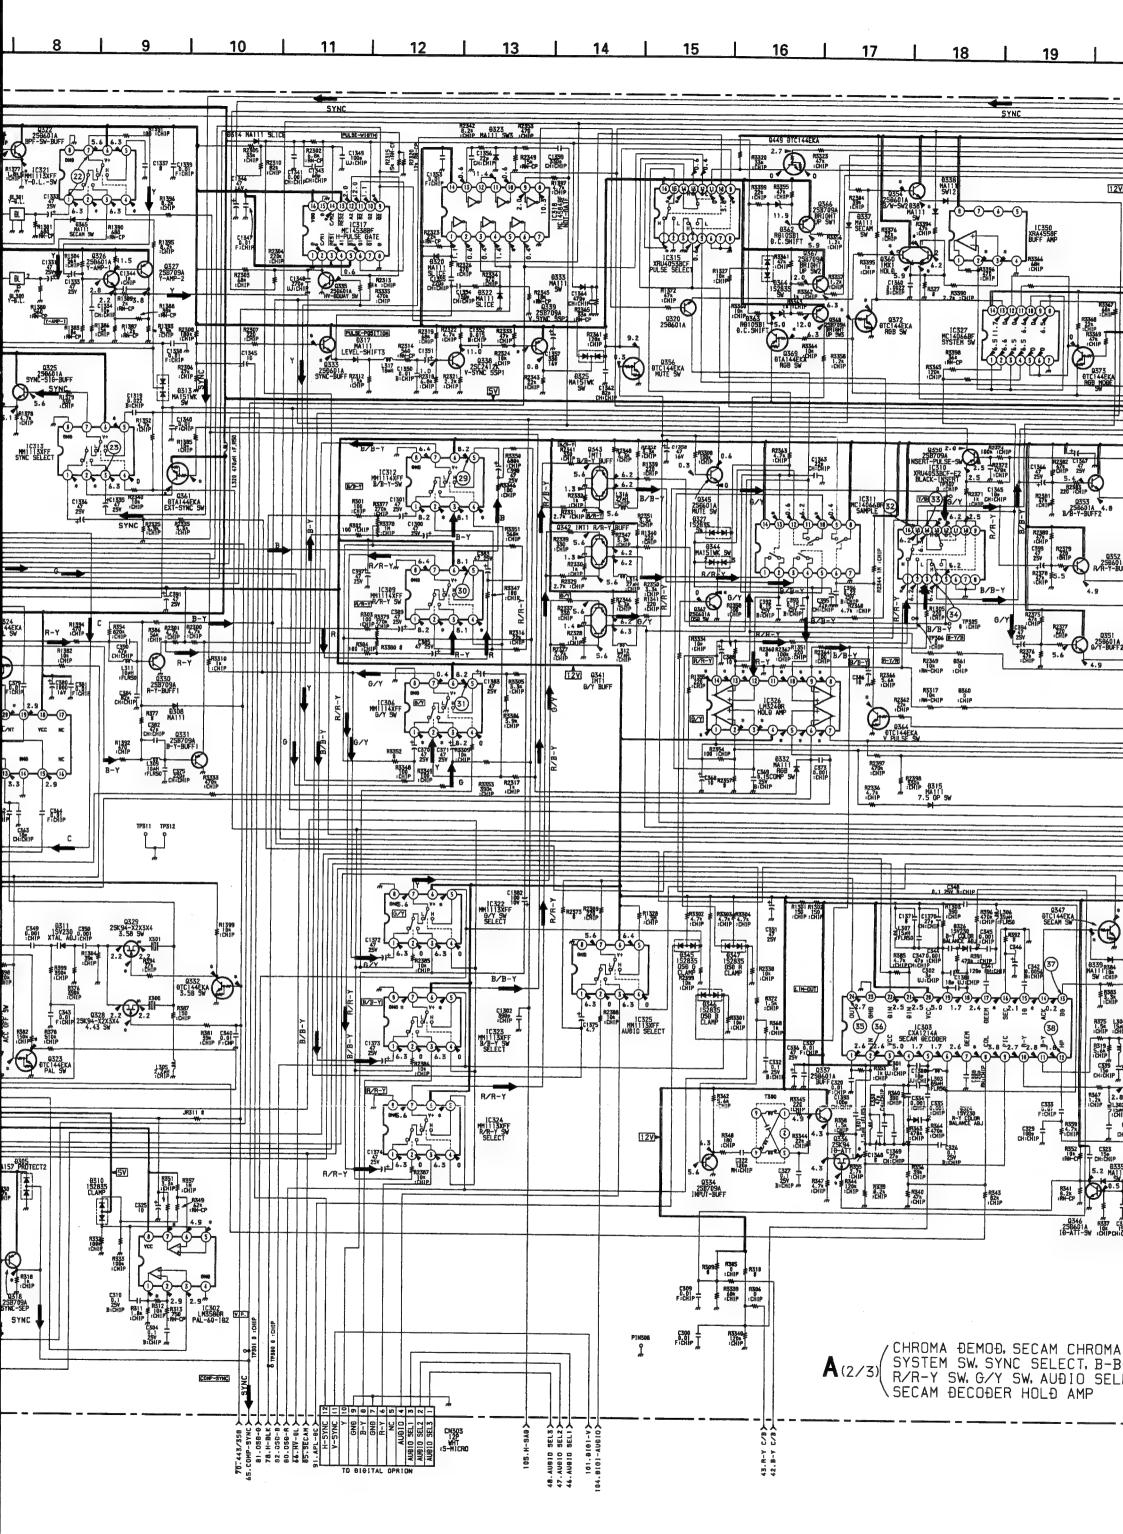


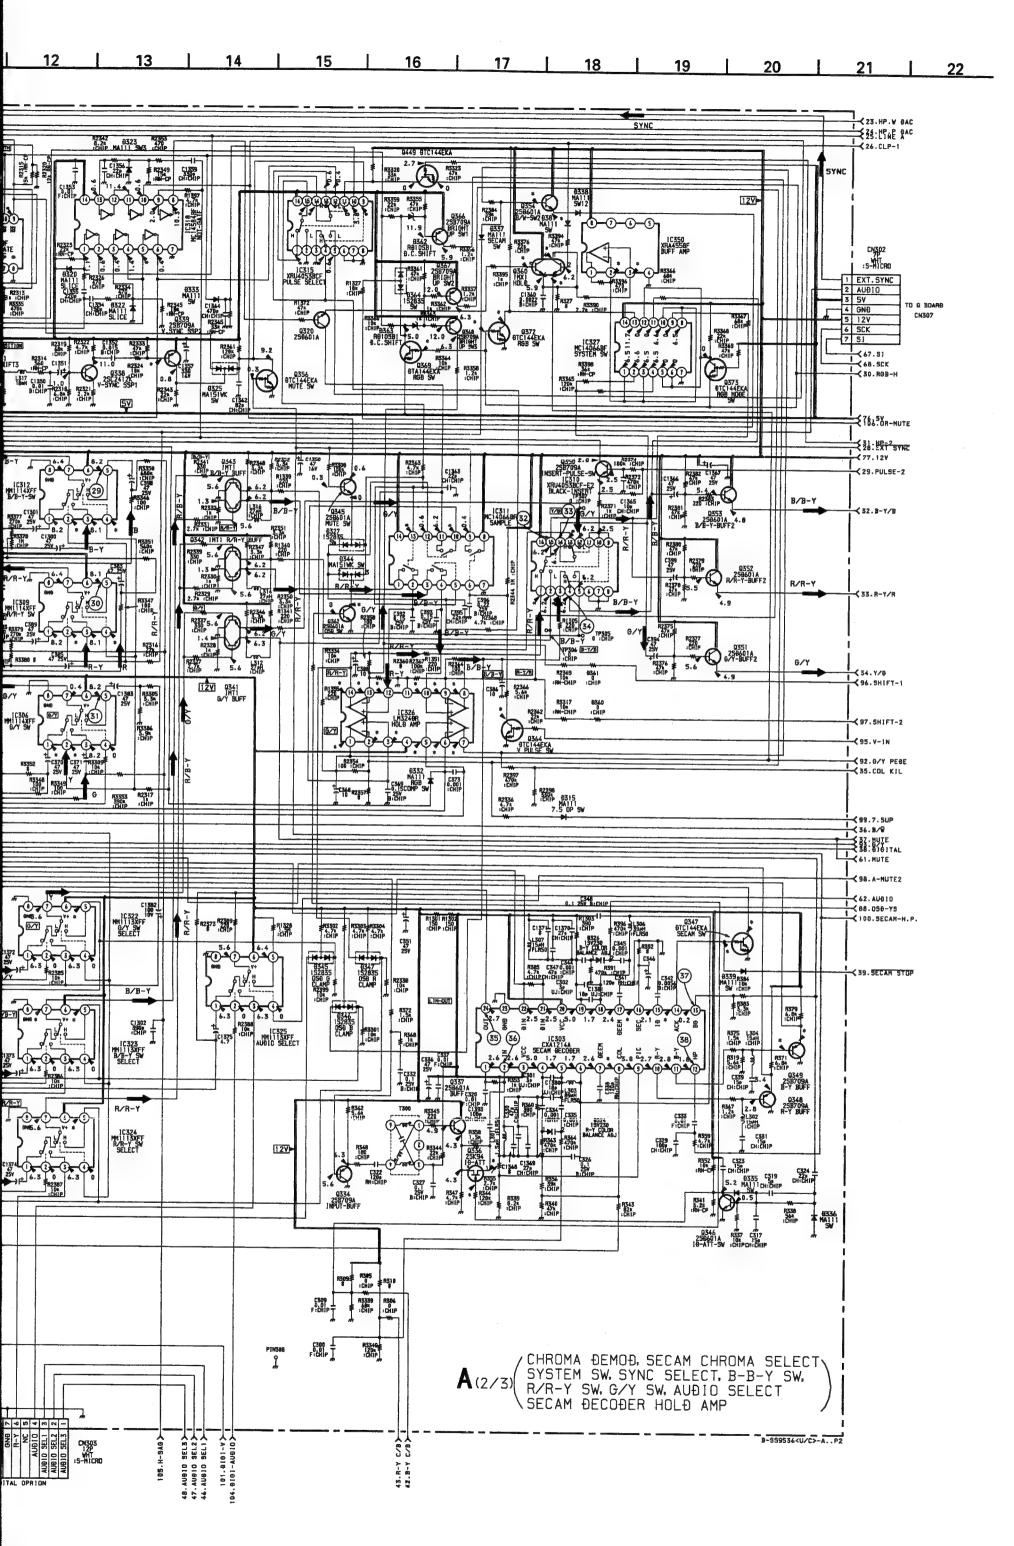

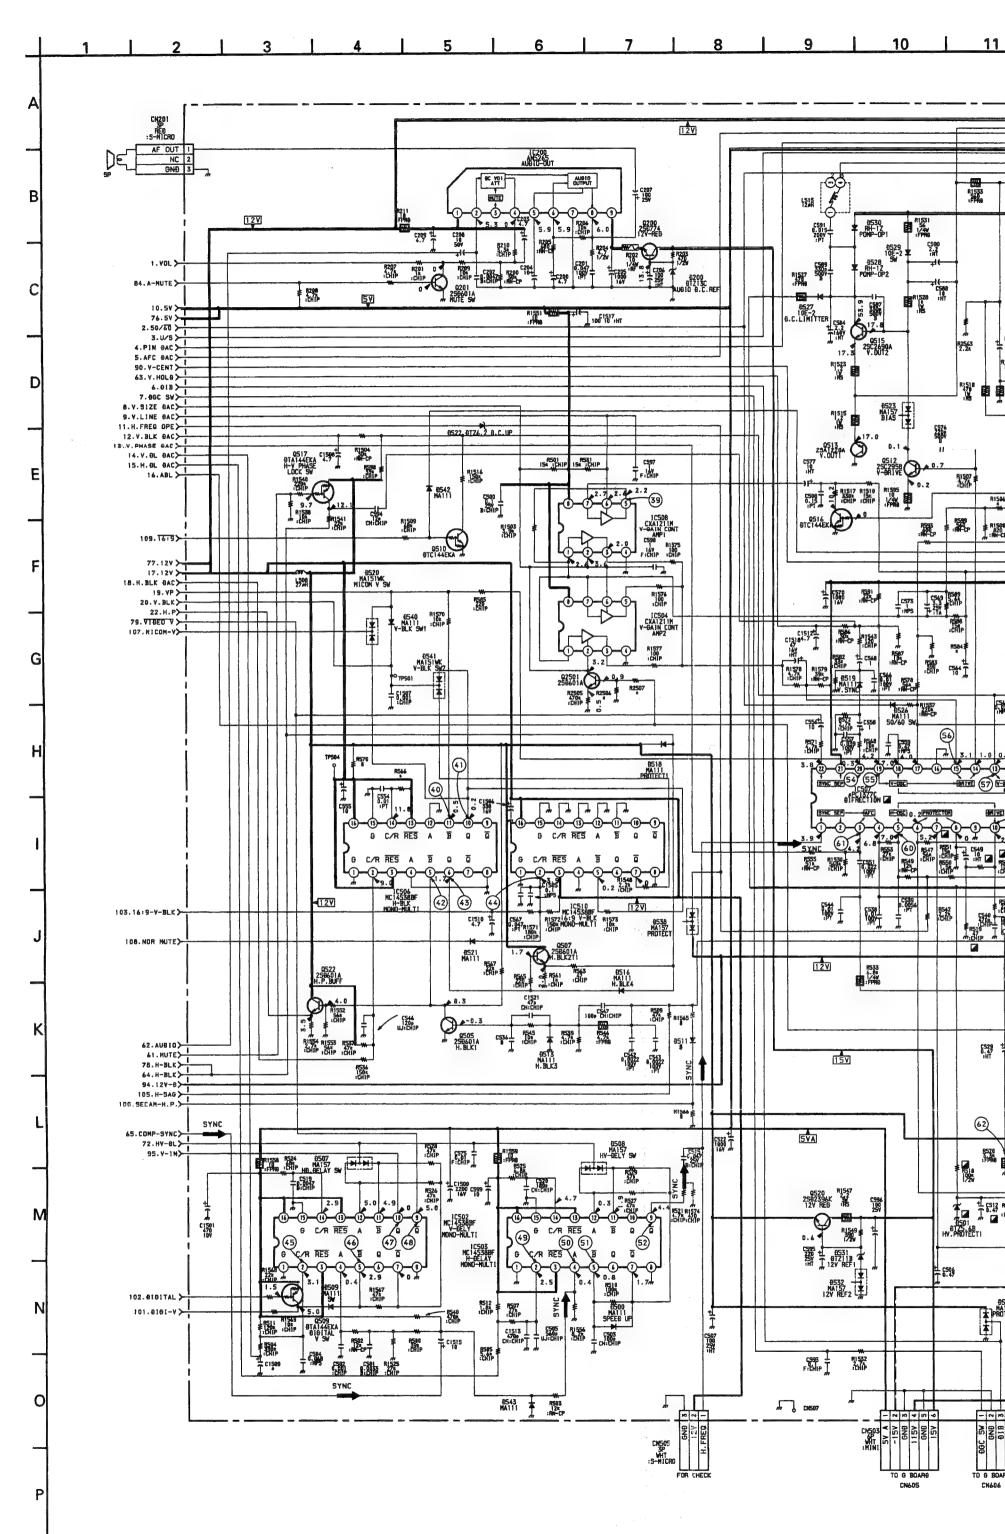

- 69 -

-7

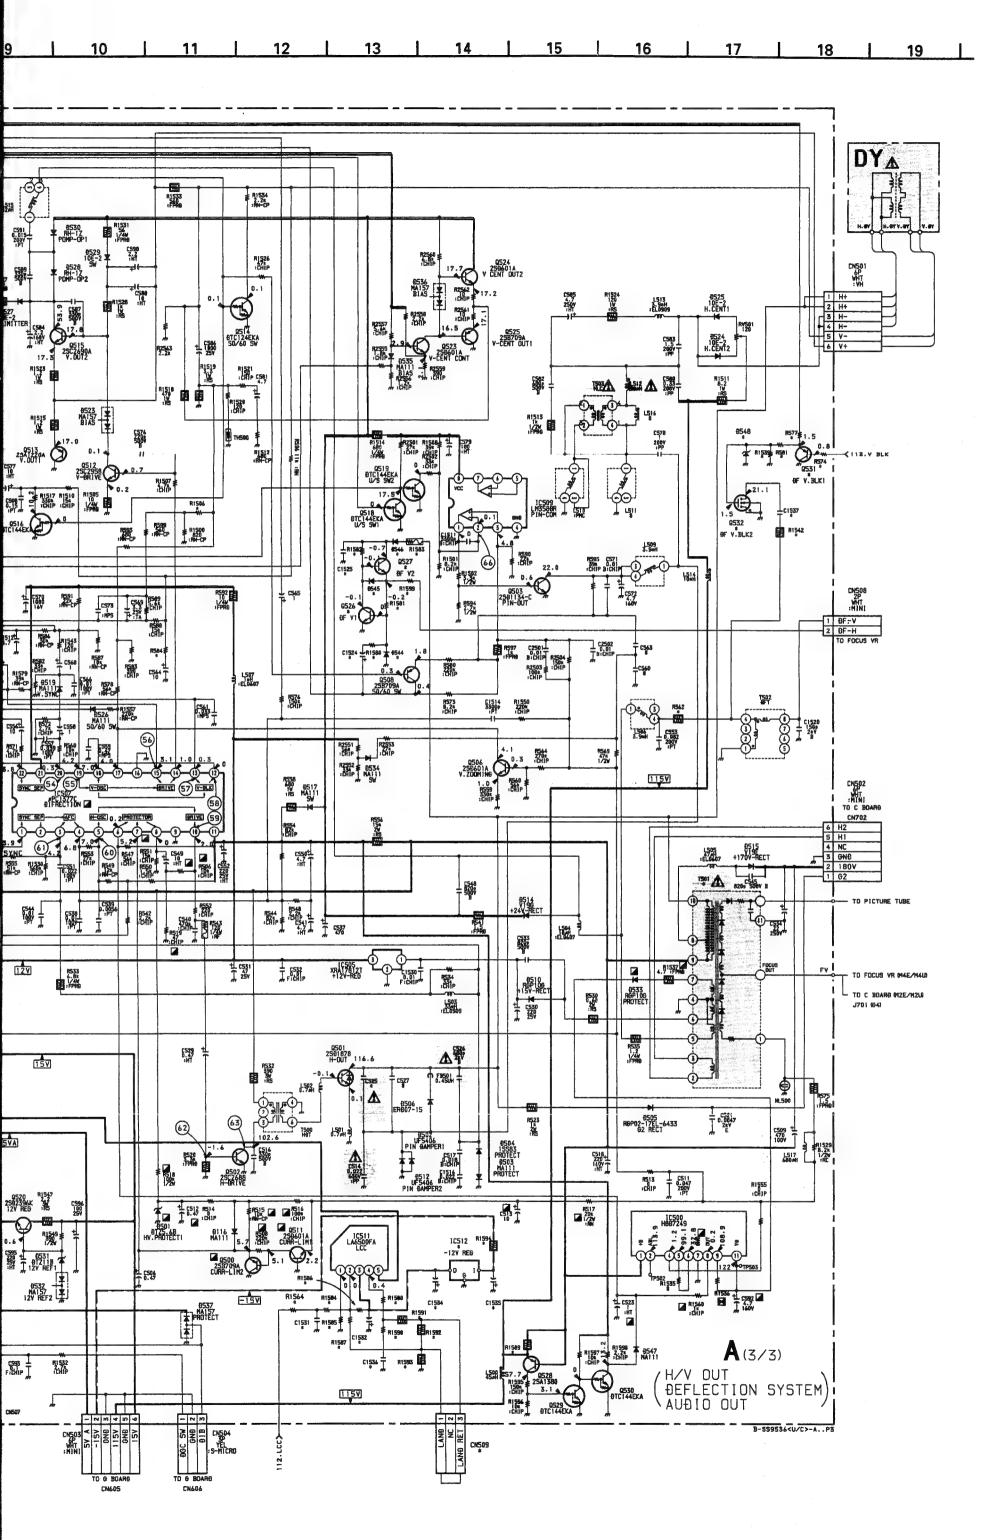

·A BOA 3 0.7 V 43 10.0 V **43** 3.9 V 43 5.0 V **(1)** 4.2 V €3 11.0 V 67 5.9 V 6


3.8 V

170 V


63

6




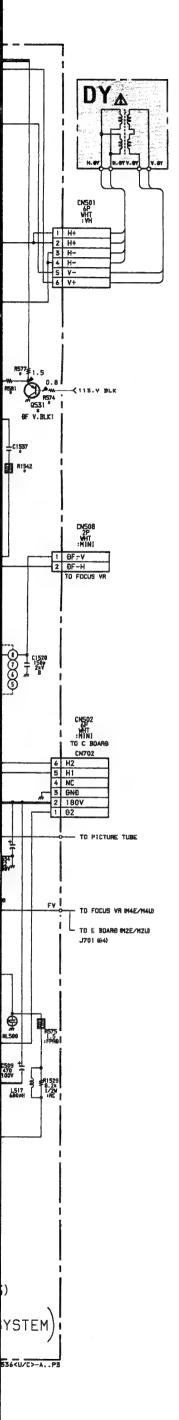


·A BOARD WAVEFORMS

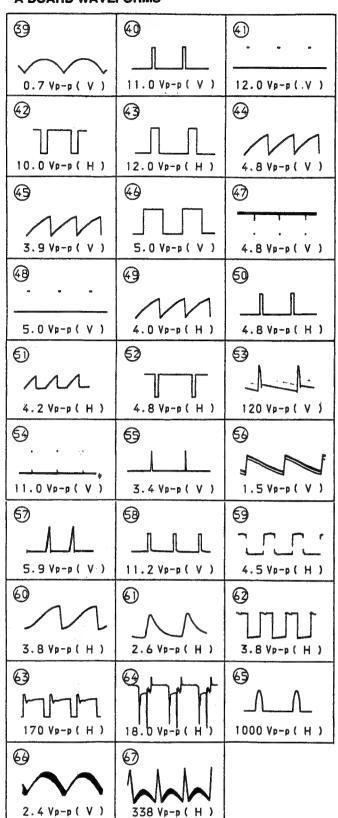


A BOARD IC404 CXA1739S

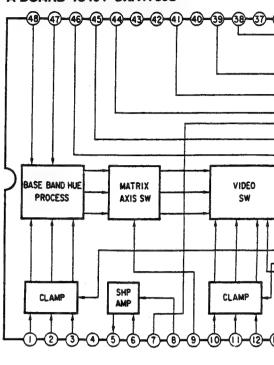


A BOARD IC200 AN5265

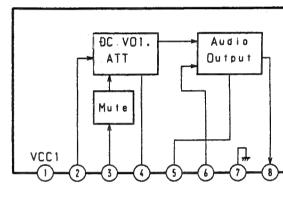

A BOARD IC101 μPD78013YCW

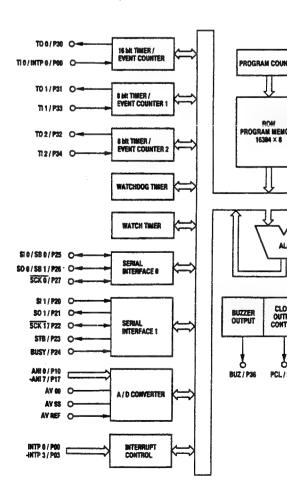

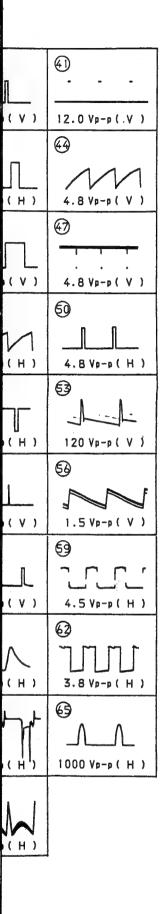

PULSE


GENERATOR

MODE


SELECT

A BOARD IC200 AN5265

SHP

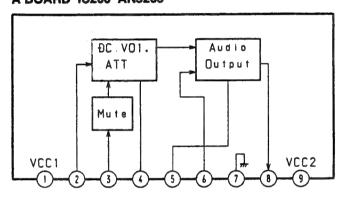

A BOARD IC101 μPD78013YCW

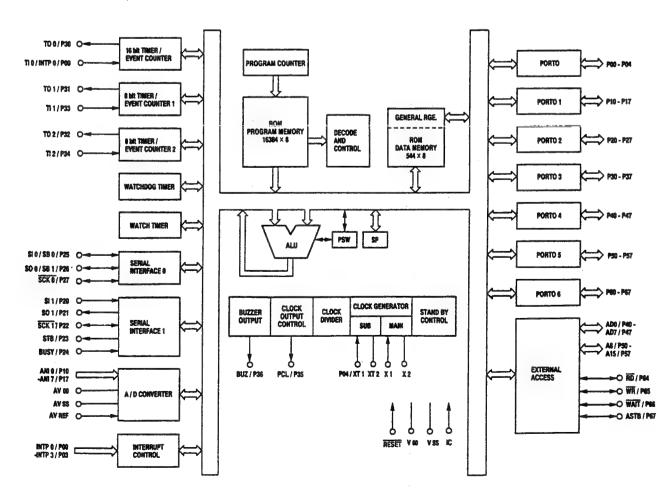


Schematic diagram


 \overline{QXS} boards \Rightarrow


Schematic diagrams


(A(3/3)) board


board -73-

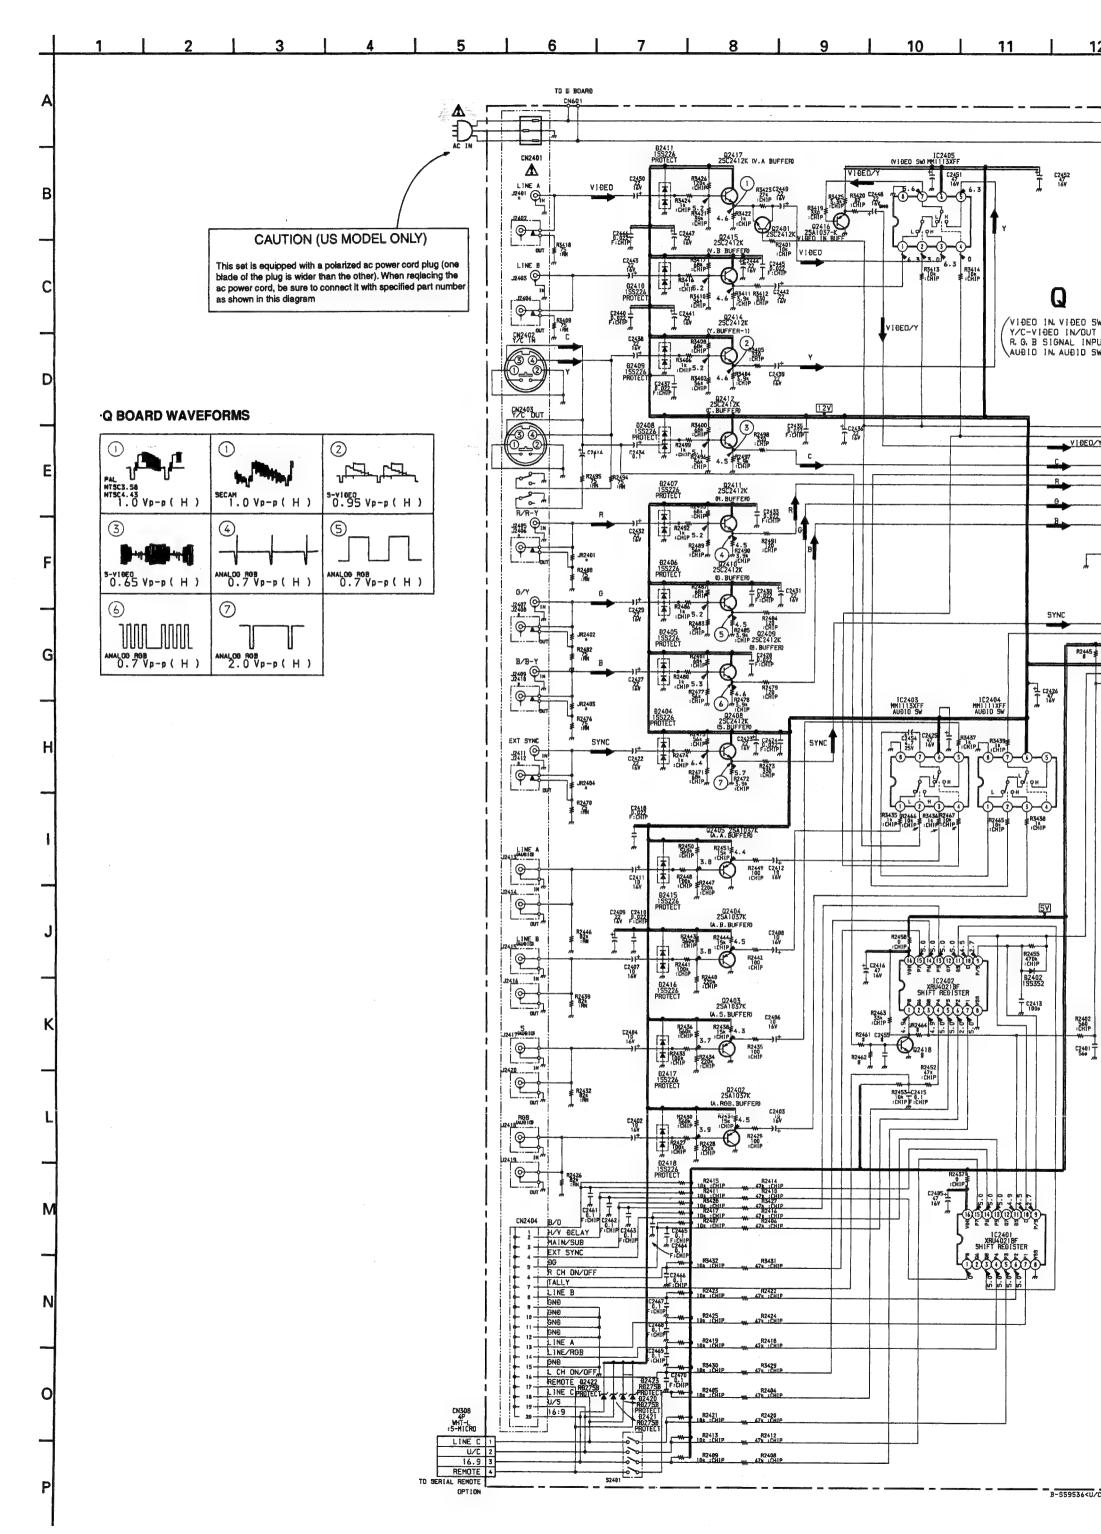


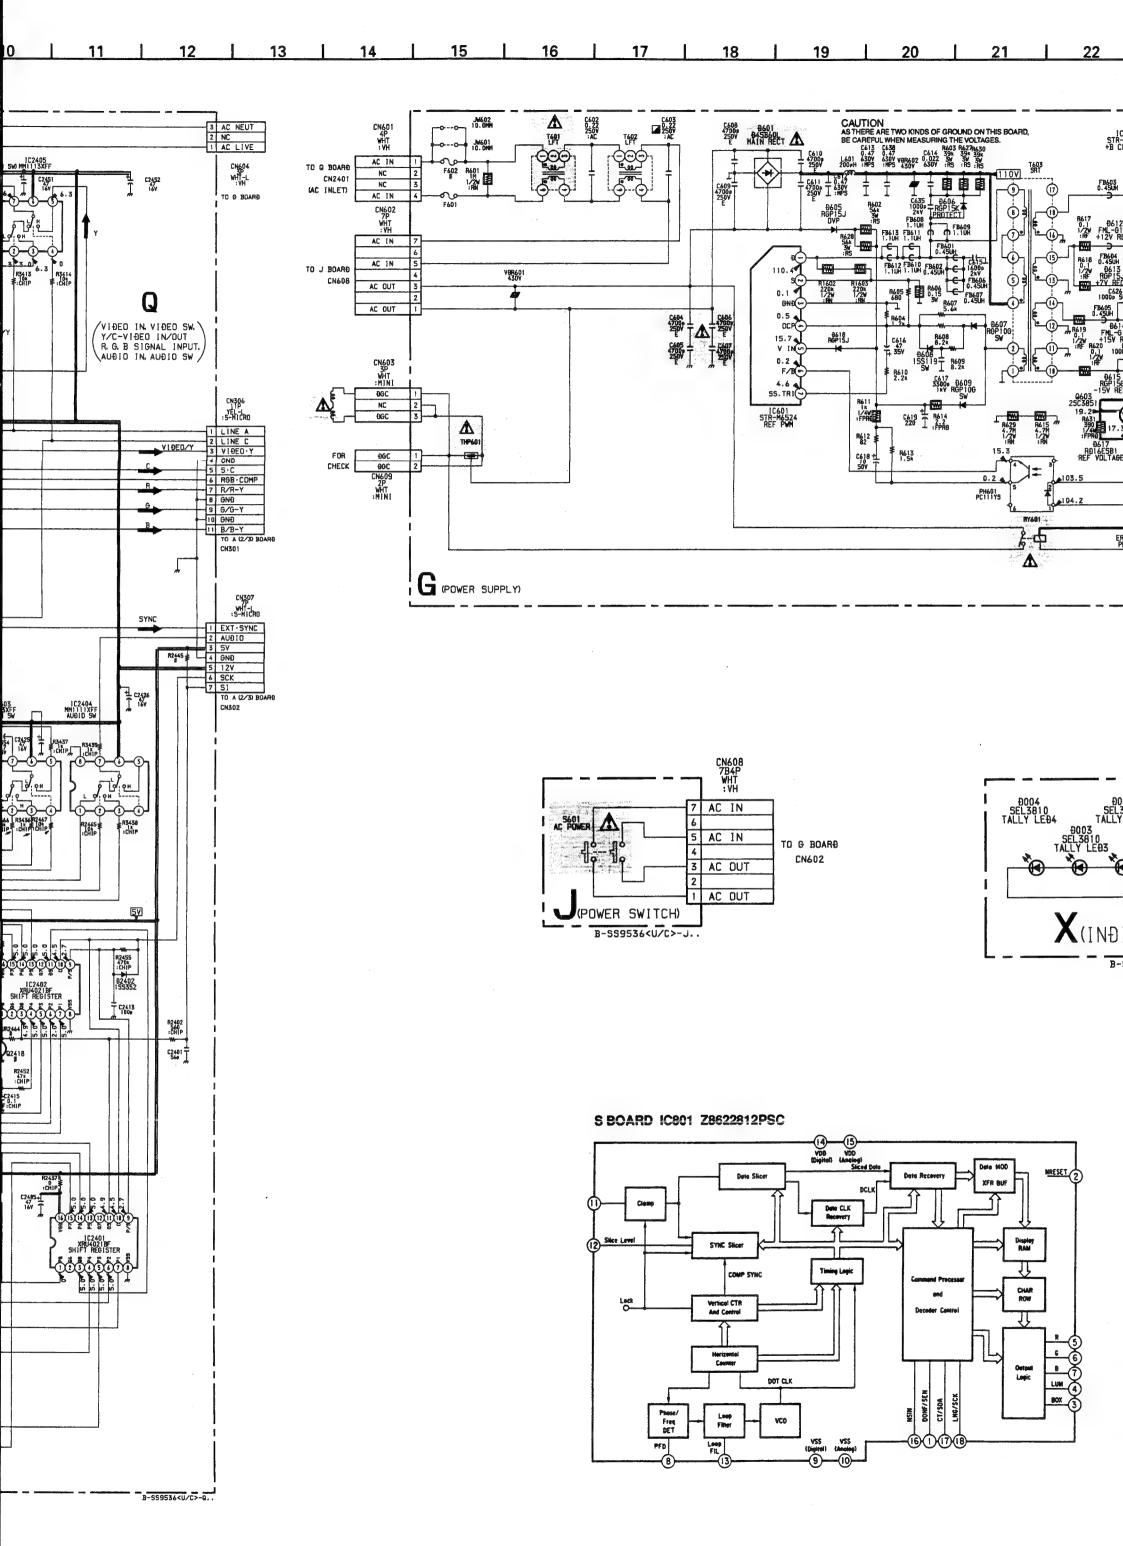


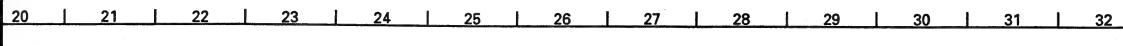


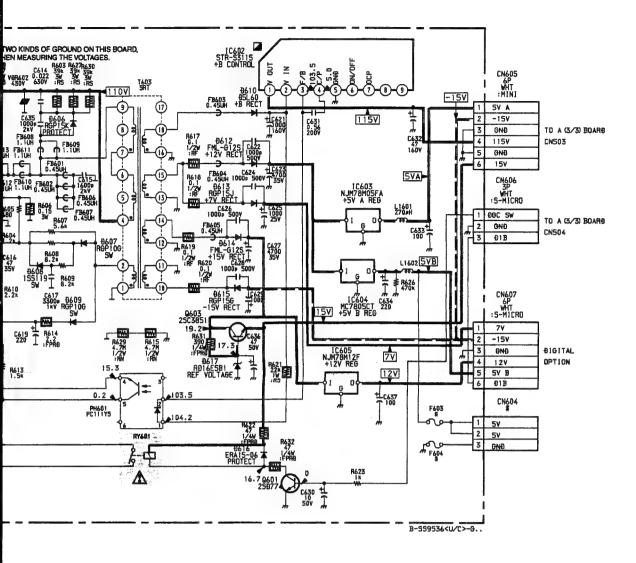

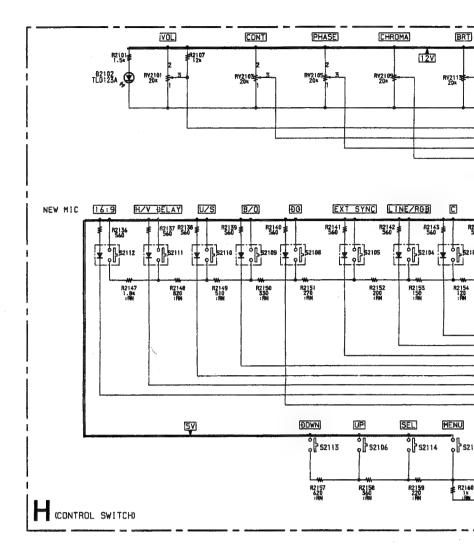


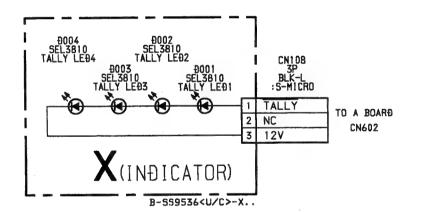


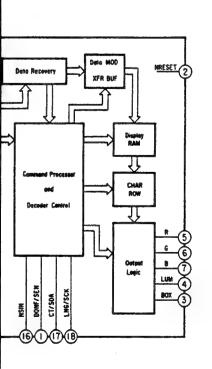


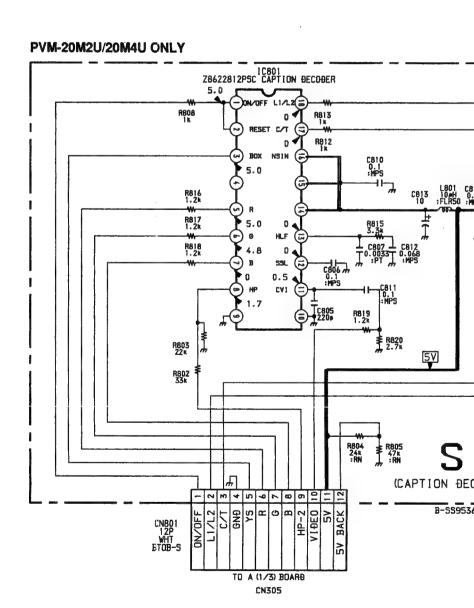


24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 |

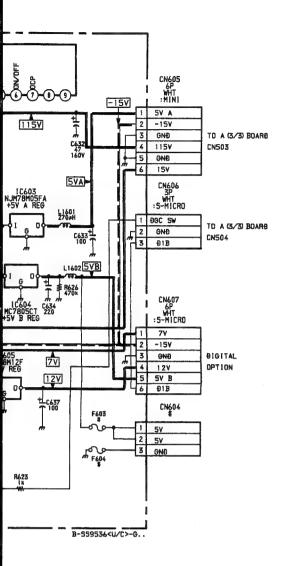

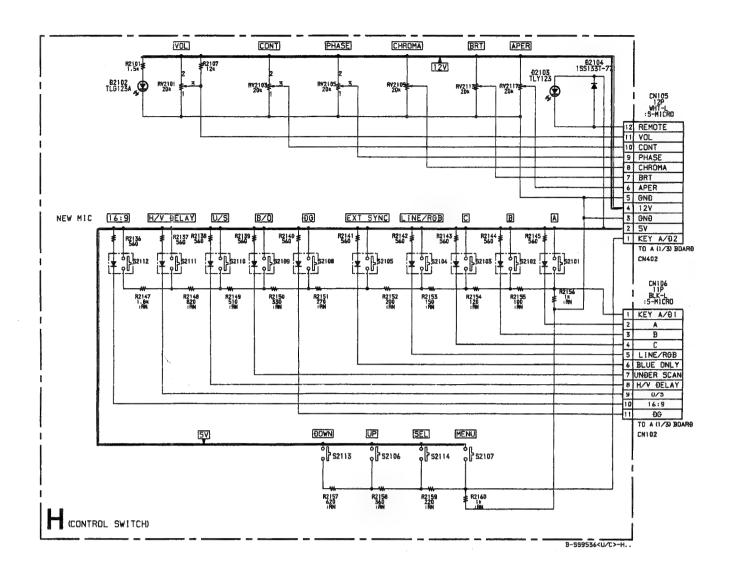


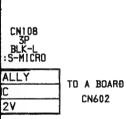

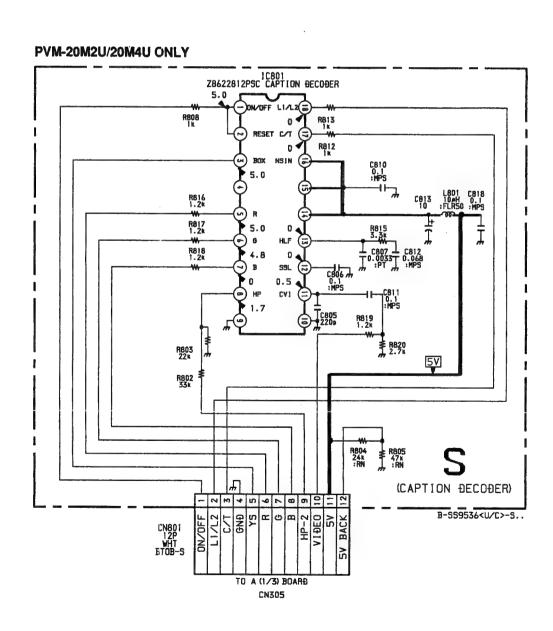





-G BOARD-

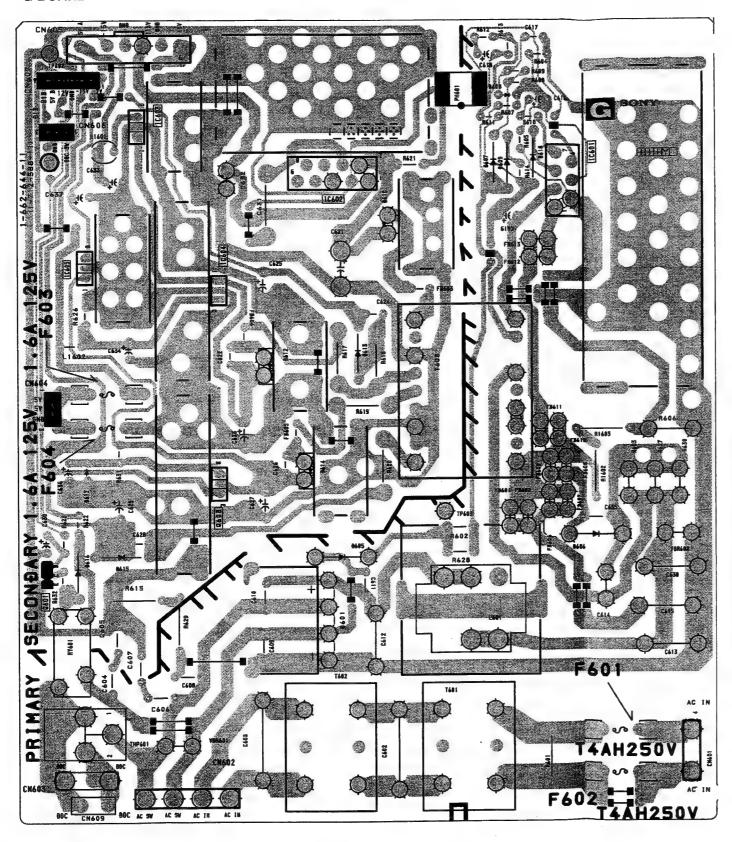

-G BOARD-

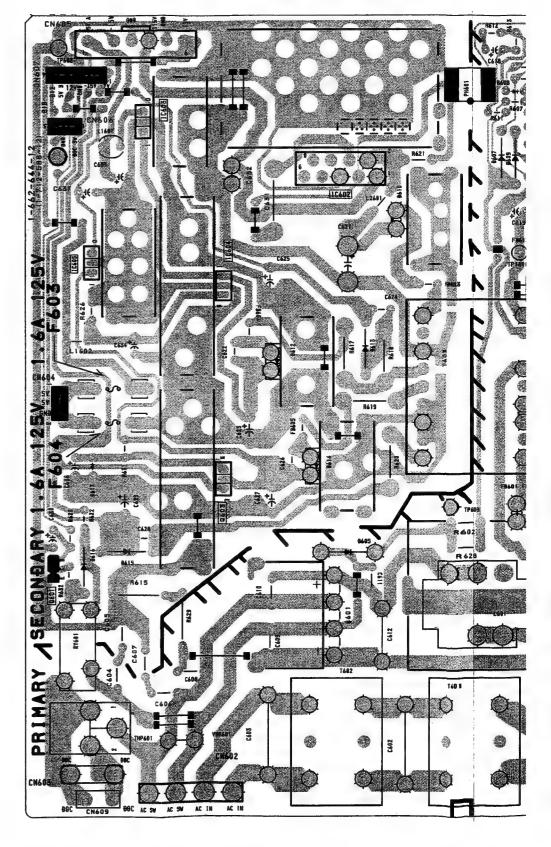

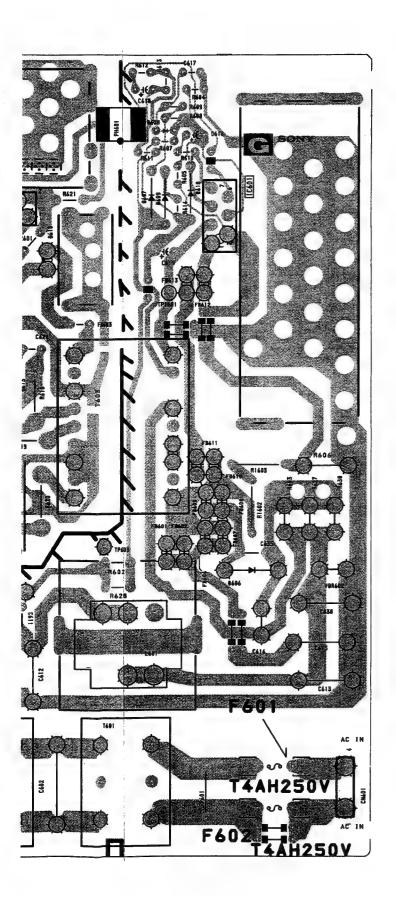














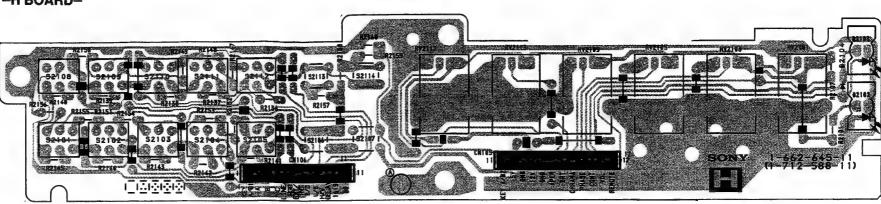


-Q BOARD-

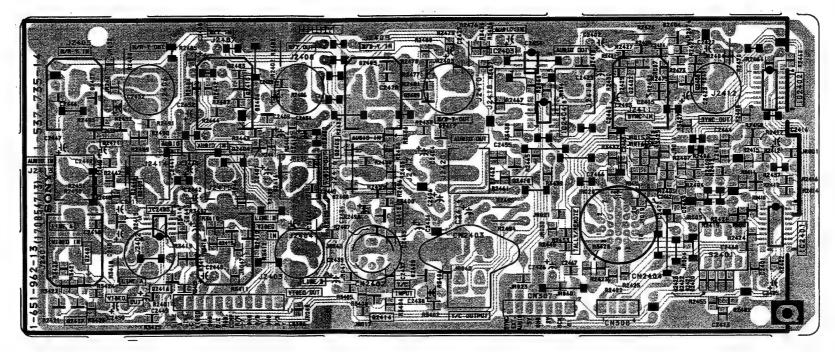


-J BOARD-

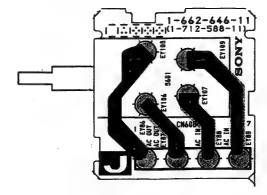



-S BOARD-PVM-20M2U/20M4U ONLY

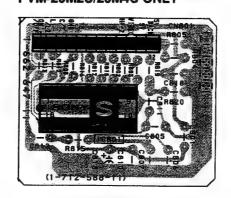


-X BOARD-

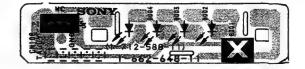

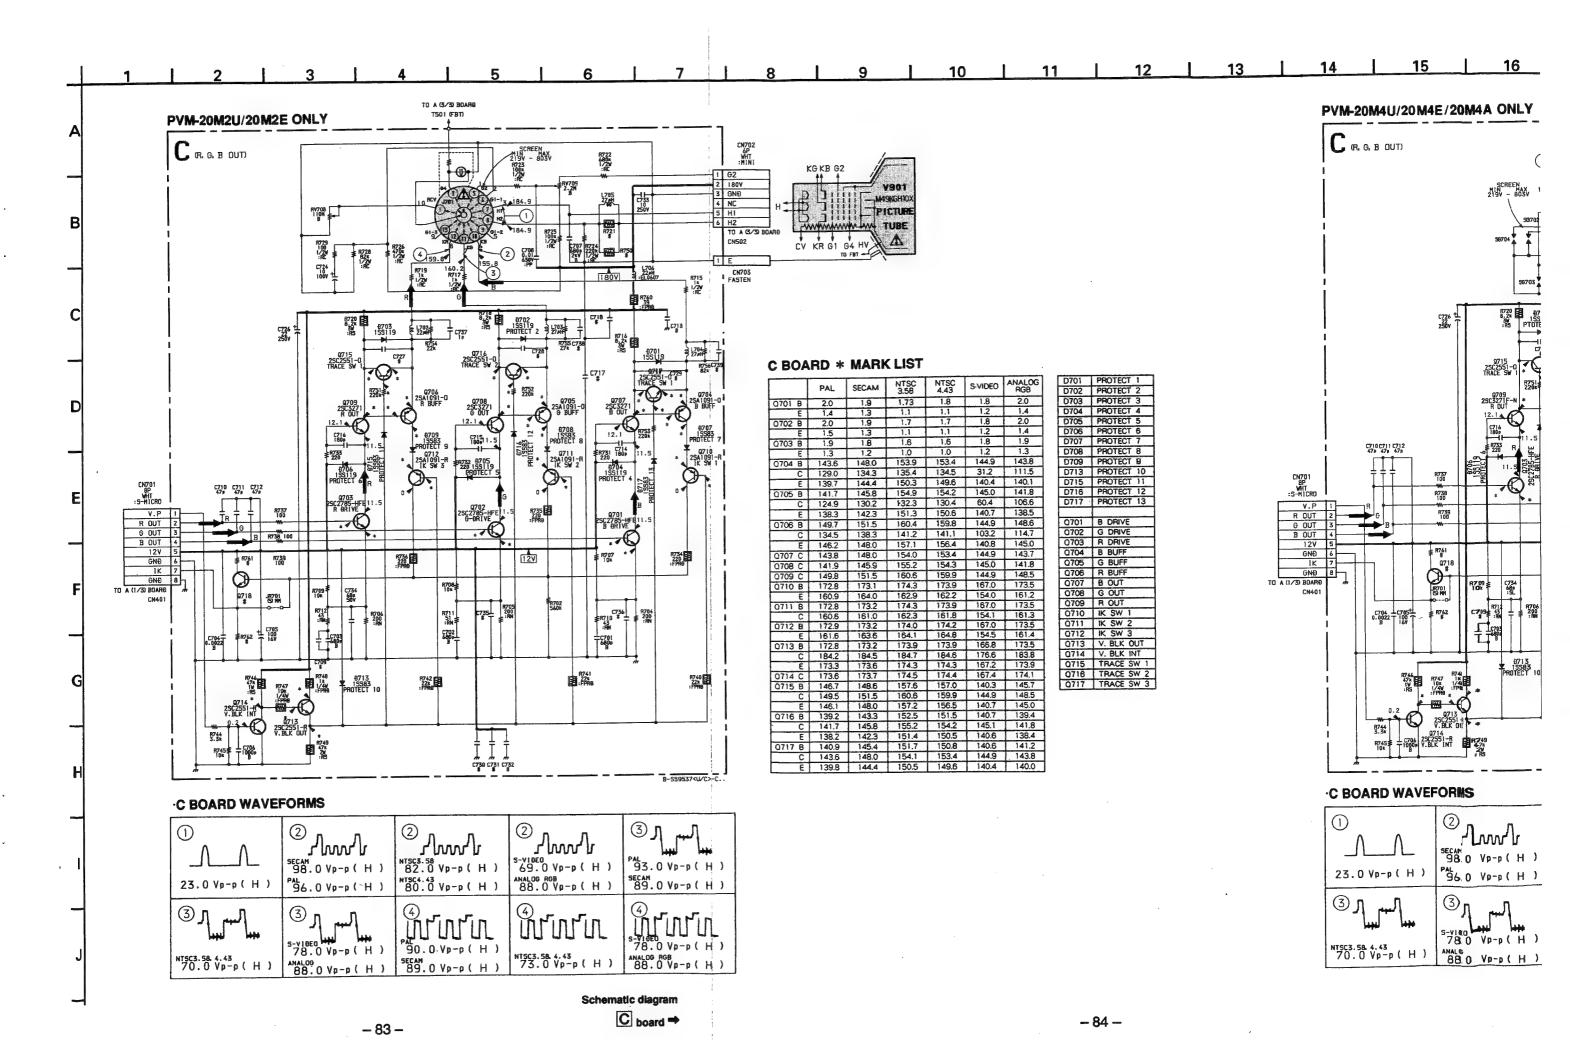

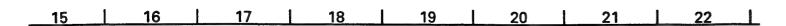

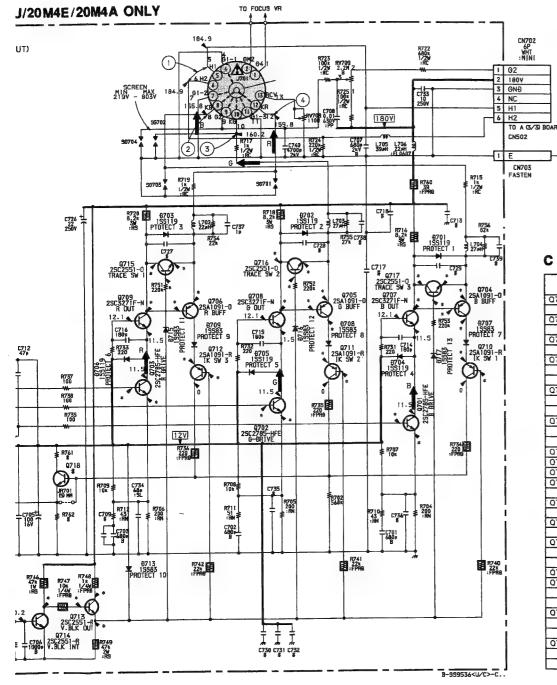

C BOARD * MARK LIST

	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	ANALOG RGB
Q701 B	2.0	1.9	1.73	1.8	1.8	2.0
E	1.4	1.3	1.1	1.1	1.2	1.4
Q702 B	2.0	1.9	1.7	1.7	1.8	2.0
Ε	1.5	1.3	1.1	1.1	1.2	1.4
Q703 B	1.9	1.8	1.6	1.6	1.8	1.9
Е	1.3	1.2	1.0	1.0	1.2	1.3
0704 B	143.6	148.0	153.9	153.4	144.9	143.8
C	129.0	134.3	135.4	134.5	31.2	111.5
E	139.7	144.4	150.3	149.6	140.4	140.1
Q705 B	141,7	145.8	154.9	154.2	145.0	141.8
C	124.9	130.2	132.3	130.4	60.4	106.6
Ë	138.3	142.3	151.3	150.6	140.7	138.5
Q706 B	149.7	151.5	160.4	159.8	144.9	148.6
С	134.5	138.3	141.2	141.1	103.2	114.7
E	146.2	148.0	157.1	156.4	140.8	145.0
0707 C	143.8	148.0	154.0	153.4	144.9	143.7
Q708 C	141.9	145.9	155.2	154.3	145.0	141.8
0709 C	149.8	151.5	160.6	159.9	144.9	148.5
Q710 B	172.8	173.1	174.3	173.9	167.0	173.5 161.2
E	160.9	164.0	162.9	162.2	154.0	
0711 B	172.8	173.2	174.3	173.9	167.0	173.5
С	160.6	161.0	162.3	161.8	154.1	161.3
Q712 B	172.9	173.2	174.0	174.2	167.0	173.5
E	161.6	163.6	164.1	164.8	154.5	161.4
Q713 B	172.8	173.2	173.9	173.9	166.8	173.5
С	184.2	184.5	184.7	184.6	176.6	183.8
E	173.3	173.6	174.3	174.3	167.2	173.9
Q714 C	173.6	173.7	174.5	174.4	167.4	174.1
Q715 B	146.7	148.6	157.6	157.0	140.3	145.7
С	149.5	151.5	160.6	159.9	144.9	148.5
E	146.1	148.0	157.2	156.5	140.7	145.0
Q716 B	139.2	143.3	152.5	151.5	140.7	139.4
C	141.7	145.8	155.2	154.2	145.1	141.8
E	138.2	142.3	151.4	150.5	140.6	138.4
Q717 B	140.9	145.4	151.7	150.8	140.6	141.2
С	143.6	148.0	154.1	153.4	144.9	143.8
E	139.8	144.4	150.5	149.6	140.4	140.0


D701	PROTECT 1
D702	PROTECT 2
D703	PROTECT 3
D704	PROTECT 4
D705	PROTECT 5
D706	PROTECT 6
D707	PROTECT 7
D708	PROTECT 8
D709	PROTECT 9
D713	PROTECT 10
D715	PROTECT 11
D716	PROTECT 12
D717	PROTECT 13
0701	B DRIVE
Q702	G DRIVE
Q703	R DRIVE
Q704	B BUFF
Q705	G BUFF
0706	R BUFF
Q707	B OUT
Q708	G OUT
0709	R OUT
Q710	IK SW 1
Q711	IK SW 2
Q712	IK SW 3
Q713	V. BLK OUT
Q714	V. BLK INT
0715	TRACE SW 1
Q716	TRACE SW 2
Q717	TRACE SW 3

WAVEFORMS


,(н)	2 \$68.0 Vp-p(H) \$6.0 Vp-p(H)	ONTSC3.58 Vp-p (H) NTSC4.43 Vp-p (H) NTSC4.43 Vp-p (H)	2 S-V18E0 69.0 Vp-p (H) ANALOG RGB 88.0 Vp-p (H)	3
ь(H)	3 78.0 Vp-p (H) ANALOS 88.0 Vp-p (H)	90.0 Vp-p (H)	(4) UUUUU MT563:58 V;43	4 5-718E0 Vp-p (H) AMALOG RGB 88.0 Vp-p (H)



-C BOARD- PVM-20M2U/20M2E ONLY

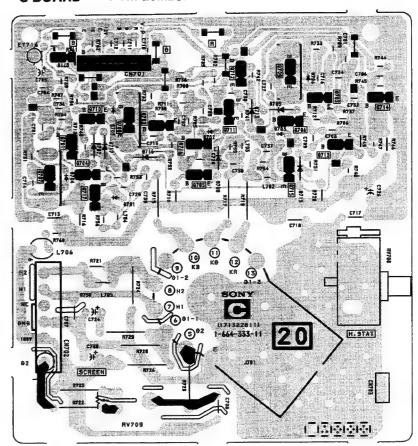


-C BOARD- PVM-20M4U/20M4E/20M4A ONLY

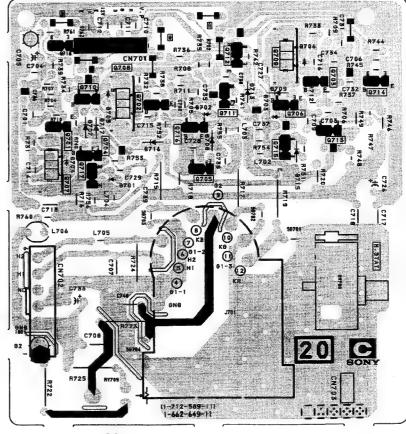

- 86 -

6-5. SEMICONDUCTORS

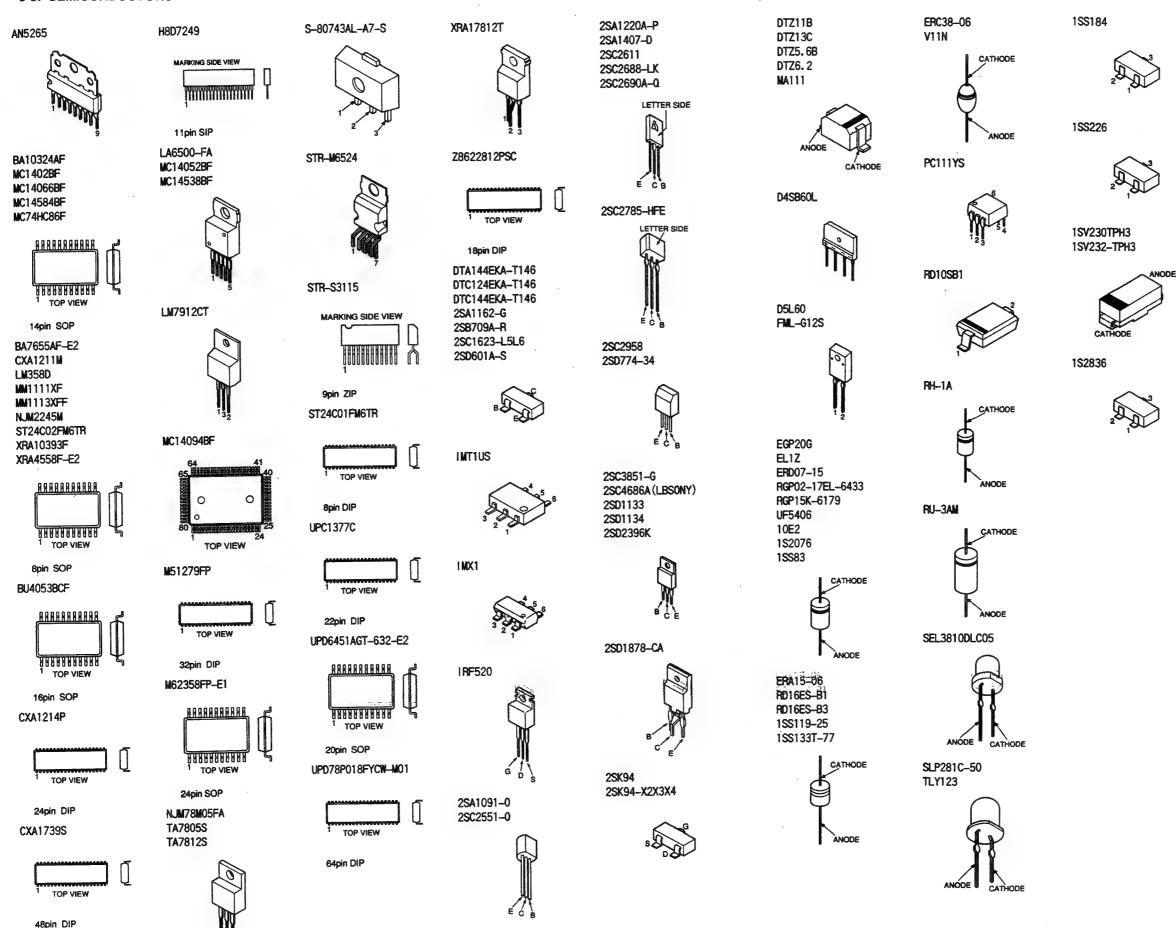

- 87 -

SECTION 7 EXPLODED VIEWS

NOTE:

· Items with no part number and no description are not stocked because they are seldom required for routine service.

7-1. CHASSIS

- : 7-685-648-79 +BVTP 3X12 +PS 4X8 **1**: 7-682-661-01 **+BVTP 3X8 ▲** : 7-685-646-79 **+BVTP 4X16 ♦**: 7-685-663-79
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The componants identified by shading and mark A are criti-

7-2. PICTURE TUBE


: 7-685-648-79

△ : 7-685-663-71

+BVTP 3X12


+BVTP 4X16

Les composants identifies par une trame et une marque A sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

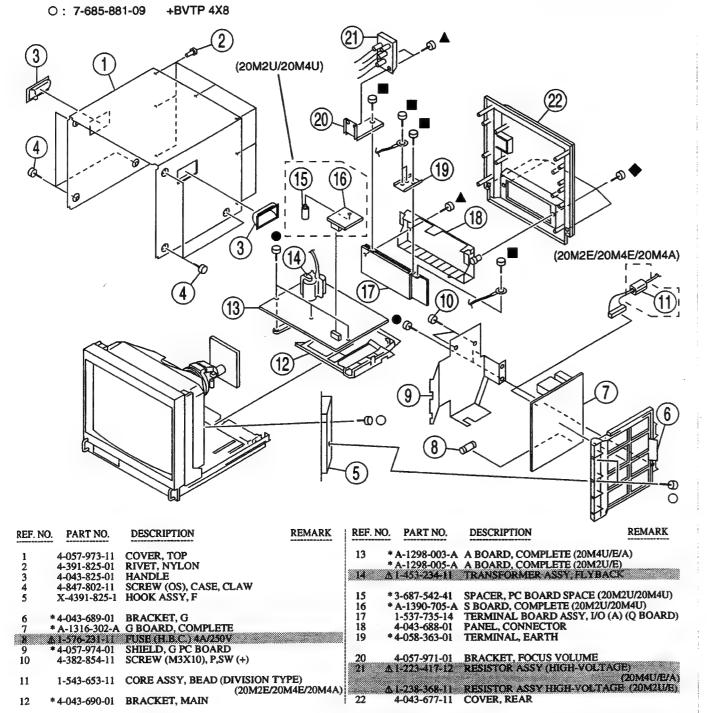

The componants identified by shading and mark A are critical for safety. Replace only with part number specified.

Les composants identifies par une trame et une marque A sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

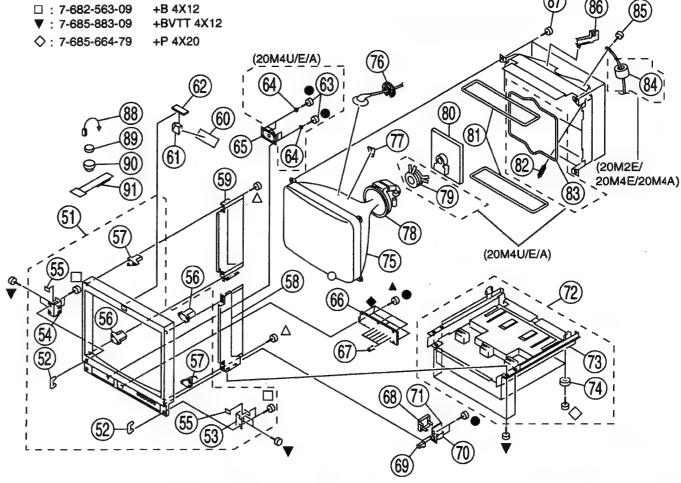

					00		
REF. NO	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
51		BEZEL ASSY (20M2U/E) BEZEL ASSY (20M4U/E/A)	52-57 52-57		4-901-947-01	LEG	
52		HANDLE, PROTECTOR	32-31		8-736-135-05	PICTURE TUBE 20FZS	(DARK) (20M2H/E)
	* 4-043-670-01		į		8-736-379-05		
	* 4-043-669-01	REINFORCEMENT (L), HANDLE	i		8-736-381-05		
•	, , , , , , , , , , , , , , , , , , , ,	(=),	1	76	3-704-372-01		
55	* 4-043-797-01	PLATE, BLIND	1	77	3-703-961-01	SPACER, DY	
56 '	* 4-043-672-01	BRACKET (A), PICTURE TUBE	1			·	
57	* 4-043-673-01	BRACKET (B), PICTURE TUBE	i	78 A	1-451-349-11	DEFLECTION YOKE ((20FZA) (20M2U/E)
	* A-1450-186-A	BRACKET ASSY (R), SIDE	İ		1-451-456-11	DEFLECTION YOKE ((20MTA) (20M4U/E/A)
59	* A-1450-185-A	BRACKET ASSY (L), SIDE	1	79 A	8-453-003-41	NA3012-M4 (20M4U/E/	A)
			i			C BOARD, COMPLETE	
60	4-044-606-01	CUSHION, TALLY	İ	*	* A-1331 - 628-A	C BOARD, COMPLETE	(20M4U/E/A)
	* 4-043-671-01		1				
		X BOARD, COMPLETE	i			COIL, DEMAGNETIZA	TION
63	4-379-192-01	SCREW, TAPPING, STEP (20M4U/E	E/A)		4-303-774-99		
64	* 4-379-189-01	CUSHION, SPEAKER (20M4U/E/A)	1	B3 A	1411-657-11		ECTION (20M4U/E/A)
			i	84	1-543-827-11	CLAMP, SLEEVE FERR	ITE
65	1-544-063-12		İ				(20M2E/20M4E/20M4A)
		H BOARD, COMPLETE		85	4-389-025-01	SCREW (M4) (EXT TO	OTH WASHER)
67		KNOB, CONTROL	i				
68	4-043-681-01		I		4-387-284-01		
69	4-043-683-01	BUTTOM, POWER SWITCH		87	4-365-808-01	SCREW (5), TAPPING	
				88	4-308-870-00		
		SWITCH, PUSH (A.C. POWER)		89	1-452-032-00	MAGNET, DISK; 10mm	
71		J BOARD, COMPLETE		90	1-452-094-00	MAGNET,ROTATABLE	EDISK; 15mmø
		CABINET ASSY, BOTTOM	73,74	01	4 0 5 4 5 3 6 3 1	DECE 1000 CO	ADDECE
15	- X-4031-740-1	CABINET, BOTTOM		91	4-051-736-21	PIECE A(90), CONV. CO	OKKECT

(20M2E/20M4E/20M4A)

11

*4-043-690-01 BRACKET, MAIN

SECTION 8 ELECTRICAL PARTS LIST



NOTE:

Les composants identifies par une trame et une marque A sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark ∆ are critical for safety.
Replace only with part number specified.

- The components identified by
 in this manual
 have been carefully factory-selected for each set
 in order to satisfy regulations regarding X-ray
 radiation. Should replacement be required,
 replace only with the value originally used.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

When indicating parts by reference number, please include the board name.

RESISTORS

- · All resistors are in ohms
- F : nonflammable
- CAPACITORS PF : μμ F
- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

						piec	ise include the bo	ara name.	•	
REF. NO.	PART NO.	DESCRIPTION	ļ	REMARK	REF. NO.	PART NO.	DESCRIPTION		F	REMARK
	* A-1298-003-A	A BOARD, COMPLETE (I	PVM-20	M4U/E/A)	C200 C201	1-126-963-11 1-137-353-11		4.7MF 0.047MF	20% 10%	50V 100V
	1-540-044-11	A BOARD, COMPLETE (I	PVM-20	M2U/E)	C202 C203 C204 C205	1-126-963-11 1-126-964-11 1-126-767-11	ELECT ELECT	0.0047MF 4.7MF 10MF 1000MF 100MF	20% 20% 20%	50V 50V 50V 16V 25V
	4-382-854-11	PLATE (CF), SHIELD SCREW (M3X10), P, SW (+ SCREW +PSW 3X8	•)		C206 C207 C208 C209	1-128-526-11 1-104-665-11 1-126-964-11 1-126-963-11	ELECT ELECT ELECT	100MF 10MF 4.7MF	20% 20% 20% 20%	25V 50V 50V
		<band filter="" pass=""></band>			C300 C301	1-163-031-11 1-163-086-00	CERAMIC CHIP CERAMIC CHIP	0.01MF 3PF	0.25PF	50V 50V
BPF400	1-236-363-11	FILTER, BAND PASS			C302 C304		CERAMIC CHIP CERAMIC CHIP		0.25PF 10%	50V 25V
		<capacitor></capacitor>			C305 C306	1-163-259-91	CERAMIC CHIP CERAMIC CHIP	220PF	5%	50V 50V
C105 C106		CERAMIC CHIP 100PF CERAMIC CHIP 100PF	5% 5%	50V 50V	C309	1-163-031-11	CERAMIC CHIP	0.01MF		50V
C114 C115 C116	1-163-031-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF		50V 50V 50V	C310 C311 C312 C313	1-163-809-11 1-126-961-11	CERAMIC CHIP CERAMIC CHIP ELECT CERAMIC CHIP	0.047MF 2.2MF	10% 10% 20%	25V 25V 50V 50V
C117 C118		CERAMIC CHIP 0.01MF CERAMIC CHIP 220PF	5%	50V 50V	C314		CERAMIC CHIP		5%	50V
C119 C121 C123	1-165-319-11 1-163-237-11	CERAMIC CHIP 0.1MF CERAMIC CHIP 27PF CERAMIC CHIP 0.1MF	5%	50V 50V 50V	C315 C316 C317 C318	1-126-964-11 1-104-664-11 1-163-231-11 1-126-964-11	ELECT CERAMIC CHIP	10MF 47MF 15PF 10MF	20% 20% 5% 20%	50V 25V 50V 50V
C124 C132		CERAMIC CHIP 100PF CERAMIC CHIP 0.001MF	5% 5%	50V 50V	C319		CERAMIC CHIP		0.25PF	
C133 C134 C135	1-163-251-11 1-163-251-11	CERAMIC CHIP 100PF CERAMIC CHIP 100PF CERAMIC CHIP 100PF	5% 5% 5%	50V 50V 50V	C320 C322 C323 C324	1-163-119-00 1-163-231-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	120PF 15PF	5% 5% 5%	50V 50V 50V
C136 C140	1-164-004-11	CERAMIC CHIP 100PF CERAMIC CHIP 0.1MF	5% 10%	50V 25V	C325	1-126-964-11		10MF	20%	50V
C141 C142 C143	1-163-259-91	CERAMIC CHIP 0.0022MF CERAMIC CHIP 220PF CERAMIC CHIP 0.1MF	10% 5%	50V 50V 50V	C326 C327 C328 C329	1-164-004-11 1-163-031-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1MF 0.01MF	10% 10% 5%	25V 25V 50V 50V
C144 C145		CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF		50V 50V	C330		CERAMIC CHIP		5%	50V
C154 C155 C156	1-163-023-00	CERAMIC CHIP 0.022MF CERAMIC CHIP 0.015MF CERAMIC CHIP 0.0068MF	10% 10% 10%	50V 50V 50V	C331 C332 C333 C334	1-164-004-11 1-163-031-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1MF 0.01MF	5% 10% 5%	50V 25V 50V 50V
C157 C158		CERAMIC CHIP 0.0068MF CERAMIC CHIP 0.047MF	10% 10%	50V 25V	C335		CERAMIC CHIP		5%	50V
C159 C161 C162	1-104-664-11	CERAMIC CHIP 0.068MF ELECT 47MF CERAMIC CHIP 0.001MF	10% 20% 5%	25V 25V 50V	C336 C337 C338	1-163-119-00	CERAMIC CHIP CERAMIC CHIP	120PF	20% 5%	25V 50V 50V
C164 C165		CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF		50V 50V	C339 C340		CERAMIC CHIP CERAMIC CHIP		5%	50V 50V
C166 C167 C168		CERAMIC CHIP 0.1MF ELECT 470MF	10% 20% 20%	25V 10V 10V	C341 C342 C343	1-163-018-00 1-163-031-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.0056MF 0.01MF		50V 50V 50V
C169 C171		CERAMIC CHIP 0.01MF CERAMIC CHIP 100PF	10% 5%	50V 50V	C344 C345		CERAMIC CHIP CERAMIC CHIP		5% 5%	50V 50V
C174		CERAMIC CHIP 47PF	5%	50V	C346 C347	1-126-960-11 1-163-243-11	ELECT CERAMIC CHIP	1MF 47PF	20% 5%	50V 50V



REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
C348 C349 C350	1-163-141-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.001MF CERAMIC CHIP 0.001MF		25V 50V 50V	C421 C422 C423	1-126-960-11 1-163-809-11	CERAMIC CHIP 0.047MF	20% 10%	25V 50V 25V
C351 C352 C353 C354	1-165-319-11 1-163-121-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.1MF CERAMIC CHIP 150PF	20% 5%	25V 50V 50V 50V	C424 C426 C427 C428	1-163-243-11 1-163-031-11 1-104-661-91	CERAMIC CHIP 0.047MF CERAMIC CHIP 47PF CERAMIC CHIP 0.01MF ELECT 330MF CERAMIC CHIP 0.01MF	10% 5% 20%	25V 50V 50V 16V 50V
C355 C356	1-126-960-11 1-126-963-11	ELECT 4.7MF	20%	50V 50V	C429 C430	1-104-661-91	ELECT 330MF	20%	16V
C357 C358 C359 C360	1-163-031-11 1-104-664-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF ELECT 47MF CERAMIC CHIP 0.01MF	20% 10%	50V 50V 25V 50V	C431 C432 C433 C434 C435	1-164-004-11 1-163-235-11 1-164-004-11	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF CERAMIC CHIP 22PF CERAMIC CHIP 0.1MF CERAMIC CHIP 6PF	10% 5% 10% 0.25PF	50V 25V 50V 25V 50V
C361 C362 C363 C364 C365	1-163-031-11 1-163-099-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 18PF CERAMIC CHIP 0.01MF MYLAR 0.001MF	5% 10%	50V 50V 50V 50V 100V	C436 C437 C438 C439	1-164-004-11 1-164-004-11 1-163-809-11 1-163-809-11	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF CERAMIC CHIP 0.1MF	10% 10% 10% 10%	25V 25V 25V 25V 25V
C366 C367 C368 C369	1-163-031-11 1-124-261-00 1-164-298-11	CERAMIC CHIP 0.15MF	20% 10%	50V 50V 50V 25V	C440 C441 C442 C443	1-126-962-11 1-163-809-11 1-163-107-00	ELECT 3.3MF CERAMIC CHIP 0.047MF CERAMIC CHIP 39PF	20% 10% 5%	50V 25V 50V 50V
C370 C371	1-104-664-11 1-104-664-11	ELECT 47MF	20%	25V 25V	C444 C445	1-163-809-11	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.047MF	10%	25V
C372 C373 C374 C375	1-163-141-00 1-126-960-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.001MF ELECT 1MF CERAMIC CHIP 220PF	5% 20% 5%	50V 50V 50V 50V	C446 C447 C448 C449 C450	1-163-263-11 1-163-107-00 1-163-227-11	CERAMIC CHIP 12PF CERAMIC CHIP 330PF CERAMIC CHIP 39PF CERAMIC CHIP 10PF CERAMIC CHIP 0.047MF	5% 5% 0.5PF 10%	50V 50V 50V 50V 25V
C376 C377 C378 C379 C380	1-163-809-11	CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF CERAMIC CHIP 0.01MF		50V -25V 25V 50V 16V	C451 C452 C453 C454 C455	1-163-263-11 1-164-004-11 1-163-107-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 330PF CERAMIC CHIP 0.1MF CERAMIC CHIP 39PF CERAMIC CHIP 330PF	10% 5% 10% 5%	25V 50V 25V 50V 50V
C381 C382 C383 C384 C385	1-163-243-11 1-104-664-11	CERAMIC CHIP 82PF	5% 20% 5% 20%	50V 50V 25V 50V 25V	C456 C457 C458 C459	1-163-229-11 1-164-004-11 1-163-249-11 1-165-319-11	CERAMIC CHIP 12PF CERAMIC CHIP 0.1MF CERAMIC CHIP 82PF CERAMIC CHIP 0.1MF	5% 10% 5%	50V 25V 50V 50V 25V
C386 C387 C388 C389 C390	1-124-261-00 1-104-664-11	CERAMIC CHIP 0.001MF ELECT 10MF	20% 5% 20% 20% 5%	50V 50V 50V 25V 50V	C460 C461 C462 C463 C464	1-163-119-00 1-164-004-11 1-164-004-11 1-164-299-11	CERAMIC CHIP 120PF CERAMIC CHIP 121MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.22MF	5% 10% 10% 10%	50V 25V 25V 25V
C391 C392 C393 C394 C395	1-164-298-11 1-104-664-11	CERAMIC CHIP 0.15MF CERAMIC CHIP 0.15MF	20% 10% 10% 20% 5%	25V 25V 25V 25V 50V	C465 C466 C467 C469 C470	1-163-119-00 1-163-119-00 1-163-037-11 1-163-243-11	CERAMIC CHIP 15PF CERAMIC CHIP 120PF CERAMIC CHIP 120PF CERAMIC CHIP 0.022MF CERAMIC CHIP 47PF	5%	50V 50V 50V 50V
C396 C397 C398 C399 C400	1-104-664-11 1-104-664-11 1-104-664-11	ELECT 47MF	10% 20% 20% 20% 10%	25V 25V 25V 25V 25V	C471 C472 C473 C475 C476 C477	1-163-031-11 1-163-031-11 1-163-031-11 1-163-031-11	CERAMIC CHIP 33PF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.22MF	5% 10%	50V 50V 50V 50V 50V 25V
C401 C402 C403 C406 C407	1-126-967-11	CERAMIC CHIP 0.01MF ELECT 22MF	20% 10% 20% 20%	16V 50V 50V 50V 25V	C478 C479 C482 C483 C484	1-126-964-11 1-163-121-00 1-126-925-11 1-163-249-11	ELECT 10MF CERAMIC CHIP 150PF	20% 5% 20% 5% 5%	50V 50V 10V 50V 50V
C408 C409 C410 C411 C414	1-163-031-11 1-126-965-11 1-164-004-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF ELECT 22MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.01MF	10% 20% 10%	50V 50V 50V 25V 50V	C485 C486 C487 C490 C491	1-163-113-00 1-163-249-11 1-163-235-11 1-164-336-11	CERAMIC CHIP 68PF CERAMIC CHIP 82PF CERAMIC CHIP 0.33MF CERAMIC CHIP 0.33MF	5% 5% 5%	50V 50V 50V 25V 25V
C415 C416 C417 C418 C419	1-164-232-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.0033M	20% 10% 10% F 10% 20%	50V 50V 50V 50V 10V	C492 C493 C494 C495	1-164-336-11 1-104-760-11	CERAMIC CHIP 0.33MF CERAMIC CHIP 0.047MF CERAMIC CHIP 0.47MF	10% 20%	25V 50V 25V 50V
C420		CERAMIC CHIP 0.047MF		25V	C496	1-163-249-11	CERAMIC CHIP 82PF	5%	50V

The componants identified by shading and mark A are critical for safety.
Replace only with part number specified.

Les composants identifies par une trame et une marque \(\Lambda \) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



8000	REF. NO.	PART NO.	DESCRIPTION		R	EMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
	C497 C498 C499	1-126-961-11	CERAMIC CHIP ELECT CERAMIC CHIP	2.2MF	10% 20%	50V 50V 50V	C572 C573 C575	1-104-709-11 1-136-177-00 1-163-031-11		4.7MF 1MF 0.01MF	0 5%	160V 50V 50V
	C500 C501	1-164-004-11	CERAMIC CHIP CERAMIC CHIP	0.1MF	10% 10%	25V 50V	C576 C577	1-102-244-00 1-107-906-11		220PF 10MF	10% 20%	500V 50V
	C502	1-163-141-00	CERAMIC CHIP	0.001MF	5%	50V	C578	1-136-111-00		1MF	5%	200V
	C503	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C579	1-107-910-11		100MF	20%	50V
	C504	1-136-495-11	FILM CEDANIC CHIP	0.068MF	5% 5%	50V 50V	C580	1-136-105-00	FILM	0.33MF	5%	200V
	C505 C506	1-103-199-00	CERAMIC CHIP	0.47MF	20%	50V	C581	1-126-963-11	ELECT	4.7MF	20%	50V
							C582	1-102-002-00		680PF	10%	500V
	C507	1-128-526-11		100MF 0.15MF	20% 5%	25V 50V	C583 C584	1-136-541-11 1-107-949-11		1.5MF 2.2MF	5% 20%	200V 160V
	C508 C509	1-130-497-00 1-128-566-11		470MF	20%	100V	C585	1-107-960-11		4.7MF	20%	250V
	C511	1-107-368-11		0.047MF	10%	200V				40002 5	000	0.637
	C512	1-126-959-11	ELECT	0.47MF	20%	50V	C586 C587	1-126-942-61 1-102-030-00		1000MF 330PF	20% 10%	25V 500V
	C513	1-124-261-00	ELECT	10MF	20%	50V	C588	1-107-906-11		10MF	20%	50V
- 8		1-129-718-91	PILM	0.022MF	10%	630V	C589	1-102-030-00		330PF	10%	500V
	C515		CERAMIC CHIP	0.047MF 330PF	10% 10%	25V 500V	C590	1-107-903-11	ELECT	2.2MF	20%	50V
	C516 C517	1-102-030-00	CERAMIC CHIP		10%	50V	C591	1-107-365-91	FILM	0.015MF	10%	200V
	0511						C592	1-107-635-11		4.7MF	20%	160V
	C518	1-107-947-11	ELECT CERAMIC CHIP	220MF	20%	160V 50V	C593 C594		CERAMIC CHIP CERAMIC CHIP		5%	50V 50V
	C519 C520		CERAMIC CHIP		5%	50V	C595	1-107-889-11		220MF	20%	25V
	C521	1-162-114-00	CERAMIC	0.0047MF		2KV	CIED C	1 101 666 11	EL DOT	1001/5	100	25V
	C522	1-126-768-11	ELECT	2200MF	20%	16V	C596 C597	1-104-665-11	CERAMIC CHIP	100MF	20%	16V
	C523	1-107-902-11	ELECT	1MF	20%	50V	C598		CERAMIC CHIP			16V
0000		1-136-081-00	FILM	0.012MF	3%	2KV	C599	1-124-261-00		10MF 47MF	20% 20%	50V 25V
	C525 A	1-136-904-11	FILM	0.0115MF		20M2UÆ) 2KV	C1300	1-104-664-11	ELECT	4/MLF	2070	23 ¥
		100			(20	M4U/E/A)	C1301	1-104-664-11		47MF	20%	25V
90000		1-162-116-91		680PF 0.47MF	10% 20%	2KV 50V	C1302 C1304	1-163-131-00 1-104-664-11	CERAMIC CHIP	390PF 47MF	5% 20%	50V 25V
	C529	1-107-901-11	ELECI	U.4/MIP	20%	30 V	C1305	1-104-664-11		47MF	20%	25V
	C530	1-104-666-11		220MF	20%	25V		1-163-031-11	CERAMIC CHIP	0.01MF		50V
	C531	1-104-664-11	ELECT CERAMIC CHIP	47MF	20%	25V 50V	C1307	1-163-031-11	CERAMIC CHIP	0.01ME		50V
	C532 C533	1-102-212-00		820PF	10%	500V	C1308	1-126-933-11		100MF	20%	10V
	C534	1-107-662-11		22MF	20%	250V	C1309		CERAMIC CHIP		5%	50V
	C537	1-126-971-11	FIFCT	470MF	20%	50V	C1310 C1311	1-103-031-11	CERAMIC CHIP	0.01MF 47MF	20%	50V 25V
	C537	1-137-150-11		0.01MF	10%	100V	Q1311				-070	-
	C539	1-130-480-00	FILM	0.0056MF		50V	C1312		CERAMIC CHIP			50V 50V
	C540 C541	1-163-133-00	CERAMIC CHIP	4.7MF	5% 20%	50V 50V	C1313 C1314	1-104-664-11	CERAMIC CHIP ELECT	47MF	20%	25V
	C541	1-107-905-11	EDDC 1				C1315	1-104-664-11	ELECT	47MF	20%	25V
	C542	1-136-481-11		0.0022MF		100V 100V	C1316	1-163-031-11	CERAMIC CHIP	0.01MF		50V
	C543 C544	1-136-481-11 1-137-150-11		0.0022MF 0.01MF	10%	100V	C1317	1-104-664-11	ELECT	47MF	20%	25V
	C545	1-102-212-00	CERAMIC	820PF	10%	500V	C1318	1-104-664-11	ELECT	47MF	20%	25V
	C546	1-163-119-00	CERAMIC CHIP	120PF	5%	50V	C1319 C1320	1-163-037-11 1-104-664-11	CERAMIC CHIP	0.022MF 47MF	10% 20%	50V 25V
	C547	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C1321	1-104-664-11		47MF	20%	25V
	C548	1-102-212-00	CERAMIC	820PF	10%	500V				2203.47	1000	1617
	C549 C550	1-107-906-11 1-107-905-11		10MF 4.7MF	20% 20%	50V 50V	C1322 C1323	1-126-934-11	CERAMIC CHIP	220MF	20%	16V 50V
	C551	1-106-375-12		0.022MF	10%	100V	C1324		CERAMIC CHIP			50V
	0440	1 107 000 11	DY DOM	2201.45	200	253/	C1325		CERAMIC CHIP		100%	50V
	C552 C553	1-107-889-11 1-106-389-00		220MF 0.082MF	20% 10%	25V 200V	C1326	1-104-664-11	ELECT	47MF	20%	25V
	C554	1-130-736-11		0.01MF	5%	50V	C1327	1-163-031-11	CERAMIC CHIP	0.01MF		50V
	C555	1-126-964-11		10MF	20%	50V	C1328		CERAMIC CHIP		10.07	50V
	C556	1-126-964-11	ELECT	10MF	20%	50V	C1329 C1330	1-126-964-11	CERAMIC CHIP	10MF 0.01MF	20%	50V 50V
	C557	1-106-381-12		0.039MF	10%	100V	C1331	1-104-664-11		47MF	20%	25V
	C558	1-126-960-11		1MF	20%	50V	C1222	1-104 664 11	ELECT	ATME	noz_	25V
	C559 C561	1-136-173-00 1-136-159-00		0.47MF 0.033MF	5% 5%	50V 50V	C1332 C1333	1-104-664-11 1-104-664-11		47MF 47MF	20% 20%	25 V 25 V
	C564	1-126-964-11		10MF	20%	50V	C1334	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
	CECE	1 124 040 11	EI ECT	1MF	20%	50V	C1335 C1336	1-104-664-11 1-104-664-11		47MF 47MF	20% 20%	25V 25V
	C565 C566	1-126-960-11 1-137-150-11		0.01MF	10%	100V	C1330	4-104-004-11	LLL I	-4 / IAII.	4570	23 ₹
	C567	1-136-499-11	FILM	0.047MF	5%	50V	C1338		CERAMIC CHIP			50V
	C568	1-126-960-11	ELECT TANTALUM	1MF 3.3MF	20% 10%	50V 25V	C1339 C1340		CERAMIC CHIP CERAMIC CHIP			50V 50V
	C569	1-131-330-00	IAMIALUM	2.2IMI.	1070	23 4	C1340		CERAMIC CHIP		5%	50V
	C570	1-126-767-11		1000MF	20%	16V	C1342		CERAMIC CHIP		5%	50V
	C571	1-104-232-11	CERAMIC CHIP	U.UIMF	10%	50V	C1343	1-163-113-00	CERAMIC CHIP	68PF	5%	50V



REF. NO.	PART NO.	DESCRIPTION		E	REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
C1344 C1345 C1346	1-163-083-00 1-124-261-00 1-124-589-11		1PF 10MF 47MF	0.25PF 20% 20%	50V 50V 16V	C1525	1-162-114-00	CERAMIC	0.0047MF	2KV (20M4U/E/A)
C1347	1-163-031-11	CERAMIC CHIP	0.01MF		50V	C1530 C1531		CERAMIC CHIP CERAMIC CHIP		50V 10% 25V
C1348 C1349 C1350	1-163-117-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	100PF	5% 5% 10%	50V 50V 50V	C1532	1-104-664-11	ELECT	47MF	(20M4U/E/A) 20% 25V (20M4U/E/A)
C1351 C1352	1-126-960-11		1MF	20% 10%	50V 50V	C1534	1-104-664-11		47MF	20% 25V (20M4U/E/A)
C1353 C1354		CERAMIC CHIP CERAMIC CHIP		5%	50V 50V	C1535	1-104-664-11	ELECT	47MF	20% 25V (20M4U/E/A)
C1355 C1356	1-163-259-91 1-163-235-11	CERAMIC CHIP CERAMIC CHIP	220PF 22PF	5% 5%	50V 50V	C1536	1-136-165-00		0.1MF	5% 50V (20M4U/E/A)
C1357	1-104-661-91		330MF	20%	16V	C1537	1-130-783-00		0.33MF	10% 100V (20M4U/E/A)
C1358 C1359		CERAMIC CHIP CERAMIC CHIP		20% 5%	16V 50V 50V	C1538 C2501 C2502		CERAMIC CHIP CERAMIC CHIP		10% 50V 10% 50V 10% 50V
C1360 C1362 C1363	1-163-249-11	CERAMIC CHIP CERAMIC CHIP	82PF	5% 5%	50V 50V	C2302	1-104-232-11	CERAMIC CHIP	U.UIMIP	10% 304
C1364		CERAMIC CHIP		5%	50V			<connector></connector>		
C1365 C1366		CERAMIC CHIP		0.5PF 20%	50V 25V	CN101 CN102		CONNECTOR, B PLUG, CONNEC		BOARD 11P
C1367 C1369	1-104-664-11		47MF	20% 5%	25V 50V	CN104 CN105	*1-564-506-11	PLUG, CONNEC CONNECTOR, B	TOR 3P	BOARD 12P
C1370		CERAMIC CHIP		5%	50V	CN201		PLUG, CONNEC		
C1372 C1373	1-104-664-11 1-104-664-11		47MF 47MF	20% 20%	25V 25V	CN301 CN302		PLUG, CONNEC PLUG, CONNEC		
C1374 C1375	1-104-664-11 1-126-963-11	ELECT	47MF 4.7MF	20% 20%	25V 50V	CN303 CN305	*1-766-745-11	CONNECTOR, B PIN, CONNECTO	OARD TO	BOARD 12P
C1378		CERAMIC CHIP		5%	50V	CN401		PLUG, CONNEC		
C1380 C1381		CERAMIC CHIP CERAMIC CHIP		5% 5%	50V 50V	CN402 CN501		PLUG, CONNEC PLUG (MINIATU		2 (20M4U/E/A)
C1382 C1383	1-126-933-11 1-104-664-11		100MF 47MF	20% 20%	10V 25V	CN501 CN502	*1-573-964-11	PIN, CONNECTOR PI	OR (PC BO	ARD) 6P
C1384		CERAMIC CHIP			25V	CN503		PIN, CONNECTO		ARD) 6P
C1385 C1386	1-163-031-11	CERAMIC CHIP	0.01MF		50V 50V	CN504 CN505	*1-564-506-11	PLUG, CONNEC	TOR 3P	
C1387 C1388		CERAMIC CHIP CERAMIC CHIP		5%	50V 50V	CN507 CN508 CN509	1-766-240-11	TAB (CONTACT PIN, CONNECTO PLUG, CONNECTO	OR (PC BO	
C1393 C1400		CERAMIC CHIP CERAMIC CHIP		5%	50V 50V	CINDOS	1-304-300-11	TEOG, CONNEC	10K 31 (20	MHOILIN
C1401 C1402	1-136-173-00		0.47MF	5%	50V 50V			<composition< td=""><td>CIRCUIT</td><td>BLOCK></td></composition<>	CIRCUIT	BLOCK>
C1403	1-136-173-00	FILM	0.47MF	5%	50V	CP300 CP301	1-236-365-11	MODULE, TRAP MODULE, TRAP		
C1404 C1405	1-163-235-11	CERAMIC CHIP CERAMIC CHIP	22PF	10% 5%	25V 50V	CP302 CP303	1-808-654-21 1-466-162-61	MODULE FILTER BLOCK,	COM (CFI	3-4)
C1406 C1407	1-163-085-00	CERAMIC CHIP	2PF	0.25PF 0.25PF	50V					
C1408 C1500		CERAMIC CHIP		5%	50V	70100	0 210 404 40	<diode></diode>		
C1501 C1505	1-126-768-11 1-126-925-11	ELECT	2200MF 470MF 0.1MF	20% 20% 5%	16V 10V 50V	D100 D101 D102	8-719-800-76	DIODE 1SS226 DIODE 1SS226		
C1505 C1506 C1507	1-136-165-00 1-104-661-91		330MF	20% 5%	16V 50V	D102 D103 D104	8-719-045-70	DIODE 1SS226 DIODE 1SS226	РН3	
C1507	1-126-963-11	_	4.7MF	20%	50V	D105		DIODE 155226		
C1509 C1510	1-126-964-11 1-126-963-11	ELECT	10MF 4.7MF	20% 20%	50V 50V	D107 D108	8-719-800-76	DIODE 1SS226 DIODE 1S2836		
C1511 C1512		CERAMIC CHIP			50V 50V	D109 D111	8-719-801-78	DIODE 1SS184 DIODE DTZ6.2		
C1513	1-163-197-00	CERAMIC CHIP	470PF	5%	50V	D114	8-719-404-49	DIODE MAIII		
C1514 C1515	1-130-477-00 1-126-964-11	ELECT	0.0033MF 10MF	20%	50V 50V	D115 D116	8-719-404-49	DIODE DTZ6.2 DIODE MA111		
C1516 C1517	1-163-063-91 1-128-526-11	CERAMIC CHIP ELECT	0.022MF 100MF	10% 20%	50V 10V	D200 D300		DIODE DTZ13C DIODE 1SV232-1	грн3	
C1518 C1520	1-107-909-11		47MF	20%	16V	D301		DIODE MA111		
C1520 C1521 C1524	1-162-129-00 1-163-243-11 1-107-910-11	CERAMIC CHIP	150PF 47PF 100MF	10% 5% 20%	2KV 50V 50V	D303 D304 D305	8-719-801-78	DIODE 1SS184 DIODE 1SS226		
C1324	IV/-7IV-II	LLUC I	LUUIVII)M4U/E/A)			DIODE MAIII		



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D308 D309 D310 D311 D313	8-719-404-49 8-719-104-34 8-719-045-70	DIODE MA111 DIODE MA111 DIODE 1S2836 DIODE 1SV230TPH3 DIODE 1SS184		D518 D519 D520 D521 D522	8-719-404-49 8-719-801-78 8-719-404-49	DIODE MA111 DIODE MA111 DIODE 1SS184 DIODE MA111 DIODE DTZ6,2	
D314 D315 D317 D320 D322	8-719-404-49 8-719-404-49 8-719-404-49	DIODE MAIII DIODE MAIII DIODE MAIII DIODE MAIII DIODE MAIII		D522 D523 D524 D525 D526 D527	8-719-920-76 8-719-200-02 8-719-200-02 8-719-404-49	DIODE 1S20.76 DIODE 10E-2 DIODE 10E-2 DIODE MA111 DIODE 10E-2	
D323 D324 D325 D326 D327	8-719-045-70 8-719-801-78 8-719-045-70 8-719-104-34	DIODE MA111 DIODE 1SV230TPH3 DIODE 1SV184 DIODE 1SV230TPH3 DIODE 1S2836		D528 D529 D530 D531 D532	8-719-200-02 8-719-300-76 8-719-977-32 8-719-800-76	DIODE RH-1A DIODE 10E-2 DIODE RH-1A DIODE DTZ11B DIODE 1SS226	
D332 D333 D335 D336 D337	8-719-404-49 8-719-404-49 8-719-404-49 8-719-404-49	DIODE MA111 DIODE MA111 DIODE MA111 DIODE MA111 DIODE MA111		D533 D534 D535 D536 D537	8-719-404-49 8-719-404-49 8-719-800-76 8-719-800-76	DIODE EL1Z DIODE MA111 DIODE MA111 DIODE 1SS226 DIODE 1SS226	
D338 D339 D344 D345 D346	8-719-404-49 8-719-801-78 8-719-104-34 8-719-104-34	DIODE MA111 DIODE MA111 DIODE 1SS184 DIODE 1S2836 DIODE 1S2836		D538 D539 D540 D541 D542	8-719-920-76 8-719-404-49 8-719-801-78 8-719-404-49	DIODE 1SS226 DIODE 1S2076 DIODE MA111 DIODE MA111	
D347 D360 D361 D362 D363	1-216-295-91 1-216-295-91 8-719-158-40 8-719-158-40	DIODE 1S2836 CONDUCTOR, CHIP CONDUCTOR, CHIP DIODE RD10SB1 DIODE RD10SB1		D543 D544 D545 D546 D547	8-719-404-49 8-719-404-49 8-719-901-19 8-719-404-49	DIODE MA111 DIODE MA111 (20M4U/E/A) DIODE MA111 (20M4U/E/A) DIODE V11N (20M4U/E/A) DIODE MA111	
D364 D365 D381 D401 D404	8-719-404-49 8-719-404-49 8-719-404-49	DIODE 1S2836 DIODE MA111 DIODE MA111 DIODE MA111 DIODE 1SS226		D548 DL300		DIODE RD16ESB3 (20M4U/E/A) <delay line=""> DELAY LINE, Y</delay>	
D405 D406 D407 D408 D410	8-719-404-49 8-719-404-49 8-719-404-49	DIODE 1SS184 DIODE MA111 DIODE MA111 DIODE MA111 DIODE MA111		DL301 DL401	1-415-632-11	DELAY LINE, Y DELAY LINE <ferrite bead=""></ferrite>	
D411 D414 D415 D416 D417	8-719-801-78 8-719-801-78 8-719-801-78	DIODE MA111 DIODE 1SS184 DIODE 1SS184 DIODE 1SS184 DIODE 1SS184		FB501	1-410-396-41	FERRITE BEAD INDUCTOR 0.45 <filter></filter>	SUH
D418 D421 D422 D423	8-719-801-78 8-719-404-49 8-719-404-49 8-719-800-76	DIODE 1SS184 DIODE MA111 DIODE MA111 DIODE 1SS226		FL300 FL401	1-236-547-11 1-236-364-11	TRAP, LC FILTER, BAND PASS <ic></ic>	
D424 D425 D427 D500 D501 D502	8-719-800-76 8-719-404-49 8-719-404-49 8-719-977-03	DIODE MA111 DIODE 1SS226 DIODE MA111 DIODE MA111 DIODE DTZ5.6B DIODE UF5406		IC101 IC101 IC102 IC103 IC104	8-759-462-05 8-759-354-28 8-759-008-48	SOCKET, IC (20M2U/E) IC uPD78P018FYCW-M01 (20M4 IC ST24C02FM6TR IC MC74HC86F IC uPD6451AGT-632-E2	U/E/A)
D503 D504 D505 D506 D507	8-719-404-49 8-719-901-83 8-719-028-72 8-719-033-83	DIODE MA111 DIODE 1SS83 DIODE RGP02-17EL-6433 DIODE ERD07-15 DIODE 1SS226	6 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	IC105 IC106 IC107 IC108 IC109	8-759-196-70 8-759-196-70 8-759-042-02	IC M62358FP-E1 IC M62358FP-E1 IC M62358FP-E1 IC S-80743AL-A7-S IC M62358FP-E1	
D508 D509 D510 D512 D513	8-719-800-76 8-719-404-49 8-719-302-43 8-719-979-80	DIODE 1SS226 DIODE MA111 DIODE EL1Z DIODE UF5406 DIODE MA111		IC110 IC111 IC112 IC200 IC301	8-759-009-22 8-759-354-27 8-759-420-04 8-752-053-21	IC CXA1211M	
D514 D515 D516 D517	8-719-971-20 8-719-404-49	DIODE ERC38-06 DIODE ERC38-06 DIODE MA111 DIODE MA111		IC302 IC303 IC304 IC305 IC306	8-759-932-67 8-759-631-08	IC LM358D IC CXA1214P IC BU4053BCF IC M51279FP IC NJM2245M	



Les composants identifies par une trame et une marque \(\Lambda\) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark \triangle are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
IC309	8-759-711-32	IC NJM2245M		L314	1-412-011-31	INDUCTOR C	HIP 27UH
IC310	8-759-932-67	IC BU4053BCF		L316	1-412-011-31	INDUCTOR C	HIP 27UH
IC311		IC MC14066BF		L317 L319		INDUCTOR 18 INDUCTOR 10	
IC312 IC313		IC NJM2245M IC MM1113XFF		הונים	1-408-421-00	INDUCTOR IC	OUH
10313	0 737-207 07			L320		INDUCTOR 47	
IC314		IC MM1113XFF		L401		INDUCTOR 4	
IC315 IC316		IC BU4053BCF IC MM1111XF		L402 L403		INDUCTOR C	
IC317		IC MC14538BF		L404		INDUCTOR C	
IC318	8-759-009-67	IC MC14584BF		T 405	1 400 410 00	DIDUCTOR (0.00
IC320	8-750-287-80	IC MM1113XFF		L405 L406		INDUCTOR 68 INDUCTOR 68	
IC321		IC MM1113XFF		L407	1-408-413-00	INDUCTOR 22	2UH
IC322		IC MM1113XFF		L408		INDUCTOR 22	
IC323 IC324		IC MM1113XFF IC MM1113XFF		L409	1-410-213-31	INDUCTOR C	nif 620fi
				L500		COIL (WITH (
IC325		IC MM1113XFF		L501 L502		COIL, CHOKE	
IC326 IC327		IC BA10324AF IC MC14066BF		L502		INDUCTOR 33	
IC350	8-759-100-96	IC uPC4558G2		L504		INDUCTOR 18	
IC401	8-759-196-69	IC BA7655AF-E2		L505	1 410 671 31	INDUCTOR 47	71114
IC402	8-752-053-21	IC CXA1211M		L506			JST CORE 3.9mH (20M4U/E/A)
IC403		IC MC14066BF		L506	1-459-104-00	COIL, DUST C	CORE (20M2U/E)
IC404 IC405		IC CXA1739S IC BU4053BCF		L507 L508		INDUCTOR 1: INDUCTOR 2:	
IC405		IC LM358D		L300			
				L509			JST CORE 3.9mH
IC407 IC408		IC MC14066BF IC XRA10393F		L510 L512	1-459-106-00 1-459-232-11	COIL, DUST C	ORE
IC409		IC BA10324AF		L513		INDUCTOR 3.	9mH
IC410		IC MC14052BF		L514	1-459-104-00	COIL, DUST C	CORE
IC411	8-759-008-92	: IC MC14024BF		L515	1-459-059-00	COIL, DUST C	ORE
IC412	8-759-932-67	IC BU4053BCF		L517		INDUCTOR 68	
IC413		IC BU4053BCF					
IC500 IC502		IC H8D7249 IC MC14538BF				<neon lame<="" td=""><td>></td></neon>	>
IC503		IC MC14538BF					
IC504	8-752-052-21	IC CXA1211M		NL500	1-519-526-11	LAMP, NEON	
IC505		IC XRA17812T					
IC506		IC MC14538BF				<transisto< td=""><td>R></td></transisto<>	R>
IC507 IC508		IC uPC1377C IC CXA1211M		Q101	8-729-027-59	TRANSISTOR	DTC144EKA-T146
	0 752 055 21	10 0711121111		Q102	8-729-216-22	TRANSISTOR	2SA1162-G
IC509		IC LM358D		Q103		TRANSISTOR TRANSISTOR	
IC510 IC511		IC MC14538BF IC LA6500-FA (20M4U/E/A)		Q104 Q105			DTA144EKA-T146
IC512		IC LM7912CT (20M4U/E/A)					
				Q107			DTA144EKA-T146
		<chip conductor=""></chip>		Q108 Q109		TRANSISTOR TRANSISTOR	
				Q110		TRANSISTOR	
JR302 JR307		CONDUCTOR, CHIP CONDUCTOR, CHIP		Q111	8-729-027-38	TRANSISTOR	DTA144EKA-T146
JR310		CONDUCTOR, CHIP		Q112	8-729-422-29	TRANSISTOR	2SD601A-S
		•		Q113	8-729-422-29	TRANSISTOR	2SD601A-S
		<coil></coil>		Q114 Q200		TRANSISTOR TRANSISTOR	
				Q201		TRANSISTOR	
L101		INDUCTOR 33UH		0100	9 700 400 00	TRANSISTOR	2506014 6
L102 L104) INDUCTOR 47UH) INDUCTOR 220UH		Q300 Q301		TRANSISTOR	
L105	1-410-482-31	INDUCTOR 100UH		Q302		TRANSISTOR	
L300	1-410-478-11	INDUCTOR 47UH		Q303		TRANSISTOR TRANSISTOR	
L301	1-408-411-00	INDUCTOR 15UH		Q305	0-147-444-29	i kanasa i UK	WD001A-0
L302	1-412-008-31	INDUCTOR CHIP 15UH		Q306		TRANSISTOR	
L303 L304		INDUCTOR 39UH INDUCTOR CHIP 15UH		Q307 Q308		TRANSISTOR TRANSISTOR	
L305		INDUCTOR CHIP 130H INDUCTOR CHIP 2.2UH		Q309		TRANSISTOR	
				Q310		TRANSISTOR	
L306 L307) INDUCTOR 39UH) INDUCTOR 15UH		Q311	8-729-422-37	TRANSISTOR	2SB709A-R
L308		INDUCTOR 4.7UH		Q312	8-729-422-29	TRANSISTOR	2SD601A-S
L309	1-410-470-11	INDUCTOR 10UH		Q313		TRANSISTOR	
L311	1-410-470-11	INDUCTOR 10UH		Q314 Q315		TRANSISTOR	DTA144EKA-T146 2SB709A-R
L312	1-412-011-31	INDUCTOR CHIP 27UH		_			
				Q316	8-729-422-29	TRANSISTOR	23D001A-2



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q318 Q319 Q320 Q321	8-729-422-29 8-729-422-29	TRANSISTOR 2SB709A-R TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S		Q419 Q420 Q421 Q422 Q423	8-729-422-37 8-729-027-59 8-729-120-28	TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SD601A-S	
Q322 Q323 Q324 Q325 Q326	8-729-027-59 8-729-027-59 8-729-422-29	TRANSISTOR 2SD601A-S TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S		Q424 Q425 Q426 Q428 Q429	8-729-027-59 8-729-027-59 8-729-027-59 8-729-422-37	TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R	
Q327 Q328 Q329 Q330 Q331	8-729-141-53 8-729-141-53 8-729-422-37	TRANSISTOR 2SB709A-R TRANSISTOR 2SK94-X2X3X4 TRANSISTOR 2SK94-X2X3X4 TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R		Q430 Q431 Q432 Q433 Q434	8-729-422-29 8-729-422-29 8-729-422-29 8-729-027-59	TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SD601A-S	
Q332 Q333 Q334 Q335 Q336	8-729-422-29 8-729-422-37 8-729-422-29	TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SD601A-S TRANSISTOR 2SB709A-R TRANSISTOR 2SD601A-S TRANSISTOR 2SK94-X4		Q435 Q436 Q437 Q438 Q439	8-729-027-59 8-729-027-59 8-729-027-59 8-729-422-29	TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SD601A-S TRANSISTOR 2SA1162-G	
Q337 Q338 Q339 Q341 Q342	8-729-120-28 8-729-422-37 8-729-920-39	TRANSISTOR 2SD601A-S TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SB709A-R TRANSISTOR IMT1US TRANSISTOR IMT1US		Q440 Q441 Q442 Q443 Q444	8-729-422-29 8-729-141-53 8-729-422-29 8-729-216-22	TRANSISTOR 2SD601A-S TRANSISTOR 2SK94-X2X3X4 TRANSISTOR 2SD601A-S TRANSISTOR 2SA1162-G TRANSISTOR 2SD601A-S	
Q343 Q345 Q346 Q347 Q348	8-729-422-29 8-729-422-29 8-729-027-59	TRANSISTOR IMT1US TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SB709A-R		Q445 Q446 Q447 Q448 Q449	8-729-027-59 8-729-027-59 8-729-027-59 8-729-027-59	TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146	
Q349 Q350 Q351 Q352 Q353	8-729-422-37 8-729-422-29 8-729-422-29	TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S		Q500 Q501 Q502 Q505 Q506	8-729-422-37 8-729-821-87 8-729-119-80 8-729-422-29	TRANSISTOR 2SB709A-R TRANSISTOR 2SD1878-CA TRANSISTOR 2SC2688-LK TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S	
Q354 Q355 Q356 Q357 Q358	8-729-422-29 8-729-027-59 8-729-422-29	TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S		Q507 Q508 Q509 Q510	8-729-422-29 8-729-422-37 8-729-027-38 8-729-027-59	TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR DTA144EKA-T1 46 TRANSISTOR DTC144EKA-T1 46 TRANSISTOR 2SD601A-S	
Q359 Q360 Q361 Q362 Q363	8-729-907-26 8-729-027-38 8-729-422-29	TRANSISTOR 2SB709A-R TRANSISTOR IMX1 TRANSISTOR DTA144EKA-T146 TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S		Q511 Q513 Q514 Q515 Q516	8-729-122-03 8-729-901-00 8-729-106-92 8-729-027-59	TRANSISTOR 2SA1220A-P TRANSISTOR DTC124EK TRANSISTOR 2SC2690A-Q TRANSISTOR DTC144EKA-F1 46	
Q364 Q366 Q367 Q368 Q369	8-729-422-37 8-729-422-37 8-729-422-37	TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R TRANSISTOR DTA144EKA-T146		Q517 Q518 Q519 Q520 Q522	8-729-027-59 8-729-027-59 8-729-021-82 8-729-422-29	TRANSISTOR DTC144EKA-F146 TRANSISTOR DTC144EKA-F146 TRANSISTOR DTC144EKA-F146 TRANSISTOR 2SD2396K TRANSISTOR 2SD201A-S TRANSISTOR 2SD201A-S	
Q372 Q373 Q401 Q402 Q403	8-729-027-59 8-729-422-29 8-729-422-29	TRANSISTOR DTC144EKA-T146 TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR DTC144EKA-T146		Q523 Q524 Q525 Q526	8-729-422-29 8-729-422-37 8-729-020-07		20M4U/E/A)
Q404 Q405 Q406 Q407 Q408	8-729-422-37 8-729-422-29 8-729-422-29	TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R TRANSISTOR 2SD601A-S TRANSISTOR 2SD601A-S TRANSISTOR 2SB709A-R		Q527 Q528 Q529 Q530	8-729-802-71 8-729-027-59 8-729-027-59	TRANSISTOR 2SA1407-D TRANSISTOR DTC144EKA-7146 TRANSISTOR DTC144EKA-7146	2ÓM4U/E/A)
Q409 Q410 Q411 Q412 Q413	8-729-907-26 8-729-422-29 8-729-216-22	TRANSISTOR 2SB709A-R TRANSISTOR IMX1 TRANSISTOR 2SD601A-S TRANSISTOR 2SA1162-G TRANSISTOR 2SK94-X2X3X4		Q531 Q532 Q2501	8-729-927-31	TRANSISTOR 2SA1162-G (2)M4U TRANSISTOR IRF520 (20M4)/E// TRANSISTOR 2SD601A-S <resistor></resistor>	
Q414 Q415 Q416 Q417 Q418	8-729-422-37 8-729-422-37 8-729-422-37	TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R TRANSISTOR 2SB709A-R TRANSISTOR 2SC1623-L5L6		R101 R102 R103 R104 R105	1-216-025-91 1-216-025-91 1-216-073-00	METAL GLAZE 100	1/10W 1/10W 1/10W 1/10W 1/10W



REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION		F	REMARK
R106 R107		METAL GLAZE 4.7 METAL GLAZE 4.7		1/10W 1/10W	R313	1-216-648-11	METAL CHIP	750	0.50%	1/10W
R107		METAL GLAZE 4.7		1/10W	R314	1-216-099-00	METAL GLAZE	120K	5%	1/10W
R109		METAL GLAZE 4.7		1/10W	R315		METAL GLAZE		5%	1/10W
R110	1-216-073-00	METAL GLAZE 10	K 5%	1/10W	R316 R317		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R113	1-216-085-00	METAL GLAZE 33	K 5%	1/10W	R318		METAL GLAZE		5%	1/10W
R117		METAL GLAZE 10		1/10W	D210	1 216 067 00	METAL CLATE	E CV	e at	1/10W
R119 R124		METAL GLAZE 10 CONDUCTOR, CHI		1/10W	R319 R320		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R130		METAL GLAZE 12		1/10W	R321		METAL GLAZE		5%	1/10W
2100	1 014 045 00	METAL OF ACT AC	ov en	1/1007	R322		METAL GLAZE		5%	1/10W
R132 R133		METAL GLAZE 4.7 METAL GLAZE 56		1/10W 1/10W	R323	1-210-109-00	METAL GLAZE	330K	5%	1/10 W
R134		METAL GLAZE 4.7	K 5%	1/10W	R324		METAL GLAZE		5%	1/10W
R135		METAL GLAZE 33		1/10W	R325 R326		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R137	1-210-005-00	METAL GLAZE 4.7	K 5%	1/10W	R328		METAL GLAZE		5%	1/10W
R140		METAL GLAZE 22		1/10W	R329	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W
R141 R144		METAL GLAZE 33 CONDUCTOR, CHI		1/10W	R330	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R149		METAL GLAZE 4.7		1/10W	R331		METAL GLAZE		5%	1/10W
R151	1-216-061-00	METAL GLAZE 3.3	K 5%	1/10W	R332		METAL GLAZE		5%	1/10W
R154	1-216-065-00	METAL GLAZE 4.7	K 5%	1/10W	R333 R334		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R155	1-216-083-00	METAL GLAZE 27	K 5%	1/10W	-					
R157		METAL GLAZE 4.7		1/10W	R335		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R158 R159		CONDUCTOR, CHI		1/10W	R336 R337		METAL GLAZE		5%	1/10W
				4 14 0 77 8	R338		METAL GLAZE		5%	1/10W
R160 R162		METAL GLAZE 3.3 METAL GLAZE 4.7		1/10W 1/10W	R339	1-216-071-00	METAL GLAZE	8.2K	5%	1/10 W
R163		METAL GLAZE 4.7		1/10W	R340	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R164		METAL GLAZE 5.0		1/10W	R341		METAL CHIP	8.2K	0.50%	1/10W
R165	1-216-295-91	CONDUCTOR, CHI	r		R342 R343		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R167		METAL GLAZE 3.3		1/10W	R344		METAL GLAZE		5%	1/10W
R168		METAL GLAZE 33		1/10W 1/10W	R345	1 216 062 01	METAL GLAZE	3 OV	5%	1/10W
R169 R171		METAL GLAZE 27 METAL GLAZE 18		1/10W	R346		METAL GLAZE		5%	1/10W
R172		CONDUCTOR, CHI			R347		METAL GLAZE		5%	1/10W
R177	1-216-214-00	METAL GLAZE 4.7	K 5%	1/8W	R348 R349		METAL GLAZE METAL CHIP	62K	5% 0.50%	1/10W 1/10W
R181		METAL GLAZE 4.7		1/10W	1000	1 210 074 11	DITE CITE	V221		
R184		METAL CHIP 82			R350		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R185 R187		METAL GLAZE 10 METAL GLAZE 3.3		1/10W 1/10W	R351 R352		METAL CHIP	10K	0.50%	1/10W
				4 44 0000	R353		METAL GLAZE		5%	1/10W
R189 R190		METAL GLAZE 10 METAL GLAZE 1K		1/10W 1/10W	R354	1-216-119-00	METAL GLAZE	820K	5%	1/10W
R192		METAL GLAZE 10		1/10W	R355		METAL GLAZE		5%	1/10W
R195		METAL GLAZE 8.2		1/10W	R356		METAL GLAZE METAL GLAZE		5%	1/10W
R197	1-210-001-00	METAL GLAZE 3.3	5K 5%	1/10W	R357 R358		METAL GLAZE		5% 5%	1/10W 1/10W
R199		CONDUCTOR, CHI			R359		METAL GLAZE		5%	1/10W
R200 R201		METAL CHIP 30 METAL GLAZE 1K		5 1/10W 1/10W	R360	1-216-030-00	METAL GLAZE	300	5%	1/10W
R202	1-212-857-00			1/4W F	R361		METAL GLAZE		5%	1/10W
R203	1-260-095-11	CARBON 47	0 5%	1/2W	R362		METAL GLAZE		5%	1/10W
R204	1-260-072-11	CARBON 4.3	5%	1/2W	R363 R364		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R205	1-216-647-11	METAL CHIP 68	0.50%	1/10W	•					
R206 R207		METAL GLAZE 10 METAL GLAZE 4.7		1/10W 1/10W	R366 R367		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R208		METAL GLAZE 4.7		1/10W	R368		METAL GLAZE		5%	1/10W
D000				1 (1 0 7 7 7	R371		METAL GLAZE		5%	1/10W
R209 R210		METAL GLAZE 10 METAL GLAZE 3.3		1/10W 1/10W	R372	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R211	1-249-393-11	CARBON 10	5%	1/4W F	R373		METAL CHIP	560	0.50%	1/10W
R237		METAL GLAZE 47		1/10W	R374		METAL CHIP	680	0.50%	1/10W
R301	1-410-023-91	METAL GLAZE 10	0 5%	1/10W	R375 R376		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R302		METAL GLAZE 10		1/10W	R378		METAL GLAZE		5%	1/10W
R303 R304		METAL GLAZE 10 METAL GLAZE 10		1/10W 1/10W	R379	1-216-060-00	METAL GLAZE	6 8 K	5%	1/10W
R305		CONDUCTOR, CHI		1/10**	R380		METAL GLAZE		5%	1/10W
R306		CONDUCTOR, CHI			R381		METAL GLAZE		5%	1/10W
R307	1-216-115-00	METAL GLAZE 56	0K 5%	1/10W	R382 R383		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R308	1-216-065-00	METAL GLAZE 4.7	K 5%	1/10W						
R311 R312		METAL GLAZE 1.8		1/10W	R384		METAL GLAZE		5% 5%	1/10W 1/10W
K)12	1-210-0/3-00	METAL GLAZE 10	K 5%	1/10W	R385	1-210-000-00	METAL GLAZE	4./A	J-70	1/1044



REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION		ı	REMARK
				-01	1 /1 011/	D460	1 01 6 00 6 01		N	•	
R386 R387	1-216-029-00	METAL GLAZE	150	5% 5%	1/10W 1/10W	R460		CONDUCTOR, C		0.500	1/100
R388	1-216-039-00	METAL GLAZE	390	5%	1/10W	R462 R463		METAL CHIP METAL GLAZE	1K 3 9K	0.50% 5%	1/10W 1/10W
R389 ·	1-216-649-11	METAL CHIP	820	0.50%	1/10W	R464		METAL GLAZE		5%	1/10W
R390	1-249-393-11		10	5%	1/4W F	R465		METAL GLAZE		5%	1/10W
R391		METAL GLAZE		5% 5%	1/10W 1/10W	R466	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R393 R394		METAL GLAZE METAL GLAZE		5%	1/10W	R467	1-216-121-91	METAL GLAZE	1M	5%	1/10W
1054	1 210 005 00					R468		METAL GLAZE		5%	1/10W
R395		METAL CHIP		0.50%	1/10W	R469		METAL GLAZE		5%	1/10W
R396 R397		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R470 R471		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R398		METAL GLAZE		5%	1/10W	K-7/1	1-210-109-00	METAL OLALL	330K	370	1/10**
R399		METAL GLAZE		5%	1/10W	R472	1-216-077-00	METAL GLAZE	15K	5%	1/10W
			40077	E 01	1 (10)	R473		METAL GLAZE		5%	1/10W
R400 R401		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R474 R475		METAL CHIP METAL GLAZE	820 100	0.50% 5%	1/10W 1/10W
R402		METAL GLAZE		5%	1/10W	R476		METAL GLAZE		5%	1/10W
R403	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W						
R404	1-216-029-00	METAL GLAZE	150	5%	1/10W	R477		METAL GLAZE		5%	1/10W
R405	1-216-121-01	METAL GLAZE	1M	5%	1/10W	R478 R479		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R406		METAL GLAZE		5%	1/10W	R480		METAL GLAZE		5%	1/10W
R407	1-216-085-00	METAL GLAZE	33K	5%	1/10W	R481	1-216-033-00	METAL GLAZE	220	5%	1/10W
R408		METAL CHIP		0.50%	1/10W	D 400	1 016 067 00	METAL CLASE	0.075	***	1/1033
R410	1-216-069-00	METAL GLAZE	78.0	5%	1/10W	R482 R483		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R411	1-216-033-00	METAL GLAZE	220	5%	1/10W	R484		METAL CHIP	1K	0.50%	1/10W
R412		METAL GLAZE		5%	1/10W	R485		METAL GLAZE		5%	1/10W
R413		METAL GLAZE		5%	1/10W	R486	1-216-681-11	METAL CHIP	18K	0.50%	1/10 W
R414	1-210-0/3-00	METAL GLAZE	IUK	5%	1/10W 0M4U/E/A)	R487	1-216-653-11	METAL CHIP	1.2K	0.50%	1/10W
R414	1-216-295-91	CONDUCTOR, C	CHIP (20M2)		0	R488		METAL GLAZE		5%	1/10W
						R489		METAL GLAZE		5%	1/10W
R416		METAL GLAZE		5%	1/10W	R490		METAL GLAZE		5%	1/10W
R417 R418		METAL CHIP METAL CHIP		0.50% 0.50%	1/10W 1/10W	R491	1-210-003-91	METAL GLAZE	3.9K	5%	1/10 W
R420		METAL GLAZE		5%	1/10W	R492	1-216-085-00	METAL GLAZE	33K	5%	1/10W
			1075		0M4U/E/A)			CONDUCTOR, C			4 44 0 2 2 2
R422	1-216-073-00	METAL GLAZE	IUK	5%	1/10W	R494 R495		METAL CHIP METAL CHIP	75K 1K	0.50% 0.50%	1/10W 1/10W
R423	1-216-073-00	METAL GLAZE	10K	5%	1/10W	R496		METAL GLAZE		5%	1/10W
R424	1-216-033-00	METAL GLAZE	220	5%	1/10W						
R425		METAL GLAZE		5%	1/10W	R497		METAL CHIP	1.2K	0.50%	1/10W
R426 R427		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R498 R499		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
1(42)	1-210-055-00	METAL OLI LE	220	5 10	171011	R500		METAL GLAZE		5%	1/10W
R428		METAL GLAZE		5%	1/10W	R501	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R429		METAL GLAZE METAL GLAZE		5% 5%	1/10W	D 600	1 216 677 11	METAL CUID	1012	0500	1/1037
R430 R431		METAL GLAZE		5%	1/10W 1/10W	R502 R503		METAL CHIP METAL CHIP	12K 12K	05 0% 05 0%	1/10 W 1/10 W
R432		METAL GLAZE		5%	1/10W	R504		METAL GLAZE		5%	1/10W
						R505		METAL GLAZE		5%	1/10W
R434 R435		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R506	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R436		METAL GLAZE		5%	1/10W	R507	1-216-083-00	METAL GLAZE	27K	5%	1/10 W
R437		METAL GLAZE		5%	1/10W	R508		METAL GLAZE		5%	1/10W
R438	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	R509	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R439	1-216-022-00	METAL GLAZE	220	5%	1/10W	R510 R511		METAL GLAZE METAL GLAZE		5% 5%	1/10 W 1/10 W
R440		METAL GLAZE		5%	1/10W	AJII	1.210-077-00	WILL AL OLALE	1201	שוכ	1/10 **
R441		METAL CHIP		0.50%	1/10W	R512	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W
R442		METAL CHIP		0.50%	1/10W	R513		CONDUCTOR, C			
R443	1-216-049-91	METAL GLAZE	IK :	5%	1/10W	R514 R515		CONDUCTOR, C METAL CHIP	HIP 10K	050%	1/10 W
R444	1-216-105-91	METAL GLAZE	220K	5%	1/10W	R516		METAL CHIP		5%	1/10W
R445	1-216-095-00	METAL GLAZE	82K	5%	1/10W						
R447		METAL GLAZE		5% 5%	1/10W	R517	1-214-896-81		20K	1%	1/2W
R448 R449		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R518 R519	1-260-123-11	METAL GLAZE	100K 47	5% 5%	1/2W 1/10W
ACT-7	1 210-075-00	conet				R520	1-249-423-11		3.3K	5%	1/10W 1/4W F
R450		METAL GLAZE		5%	1/10W	R521		METAL GLAZE		5%	1/10W
R451		METAL GLAZE METAL CHIP		5% 0.50%	1/10W 1/10W	D 522	1_215 902 11	METAL OVER	11/	En.	2337
R452 R453		METAL CHIP		0.30% 5%	1/10W	R523 R524		METAL OXIDE METAL GLAZE		5% 5%	2W F 1/10W
R455		METAL GLAZE		5%	1/10W	R525		METAL GLAZE		5%	1/10 W
	1.014.055.00	LOTTAL OF LOT	1 677	em	1.000	R526	1-216-089-91	METAL GLAZE	47K	5%	1/10 W
R456 R457		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R527	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R458		METAL GLAZE		5%	1/10W	R528	1-216-089-91	METAL GLAZE	47K	5%	1/10 W
R459	1-216-649-11	METAL CHIP	820	0.50%	-1/10W	R529		METAL GLAZE		5%	1/10 W



REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION		F	REMARK
R530 R531	1-216-077-00	METAL OXIDE METAL GLAZE	15K	5% 5%	2W F 1/10W	R592 R593	1-247-688-11 1-216-647-11	CARBON METAL CHIP	10 680	5% 0.50%	1/4W F 1/10W
R532 R533 R534 R535 R536	1-247-723-71 1-216-085-00 1-249-448-11	METAL GLAZE	6.8K 33K 1.2	5% 5% 5% 5%	3W F 1/4W F 1/10W 1/4W F 1/10W	R594 R595 R596 R597 R598	1-214-754-00 1-249-417-11	METAL GLAZE METAL	11K 1K	5% 5% 1% 5%	1/2W 1/10W 1/4W 1/4W F 1/10W
R537 R539 R540 R541 R542	1-216-065-00 1-216-113-00 1-249-383-11 1-216-057-00	METAL GLAZE	4.7K 470K 1.5	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/4W F 1/10W 1/4W F	R599 R1103 R1104 R1105 R1106	1-216-077-00 1-216-699-11 1-216-073-00	METAL CHIP METAL GLAZE METAL CHIP METAL GLAZE METAL GLAZE	100K 10K	0.50% 5% 0.50% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R543 R544 R545 R546 R547 R548	1-216-073-00 1-249-425-11 1-216-091-00	METAL GLAZE METAL GLAZE	82K 10K 4.7K 56K	5% 5% 5% 5% 5%	1/10W 1/10W 1/4W F 1/10W 1/10W	R1107 R1108 R1111 R1112 R1113	1-216-681-11 1-216-065-00 1-216-065-00	METAL GLAZE METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	18K 4.7K 4.7K	5% 0.50% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R549 R550 R551 R552 R553	1-216-677-11 1-216-053-00 1-216-077-00 1-216-033-00	METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	12K 1.5K 15K 220	0.50% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R1114 R1115 R1116 R1117 R1118	1-216-049-91 1-216-677-11 1-216-069-00	METAL GLAZE METAL GLAZE METAL CHIP METAL GLAZE METAL GLAZE	1K 12K 6.8K	5% 5% 0.50% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R554 R555 R556 R558 R559	1-216-692-11 1-216-463-00 1-215-868-00	METAL GLAZE METAL CHIP METAL OXIDE METAL OXIDE METAL GLAZE	51K 12K 680	5% 0.50% 5% 5% 5%	1/10W 1/10W 2W F 1W F 1/10W	R1119 R1120 R1123 R1124 R1125	1-216-089-91 1-216-071-00 1-216-113-00	METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	8.2K 470K	0.50% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R560 R561 R562	1-216-091-00 1-216-049-91 1-247-692-71	METAL GLAZE METAL GLAZE CARBON	56K 1K 22	5% 5% 5%	1/10W .1/10W 1/4W F (20M2U/E)	R1126 R1128 R1129 R1130 R1131	1-216-065-00 1-216-071-00 1-216-049-91	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 8.2K 1K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R562 R563	1-247-696-11 1-216-017-91	METAL GLAZE	47 47	5% 5%	1/4W F 20M4U/E/A) 1/10W	R1132 R1133	1-216-069-00	METAL GLAZE METAL GLAZE	6.8K	5% 5%	1/10W 1/10W
R564 R565 R566	1-216-033-00	METAL GLAZE METAL GLAZE METAL CHIP		5% 5% 0.50%	1/10W 1/10W 1/10W	R1134 R1136 R1137	1-216-097-91	METAL GLAZE METAL GLAZE METAL GLAZE	100K	5% 5% 5%	1/10W 1/10W 1/10W
R566		METAL CHIP	47K	0.50%	(20M2U/E)	R1138 R1139 R1140	1-216-055-00	METAL GLAZE METAL GLAZE METAL CHIP		5% 5% 0.50%	1/10W 1/10W 1/10W
R567 R568		METAL GLAZE		5% ` 5%	1/10W 1/10W	R1141 R1142		METAL GLAZE METAL CHIP	10K 1.2K	5% 0.50%	1/10W 1/10W
R569 R571 R572 R573	1-260-119-11 1-216-065-00 1-216-059-00		47K 4.7K 2.7K	5% 5% 5% 5%	1/2W 1/10W 1/10W 1/10W	R1143 R1144 R1145 R1146 R1147	1-216-073-00 1-216-067-00 1-216-057-00	METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	5.6K 2.2K	0.50% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R574 R575 R576 R577	1-249-383-11 1-216-101-00	METAL GLAZE CARBON METAL GLAZE METAL GLAZE	1.5 150K	5% 5% 5%	1/10W 20M4U/E/A) 1/4W F 1/10W 1/10W	R1151 R1155 R1161	1-216-081-00 1-216-133-00 1-218-776-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL CHIP	22K 3.3M 1M	5% 5% 5% 0.50%	1/10W 1/10W 1/10W 1/10W
R578	1-216-693-11	METAL CHIP	56K	0.50%	20M4U/E/A) 1/10W	R1162 R1163		METAL CHIP METAL GLAZE	470K 220	0.50% 5%	1/10W 1/10W
R580 R581 R582	1-216-049-91	METAL GLAZE METAL GLAZE METAL GLAZE	1K	5% 5% (2	1/10W 1/10W 20M4U/E/A) 1/10W	R1164 R1165	1-216-049-91 1-216-049-91 1-216-097-91	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 1K 100K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W
R583 R584	1-216-039-00	METAL GLAZE METAL GLAZE	390	5% 5%	1/10W 1/10W 20M4U/E/A)	R1169 R1170 R1171	1-216-097-91 1-216-089-91 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE	100K 47K 33K	5% 5% 5%	1/10W 1/10W 1/10W
R584 R585		METAL GLAZE METAL GLAZE		5% 5%	1/10W (20M2U/E) 1/10W	R1172 R1173		METAL GLAZE CONDUCTOR, O		5%	1/10W
R586 R587 R588	1-216-686-11 1-216-675-11 1-216-077-00	METAL CHIP METAL CHIP METAL GLAZE	30K 10K 15K	0.50% 0.50% 5%	1/10W 1/10W 1/10W	R1174 R1177 R1179 R1180	1-216-071-00 1-216-041-00 1-216-089-91	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	8.2K 470 47K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W
R589 R590 R591	1-216-081-00	METAL GLAZE METAL GLAZE METAL CHIP		5% 5% 0.50%	1/10W 1/10W 1/10W	R1182 R1183 R1184	1-216-071-00	METAL GLAZE METAL GLAZE METAL GLAZE	8.2K	5% 5% 5%	1/10W 1/10W 1/10W



REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
R1185 R1186 R1187	1-216-131-11 1-216-071-00	METAL GLAZE 8.2K METAL GLAZE 2.7M METAL GLAZE 8.2K	5% 5% 5%	1/10W 1/10W 1/10W	R1357 R1358 R1359 R1360	1-216-071-00 1-216-099-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	8.2K 120K 4.7K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W
R1188 R1189 R1190 R1191 R1192	1-216-071-00 1-216-131-11 1-216-071-00	METAL GLAZE 2.7M METAL GLAZE 8.2K METAL GLAZE 2.7M METAL GLAZE 8.2K METAL GLAZE 2.7M	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R1361 R1362 R1363 R1364	1-216-676-11 1-216-113-00 1-216-073-00	METAL CHIP METAL CHIP METAL GLAZE METAL GLAZE	11K 470K 10K	5% 0.50% 5% 5%	1/10W 1/10W 1/10W 1/10W
R1193 R1194	1-216-085-00	METAL GLAZE 100 METAL GLAZE 33K	5% 5%	1/10W 1/10W	R1365 R1366	1-216-081-00	METAL GLAZE METAL GLAZE	22K	5% 5%	1/10W 1/10W
R1195 R1196 R1197	1-216-085-00 1-216-025-91	METAL GLAZE 100 METAL GLAZE 33K METAL GLAZE 100	5% 5% 5%	1/10W 1/10W 1/10W	R1367 R1368 R1369 R1370	1-216-059-00 1-216-051-00 1-216-105-91	METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	1.2K 220K	0.50% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W
R1198 R1301 R1302 R1303 R1304	1-216-029-00 1-216-029-00 1-216-039-00	METAL GLAZE 33K METAL GLAZE 150 METAL GLAZE 150 METAL GLAZE 390 METAL GLAZE 39K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R1371 R1372 R1373 R1374	1-216-089-91 1-216-063-91	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 3.9K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W
R1305 R1306	1-216-033-00	METAL GLAZE 220 METAL CHIP 560	5% 0,50%	1/10W 1/10W	R1375 R1376	1-216-645-11	METAL CHIP METAL CHIP	560 680	0.50% 0.50%	1/10W 1/10W
R1307 R1308 R1309	1-216-091-00 1-216-645-11 1-216-025-91	METAL GLAZE 56K METAL CHIP 560 METAL GLAZE 100 METAL GLAZE 47K	5% 0.50% 5%	1/10W 1/10W 1/10W	R1377 R1378 R1379 R1380 R1381	1-216-065-00 1-216-037-00 1-216-645-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL CHIP METAL CHIP	4.7K	5% 5% 5% 0.50% 0.50%	1/10W 1/10W 1/10W 1/10W 1/10W
R1312 R1313 R1314 R1315	1-216-027-00 1-216-097-91 1-216-081-00	METAL GLAZE 120 METAL GLAZE 100K METAL GLAZE 22K METAL GLAZE 100	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W	R1382 R1383 R1384	1-216-073-00 1-216-681-11 1-216-091-00	METAL GLAZE METAL CHIP METAL GLAZE	10K 18K 56K	5% 0.50% 5%	1/10W 1/10W 1/10W
R1316 R1317	1-216-033-00	METAL GLAZE 4.7K METAL GLAZE 220	5% 5%	1/10W 1/10W	R1385 R1386	1-216-077-00	METAL GLAZE METAL GLAZE	15K	5% 5%	1/10W 1/10W
R1318 R1319 R1320	1-216-085-00 1-216-057-00	METAL GLAZE 47K METAL GLAZE 33K METAL GLAZE 2.2K	5% 5% 5%	1/10W 1/10W 1/10W	R1387 R1388 R1389 R1390	1-216-689-11 1-216-658-11 1-216-647-11	METAL CHIP METAL CHIP METAL CHIP METAL CHIP	1.2K 39K 2K 680	0.50% 0.50% 0.50% 0.50%	1/10W 1/10W 1/10W 1/10W
R1321 R1322 R1324 R1325 R1326	1-216-057-00 1-216-061-00 1-216-652-11	METAL CHIP 820 METAL GLAZE 2.2K METAL GLAZE 3.3K METAL CHIP 1.1K METAL GLAZE 10K	0.50% 5% 5% 0.50% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R1391 R1392 R1393 R1394	1-216-041-00 1-216-063-91	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 3.9K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W
R1327 R1328 R1329	1-216-073-00 1-216-125-00	METAL GLAZE 10K METAL GLAZE 1.5M METAL GLAZE 180K	5% 5% 5%	1/10W 1/10W 1/10W	R1395 R1396 R1397	1-216-071-00 1-216-071-00	METAL GLAZE METAL GLAZE METAL GLAZE	8.2K 8.2K	5% 5%	1/10W 1/10W 1/10W
R1330 R1331	1-216-081-00 1-216-679-11	METAL GLAZE 22K METAL CHIP 15K	5% 0.50%	1/10W 1/10W	R1399 R1401 R1402	1-216-073-00 1-216-085-00 1-216-295-91	METAL GLAZE METAL GLAZE CONDUCTOR, C	10K 33K CHIP	5% 5%	1/10W 1/10W
R1332 R1333 R1334 R1335	1-216-049-91 1-216-063-91 1-249-401-11		0.50% 5% 5%	1/10W 1/10W 1/10W 1/4W F		1-216-681-11 1-216-071-00	METAL CHIP METAL CHIP METAL GLAZE		5%	1/10W 1/10W 1/10W
R1336 R1337 R1338	1-216-061-00	METAL GLAZE 82K METAL GLAZE 3.3K METAL CHIP 680	5% 5% 0.50%	1/10W 1/10W 1/10W	R1406 R1407 R1408	1-216-063-91	METAL CHIP METAL GLAZE METAL GLAZE		0.5 0% 5% 5%	1/10W 1/10W 1/10W
R1339 R1340 R1341	1-216-033-00 1-216-033-00	METAL GLAZE 220 METAL GLAZE 220 METAL GLAZE 220	5% 5% 5%	1/10W 1/10W 1/10W	R1409 R1410 R1411 R1412	1-216-053-00 1-216-073-00 1-216-107-00	CONDUCTOR, C METAL GLAZE METAL GLAZE METAL GLAZE	1.5K 10K 270K	5% 5% 5%	1/10W 1/10W 1/10W
R1342 R1343 R1344 R1345	1-216-037-00 1-216-093-00	METAL GLAZE 27K METAL GLAZE 330 METAL GLAZE 68K METAL GLAZE 330K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W	R1413 R1414 R1415	1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE	2.2K	5% 5% 5%	1/10W 1/10W 1/10W
R1346 R1347	1-216-097-91 1-216-073-00	METAL GLAZE 100K METAL GLAZE 10K	5% 5%	1/10W 1/10W	R1416 R1417 R1418	1-216-113-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE	470K 220	5% 5% 5%	1/10W 1/10W 1/10W
R1348 R1349 R1350 R1351	1-216-035-00 1-216-073-00	METAL GLAZE 8.2K METAL GLAZE 270 METAL GLAZE 10K METAL GLAZE 220	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W	R1419 R1420 R1421 R1422	1-216-089-91 1-216-649-11	METAL GLAZE METAL GLAZE METAL CHIP METAL GLAZE	47K 820	5% 5% 05 0% 5%	1/10W 1/10W 1/10W 1/10W
R1352 R1353 R1354	1-216-065-00 1-216-089-91	METAL GLAZE 4.7K METAL GLAZE 4.7K METAL GLAZE 47K	5% 5% 5%	1/10W 1/10W 1/10W	R1423 R1424	1-216-057-00 1-216-081-00	METAL GLAZE METAL GLAZE	2.2K 22K	5% 5%	1/10W 1/10W
R1355 R1356		METAL GLAZE 220 METAL GLAZE 220K	5% 5%	1/10W 1/10W	R1425 R1426 R1427	1-216-113-00	METAL GLAZE METAL GLAZE METAL CHIP		5% 5% 05 0 %	1/10W 1/10W 1/10W



 The components identified by in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifies par une trame et une marque A sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark \triangle are critical for safety.
Replace only with part number specified.

DEC NO	DARTNO	DESCRIPTION		р	CMADV	DEE NO	PART NO.	DESCRIPTION		D	EMARK
REF. NO.	PART NO.	DESCRIPTION			EMARK	REF. NO.					
R1428		METAL GLAZE		5%	1/10W	R1500 R1501		METAL CHIP METAL GLAZE	820 8.2K	0.50% 5%	1/10W 1/10W
R1429 R1430		METAL CHIP METAL GLAZE	5.1K	0.50% 5%	1/10W 1/10W	R1502	1-260-105-11	CAPRON	3.3K	5%	1/2W
R1430		METAL GLAZE		5%	1/10W	R1502		METAL GLAZE		5%	1/10W
R1432		METAL GLAZE		5%	1/10W	R1504		METAL CHIP	30K	0.50%	1/10W
R1433		METAL GLAZE		5%	1/10W	R1505	1-247-688-11		10	5%	1/4W F
R1434	1-216-645-11	METAL CHIP	560	0.50%	1/10W	R1506	1-216-041-00	METAL GLAZE	470	5%	1/10W (20M2U/E)
R1435		METAL GLAZE		5%	1/10W	7.4504	4 44 6 0 40 04		177	- 01	1 /1 0337
R1436		METAL GLAZE		5%	1/10W 1/10W	R1506	1-216-049-91	METAL GLAZE	IK	5%	1/10W)M4U/E/A)
R1437 R1438		METAL GLAZE METAL GLAZE		5% 5%	1/10W	R1507	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
111750	1 210 075 00		2044	•		R1508		METAL GLAZE		5%	1/10W
R1439		METAL GLAZE		5%	1/10W	R1509		METAL GLAZE		5%	1/10W
R1440		METAL GLAZE		5%	1/10W	R1510	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R1441 R1442		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R1511	1-216-360-11	METAL OXIDE	8.2	5%	lW F
R1442		METAL GLAZE		5%	1/10W	R1512		METAL CHIP	680	0.50%	1/10W
101445	1-210-015-00	METTIE CO. LOS				R1513	1-247-752-11		1K	5%	1/2W F
R1444		METAL GLAZE		5%	1/10W	R1514	1-247-711-11		680	5%	1/4W F
R1445		METAL GLAZE		5%	1/10W	R1515	1-216-350-11	METAL OXIDE	1.2	5%	IW F
R1446		METAL GLAZE		5% 5%	1/10W 1/10W	R1516	1.216.101.00	METAL GLAZE	150K	5%	1/10W
R1447 R1448		METAL GLAZE METAL GLAZE		5%	1/10W	R1517		METAL GLAZE		5%	1/10W
K1440	1-210-005-00	METINE CENTE	JJ11	5 /0	.,	R1518		METAL OXIDE		5%	1W F
R1449	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	R1519		METAL OXIDE		5%	1W F
R1450		METAL GLAZE		5%	1/10W	R1520	1-216-027-00	METAL GLAZE	120	5%	1/10W
R1451		METAL GLAZE		5%	1/10W 1/10W	D1521	1 216 020 00	METAL GLAZE	150	5%	1/10W
R1452 R1453		METAL GLAZE METAL GLAZE		5% 5%	1/10W	R1521 R1523		METAL OXIDE		5%	1W F
K1433	1-210-013-00	WIETAL GLAZE	33	3 10	1/1011	R1524		METAL OXIDE		5%	IW F
R1454	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	R1525		METAL GLAZE		5%	1/10W
R1455		METAL GLAZE		5%	1/10W	R1526	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R1456		METAL GLAZE		5%	1/10W	D1607	1-249-413-11	CARRON	470	5%	1/4W F
R1457 R1458		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R1527 R1528		METAL OXIDE		5%	1W F
K1430	1-210-083-00	METAL GLAZE	33K	370	1/10W	R1529	1-202-829-11		8.2K	20%	1/2W
R1459	1-216-133-00	METAL GLAZE	3.3M	5%	1/10W	R1530		METAL GLAZE		5%	1/10W
R1460		METAL GLAZE		5%	1/10W	R1531	1-247-697-11	CARBON	56	5%	1/4W F
R1461		METAL CHIP	560	0.50%	1/10W	D1522	1 216 050 00	METAL GLAZE	2 7K	5%	1/10W
R1462 R1463		METAL CHIP METAL CHIP	560 560	0.50% 0.50%	1/10W 1/10W	R1532 R1533	1-249-414-11		560	5%	1/4W F
111405	1-210-045-11	MDT/ID CITI	500	0.00.0	1/10//	R1534		METAL CHIP	2.2K	0.50%	1/10W
R1464		METAL GLAZE		5%	1/10W	R1536		METAL CHIP			1/10W
R1465		METAL GLAZE		5% 5%	1/10W 1/10W	R1537	1-249-389-11	CARBON	4.7	5%	1/4W F
R1466 R1467		METAL GLAZE METAL GLAZE		5%	1/10W	R1538	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1468		METAL GLAZE		5%	1/10W	R1539		METAL GLAZE		5%	1/10W
											M4U/E/A)
R1469		METAL GLAZE		5%	1/10W	R1540 R1541		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R1470 R1471		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R1542	1-247-692-71		22	5%	1/4W F
R1472		METAL GLAZE		5%	1/10W	101342	1 247 052 71	CILICOTT			M4U/E/A)
R1473		METAL GLAZE		5%	1/10W						
				0.000	4 /4 0334	R1543		METAL GLAZE		5%	1/10W 3W F
R1475 R1476		METAL CHIP METAL GLAZE		0.50% 5%	1/10W 1/10W	R1547 R1548		METAL OXIDE METAL GLAZE		5% 5%	1/10W
R1477	1-216-003-91	METAL GLAZE	2.2K	5%	1/10W	R1549	1-260-094-11		390	5%	1/2W
R1478		METAL GLAZE		5%	1/10W	R1550		METAL GLAZE	220K	5%	1/10W
R1480	1-216-089-91	METAL GLAZE	47K	5%	1/10W			GARRON	10	6.01	1/4397 ==
R1481	1.916.116.00	METAL CLASE	560¥	5%	1/10W	R1551 R1552	1-249-393-11	CARBON METAL GLAZE	10 56 K	5% 5%	1/4W F 1/10W
R1481 R1482		METAL GLAZE METAL GLAZE		5%	1/10W	R1553		METAL GLAZE		5%	1/10W
R1483		METAL GLAZE		5%	1/10W	R1554		METAL GLAZE		5%	1/10W
R1484		METAL GLAZE		5%	1/10W	R1555	1-216-295-91	CONDUCTOR, C	HIP		
R1485	1-216-113-00	METAL GLAZE	470K	5%	1/10W	D1556	1 01 6 021 00	METAL OLATE	0.017	em	1/100/
R1486	1_214 007 01	METAL GLAZE	100K	5%	1/10W	R1556 R1557		METAL GLAZE METAL CHIP	8.2K 220K	5% 0.50%	1/10W 1/10W
R1487		METAL GLAZE		5%	1/10W	R1558	1-249-393-11		10	5%	1/4W F
R1488		METAL GLAZE		5%	1/10W	R1559	1-249-393-11	CARBON	10	5%	1/4W F
R1489		METAL GLAZE		5%	1/10W	R1560	1-216-049-91	METAL GLAZE	1 K	5%	1/10W
R1490	1-216-035-00	METAL GLAZE	270	5%	1/10W	D1544	1_216 645 11	METAL CUID	560	0.50%	1/10W
R1491	1-216-025 00	METAL GLAZE	270	5%	1/10W	R1564	1-210-043-11	METAL CHIP	JUU		M4U/E/⊾)
R1492		METAL GLAZE		5%	1/10W	R1567		METAL GLAZE		5%	1/10W
R1493	1-216-083-00	METAL GLAZE	27K	5%	1/10W	R1568	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1494		METAL GLAZE		5%	1/10W	R1569		METAL GLAZE		5%	1/10W
R1495	1-216-089-91	METAL GLAZE	4/K	5%	1/10W	R1570	1-210-073-00	METAL GLAZE	IUK	5%	1/10W
R1496	1-216-089-91	METAL GLAZE	47K	5%	1/10W	R1571	1-216-103-00	METAL GLAZE	180K	5%	1/10W
R1498		METAL GLAZE		5%	1/10W	R1572	1-216-101-00	METAL GLAZE	150K	5%	1/10W
R1499	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	R1573	1-216-073-00	METAL GLAZE	IOK	5%	1/10W



REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
R1574 R1575		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R2331 R2332 R2333	1-216-049-91	METAL GLAZE METAL GLAZE METAL GLAZE	1K	5% 5% 5%	1/10W 1/10W 1/10W
R1576		METAL GLAZE		5% 5%	1/10W 1/10W	R2334 R2335	1-216-041-00	METAL GLAZE METAL GLAZE	470	5% 5%	1/10W 1/10W
R1577 R1578		METAL GLAZE METAL GLAZE		5%	1/10W	K2333	1-210-001-00	METAL GLAZE	3.3K	370	1/10 **
R1579		METAL CHIP	39K	0.50%		R2336		METAL GLAZE		5%	1/10W
R1580	1-216-083-00	METAL GLAZE	2/K	5% (1	1/10W 20M4U/E/A)	R2337 R2338		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
B. 404	4 000 (10 11	METAL OVIDE	1004	en.	1337	R2339		METAL GLAZE		5%	1/10W
R1581	1-208-012-11	METAL OXIDE	IUM	5% (2	1W 20M4U/E/A)	R2340	1-210-073-00	METAL GLAZE	IUK	5%	1/10W
R1582		METAL OXIDE			1W 20M4U/E/A)	R2341 R2342	1-216-071-00	METAL GLAZE METAL GLAZE	8.2K	5% 5%	1/10W 1/10W
R1583	1-212-998-00	FUSIBLE	470	5% (2	1/2W F 20M4U/E/A)	R2343 R2344		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R1584	1-216-674-11	METAL CHIP	9.1K		1/10W 20M4U/E/A)	R2345	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R1585	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	R2346		METAL GLAZE		5%	1/10W
,				(,	20M4U/E/A)	R2347 R2348		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R1586	1-216-691-11	METAL CHIP	47K		1/10W	R2349	1-216-679-11	METAL CHIP METAL GLAZE	15K	0.50%	1/10W 1/10W
R1587	1-216-057-00	METAL GLAZE	2.2K	5%	20M4U/E/A) 1/10W					5%	
R1588	1-216-298-00	METAL GLAZE	2.2	5%	20M4U/E/A) 1/10W	R2351 R2352	1-216-061-00	METAL GLAZE METAL GLAZE	3.3K	5% 5%	1/10W 1/10W
R1589	1 216 296 11	METAL OXIDE	0.56	5%	20M4U/E/A) 3W F	R2353 R2354		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R1590		METAL GLAZE		5%	1/10W	R2358		METAL GLAZE		5%	1/10W
				(2	20M4U/E/A)	R2361	1-216-099-00	METAL GLAZE	120K	5%	1/10W
R1591	1-249-443-11	CARBON	0.47	5%	1/4W F	R2362	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1592	1-247-760-11	CARBON	4.7K	5%	20M4U/E/A) 1/2W F	R2363 R2364	1-216-025-91	METAL GLAZE METAL GLAZE	100	5% 5%	1/10W 1/10W
R1593	1-249-485-11	CARBON	8.2	5%	20M4U/E/A) 1/2W F	R2365		METAL CHIP	33K	0.50%	1/10W
R1594	1-216-360-11	METAL OXIDE	8.2	5%	OM4U/E/A) IW F	R2366 R2367		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R1595	1-216-101-00	METAL GLAZE	150K	5% (2	20M4U/E/A) 1/10W	R2368 R2369		METAL GLAZE METAL CHIP	4.7K 10K	5% 0.50%	1/10W 1/10W
R1596		METAL GLAZE		5%	1/10W	R2371		METAL GLAZE	1K	5%	1/10W
R1597	1-216-073-00	METAL GLAZE	10K	5%	1/10W	R2372		METAL GLAZE		5%	1/10W
R1598 R1599	1-216-057-00 1-202-830-00	METAL GLAZE	2.2K 10K	5% 20%	1/10W 1/2W	R2374 R2375		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
				(2	20M4U/E/A)	R2376	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R2300		METAL GLAZE		5%	1/10W	R2377	1-216-033-00	METAL GLAZE	220	5%	1/10W
R2301 R2302		METAL GLAZE METAL CHIP	4.7K 6.8K	5% 0.50%	1/10W 1/10W	R2378 R2379		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R2303	1-216-093-00	METAL GLAZE	68K	5%	1/10W	R2380	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R2304 R2305		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R2381 R2382		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R2306	1-216-090-01	METAL GLAZE	ATK	5%	1/10 W	R2383	1-216-033-00	METAL GLAZE	220	5%	1/10W
R2307		METAL GLAZE		5%	1/10W	R2384		METAL GLAZE		5%	1/10W
R2308 R2309		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R2385 R2386		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R2310		METAL GLAZE		5%	1/10W	R2387		METAL GLAZE		5%	1/10W
R2311	1-216-073-00	METAL GLAZE	10K	5%	1/10W	R2388	1-216-073-00	METAL GLAZE	10 K	5%	1/10W
R2312 R2313		METAL GLAZE		5% 5%	1/10W 1/10W	R2389 R2390		METAL CHIP		5%	1/10W 1/10W
R2313		METAL GLAZE METAL CHIP	560	0.50%	1/10W	R2390 R2391		METAL CHIP METAL CHIP	680 680	050 % 050 %	1/10W
R2315	1-216-679-11	METAL CHIP	15K	0.50%	1/10W	R2392		METAL GLAZE		5%	1/10W
R2316		METAL GLAZE		5%	1/10W	R2393		METAL GLAZE		5%	1/10W
R2317 R2318		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R2394 R2396		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R2319	1-216-093-00	METAL GLAZE	68K	5%	1/10W	R2397	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R2320		METAL CHIP	12K	0.50%	1/10W	R2398		METAL GLAZE		5%	1/10W
R2321 R2322		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R2399 R2501		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R2323	1-216-683-11	METAL CHIP	22K	0.50%	1/10W	R2502	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R2324 R2325		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R2503 R2504		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R2326		METAL GLAZE		5%	1/10W	R2505					1/10W
R2327	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	R2506		METAL GLAZE METAL GLAZE		5% 5%	1/10W
R2328 R2329		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R2506	1-216-101-00	METAL GLAZE	150K	5%	(20M2U/E) 1/10W
R2330		METAL GLAZE		5%	1/10W)M4U/E/A)



Les composants identifies par une trame et une marque \(\frac{\Lambda}{\text{sont}}\) critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The components identified by shading and mark ∆ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION	,	R	EMARK
R2507	1-216-105-91	METAL GLAZE	220K	5%	1/10W	R3385		METAL GLAZE		5%	1/10W
R2507	1-216-109-00	METAL GLAZE	330K	5%	(20M2U/E) 1/10W	R3386 R3390		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
				(2	0M4U/E/A)	R3394 R3395		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R2551		METAL GLAZE		5%	1/10W						
R2552 R2553		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R3396 R3398		METAL GLAZE METAL CHIP	36K	5% 0.50%	1/10W 1/10W
R2555	1-216-055-00	METAL GLAZE METAL GLAZE	1.8 K	5% 5%	1/10W 1/10W	R4401 R4402		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R2556						R4404	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R2557 R2558		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	R4405	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R2559	1-216-039-00	METAL GLAZE	390	5%	1/10W 1/10W	R4407 R4408	1-216-061-00	METAL GLAZE METAL GLAZE	3.3K	5% 5%	1/10W 1/10W
R2560 R2561		METAL GLAZE METAL GLAZE		5% 5%	1/10W	R4409	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W
R2562	1-216-001-00	METAL GLAZE	10	5%	1/10W	R4410	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W
R2563	1-249-421-11	CARBON	2.2K	5%	1/4W 1/10W	R4411 R4412		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
R3301 R3302	1-216-065-00	METAL GLAZE METAL GLAZE	4.7K	5% 5%	1/10W	R4413	1-216-295-91	CONDUCTOR, C	HIP	3%	1/10W
R3303	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	R4414 R4415	1-216-295-91	CONDUCTOR, C	HIP HIP		
R3304		METAL GLAZE METAL GLAZE		5% 5%	1/10W						
R3305 R3306	1-216-063-91	METAL GLAZE	3.9K	5%	1/10W 1/10W	R4416	1-210-293-91	CONDUCTOR, C	.nir		
R3308 R3309		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W			<variable re<="" td=""><td>SISTOR></td><td></td><td></td></variable>	SISTOR>		
						DV601	1 222 102 00			20	
R3310 R3311	1-216-091-00	METAL GLAZE METAL GLAZE	56K	5% 5%	1/10W 1/10W	RV501	1-223-102-00	RES, ADJ, WIRE	WOUNDI	20	
R3312 R3317		METAL GLAZE METAL CHIP	220K 10K	5% 0.50%	1/10W 1/10W			<transforme< td=""><td>R></td><td></td><td></td></transforme<>	R>		
R3320		METAL GLAZE		5%	1/10W	T*200	1 406 701 11				
R3323	1-216-089-91	METAL GLAZE	47K	5%	1/10W	T300 T500		TRANSFORMER			
R3333 R3334		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	T501 T501		TRANSFORMER RING, SHORT	ASSY, FL	YBACK	
R3335	1-216-113-00	METAL GLAZE	470K	5%	1/10W	T501		SCREW +BVTP	X16 TYPE	E2 IT-3	
R3337		METAL GLAZE		5%	1/10W	T502		TRANSFORMER		(DFT)	
R3338 R3339		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	T503	1-460-017-11	TRANSFORMER			
R3340 R3344	1-216-099-00	METAL GLAZE	120K	5% 5%	1/10W 1/10W			<thermistor></thermistor>			
R3345		METAL GLAZE METAL GLAZE		5%	1/10W						
R3346	1-216-025-91	METAL GLAZE	100	5%	1/10W	TH500	1-807-970-11	THERMISTOR			
R3347 R3348	1-216-025-91	METAL GLAZE METAL GLAZE	100	5% 5%	1/10W 1/10W			<test pin=""></test>			
R3349	1-216-025-91	METAL GLAZE	100	5%	1/10W	grana 0.0	* 1 606 077 00				
R3350	1-216-117-00	METAL GLAZE	080K	5%	1/10W	TP301	*1-535-877-22	CHIP, CHECKER CHIP, CHECKER			
R3351 R3353		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W			CHIP, CHECKER CHIP, CHECKER			
R3355	1-216-089-91	METAL GLAZE	47K	5%	1/10W	TP307		CHIP, CHECKER			
R3356 R3357		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	TP311	*1-535-877-22	CHIP, CHECKER	:		
R3358		METAL GLAZE		5%	1/10W	TP312 TP401		CHIP, CHECKER CHIP, CHECKER			
R3359	1-216-081-00	METAL GLAZE	22K	5%	1/10W	TP402	*1-535-877-22	CHIP, CHECKER			
R3360 R3361		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	TP403	* 1-535-877-22	CHIP, CHECKER			
R3362	1-216-049-91	METAL GLAZE	1 K	5%	1/10W	TP501 TP502		CHIP, CHECKER CHIP, CHECKER			
R3363		METAL GLAZE		5%	1/10W	TP503	*1-535-877-22	CHIP, CHECKER			
R3364 R3365		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	TP504	+ 1-333-8/7-22	CHIP, CHECKER	•		
R3366 R3367		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W			<crystal></crystal>			
R3368						VIOL	1_570 175 11		AMIC		
R3369	1-216-089-91	METAL GLAZE METAL GLAZE	47K	5% 5%	1/10W 1/10W	X101 X300	1-577-259-11	VIBRATOR, CER VIBRATOR, CRY			
R3376 R3377		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	X300 X301		INSULATOR VIBRATOR, CRY	(STAL		
R3378		METAL GLAZE		5%	1/10W	X301		INSULATOR			
R3379		METAL GLAZE		5%	1/10W						
R3381 R3382		METAL GLAZE METAL CHIP	470 560	5% 0.50%	1/10W 1/10W	*****	*****	******	***	*****	****
R3383	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W						
R3384	1-210-003-91	METAL GLAZE	J.YK	5%	1/10W						



REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION		!	REMARI	<u> </u>
	* A-1316-302-A	G BOARD, CO	MPLETE			D616 D617 D618	8-719-110-44	DIODE ERA15-0 DIODE RD16ES DIODE EGP20G	B1			
	* 4-374-846-11 4-382-854-11	HOLDER, FUSE COVER, CAPAC SCREW (M3X10), P, SW (+)		7)			<ferrite bea<="" td=""><td>D></td><td></td><td></td><td></td></ferrite>	D>			
	7-322-003-19	RUBBER, SILIC <capacitor></capacitor>	ON KIV (KI	649UW	,	FB601 FB602 FB603	1-410-396-41	FERRITE BEAD FERRITE BEAD FERRITE BEAD	INDUCTO	R 0.45U	H	
C602	1-130-711-00			20%	250V	FB604 FB605		FERRITE BEAD FERRITE BEAD				
C603 C604 C605 C606	1-130-711-00 1-113-924-11 1-113-924-11 1-113-924-11	CERAMIC CERAMIC	0.22MF 0.0047MF 0.0047MF 0.0047MF	20%	250V 250V 250V 250V	FB606 FB607 FB608 FB609	1-410-396-41 1-410-397-21	FERRITE BEAD FERRITE BEAD FERRITE BEAD FERRITE BEAD	INDUCTO INDUCTO	R 0.45U R 1.1UH	H I	
C607 C608	1-113-924-11 1-113-924-11		0.0047MF : 0.0047MF :		250V 250V	FB610		FERRITE BEAD				
C609 C610 C611	1-113-924-11 1-113-924-11 1-113-924-11	CERAMIC CERAMIC	0.0047MF 0.0047MF 0.0047MF	20% 20%	250V 250V 250V	FB611 FB612 FB613	1-410-397-21	FERRITE BEAD FERRITE BEAD FERRITE BEAD	INDUCTO	R 1.1UH	I	
C612 C613	1-137-484-11 1-137-484-11		0.47MF	10% 10%	630V 630V			<ic></ic>				
C614 C615	1-129-718-00 1-136-619-11	FILM	0.0016MF		630V 2KV	IC601		SHEET, INSULA	TING			
C616 C617 C618	1-107-909-11 1-107-430-91 1-107-906-11	CERAMIC	0.0033MF	20% 10% 20%	35V 1KV 50V	IC601 IC602 IC603 IC604	8-749-010-47	IC STR-M6524 IC STR-S3115 IC NJM78M05FA IC TA7805S	4			
C619 C621 C622	1-107-911-11 1-117-791-11 1-102-038-00	ELECT ELECT	220MF	20% 20%	50V 160V 500V	IC605	8-759-231-58					
C623	1-107-900-51			20%	35V 500V			<coil></coil>				
C624 C625 C626 C627	1-102-038-00 1-107-900-51 1-102-038-00 1-107-900-51	ELECT CERAMIC	0.001MF	20% 20%	35V 500V 35V	L601 L1601 L1602 L2601	1-410-679-31 1-421-421-00	COIL, CHOKE 2 INDUCTOR 270 COIL, CHOKE COIL (WITH CO	UH			
C628 C629 C630 C631	1-102-038-00 1-107-891-11 1-126-964-11 1-136-853-11	ELECT ELECT	10MF	20% 20% 5%	500V 25V 50V 200V			<photo coup<="" td=""><td></td><td></td><td></td><td></td></photo>				
C632	1-107-492-11			20%	160V	PH601	8-749-923-50	PHOTO COUPLI	ER PC111Y	S		
C633 C634 C636	1-107-885-11 1-107-911-11 1-107-909-11	ELECT	220MF	20% 20% 20%	16V 50V 50V			<transistor< td=""><td></td><td></td><td></td><td></td></transistor<>				
C637 C638	1-107-910-11 1-137-484-11			20% 10%	50V 630V	Q601 Q603		TRANSISTOR 2				
C2601	1-102-038-00	CERAMIC	0.001MF		500V			<resistor></resistor>				
		<connector></connector>				R601	1-202-719-00		1M	2)%	1/2W	
CN601 CN602 CN603	* 1-695-561-11 * 1-508-765-00	PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO	OR (PC BOA OR (5mm P17	RD) 7 (CH) 3	P P	R602 R603 R604 R605			56K 39K 1.2K 680	5% 5% 5% 5%	3W 3W 1/4W 1/4W	F
CN605 CN606		PIN, CONNECTO PLUG, CONNEC		uki <i>D)</i> 0		R606 R607	1-207-642-00 1-249-426-11	WIREWOUND CARBON	0.15 5.6K	1)% 5%	3W 1/4W	F
CN607 CN609		PLUG, CONNECTO		ГСН) 2	2.P	R608 R609 R610	1-249-428-11 1-249-428-11 1-249-428-11	CARBON CARBON	8.2K 8.2K 8.2K	5% 5% 5%	1/4W 1/4W 1/4W	
		<diode></diode>				R611 R612	1-249-417-11 1-249-404-00		1K 82	5% 5%	1/4W 1/4W	F
D601 D605 D606 D607	8-719-979-85 8-719-988-55	DIODE D4SB60I DIODE EGP20G DIODE RGP15K DIODE RU-3AM	-6179			R613 R614 R615	1-249-419-11 1-249-385-11 1-202-727-00	CARBON CARBON	1.5K 2.2 4.7M	5% 5% 11%	1/4W	F
D608	8-719-911-19	DIODE 1SS119-2	2.5			R617 R618	1-202-933-61 1-202-933-61	FUSIBLE	0.1 0.1	11%	1/2W 1/2W	F F
D609 D610 D612	8-719-029-04 8-719-045-48	DIODE RU-3AM DIODE D5L60 DIODE FML-G1:				R619 R620 R621	1-202-933-61 1-202-933-61 1-215-877-11		0.1 0.1 22K	11% 11% 56	1/2W 1/2W 1W	F F
D613 D614	8-719-045-48	DIODE EGP20G DIODE FML-G1	2S			R622 R623	1-249-401-11 1-249-417-11	CARBON	47 1K	5% 5%	1/4W	F
D615	8-719-979-85	DIODE EGP20G			:	R626	1-247-895-91	CARBON	470K	5%	1/4W	



REF. NO.	PART NO.	DESCRIPTION			REMARK		REF. NO.	PART NO.	DESCRIPTION			REMARK	
R627 R628		METAL OXIDE METAL OXIDE		5% 5%	3W 3W	F F	CN702 CN703 CN704	1-695-915-11	PIN, CONNECTO TAB (CONTACT TAB (CONTACT	(1)		P	
R629 R630 R631	1-249-412-11	METAL OXIDE CARBON	390	10% 5% 5%	1/2W 3W 1/4W	F			<diode></diode>		Í		
R632 R1602	1-249-401-11 1-202-842-11		47 220K	5% 20%	1/4W 1/2W	F	D701 D702		DIODE 1SS119-2 DIODE 1SS119-2				
R1603	1-202-842-11	SOLID	220K	20%	1/2W		D703 D704 D705	8-719-911-19 8-719-911-19	DIODE 1SS119-2 DIODE 1SS119-2 DIODE 1SS119-2	25 25			
		<relay></relay>					D706		DIODE 1SS119-2	25			
RY601	1-515-738-11		_				D707 D708 D709	8-719-901-83 8-719-901-83	DIODE 1SS83 DIODE 1SS83 DIODE 1SS83				
		<transforme< td=""><td></td><td></td><td></td><td></td><td>D713</td><td></td><td>DIODE 18883</td><td></td><td></td><td></td><td></td></transforme<>					D713		DIODE 18883				
T601 T602 T603	1-426-716-11	TRANSFORMER TRANSFORMER TRANSFORMER	LINE FIL	TER (I	LFT)		D715 D716 D717	8-719-901-83	DIODE 1SS83 DIODE 1SS83 DIODE 1SS83				
		<thermistor:< td=""><td>></td><td></td><td></td><td></td><td></td><td></td><td><jack></jack></td><td></td><td></td><td></td><td></td></thermistor:<>	>						<jack></jack>				
THP601	1-808-059-31	THERMISTOR, I	POSITIVE				J701 J701		SOCKET, PICTU SOCKET, PICTU				
		<test pin=""></test>							<coil></coil>				
TP1601	. 1-536-354-00	POST PIN					L702		INDUCTOR 22U				
		<varistor></varistor>					L703 L704	1-408-608-31	INDUCTOR 27U INDUCTOR 27U INDUCTOR 27U	H	(/C)		
	1-809-942-71 1-809-942-71				•		L705 L705		INDUCTOR 39U				
VDR002	1-009-942-71	VARISTOR					L706	1-410-667-31	INDUCTOR 22U	Н			
******	*******	******	******	*****	******	**			<transistor:< td=""><td>•</td><td></td><td></td><td></td></transistor:<>	•			
	* A-1331-628-A	C BOARD, CO:	MPLETE (I	PVM-2	OM4U/E/A	(۱	Q701	8-729-119-78	TRANSISTOR 2		FE		
	* A-1331-630- <i>A</i>	C BOARD, CO		PVM-2	DM2U/E)		Q702 Q703 Q704 Q705	8-729-119-78 8-729-200-17	TRANSISTOR 2: TRANSISTOR 2: TRANSISTOR 2: TRANSISTOR 2:	SC2785-HI SA1091-O			
	7-682-949-01	SCREW +PSW 3	X10				Q703		TRANSISTOR 2				
		<capacitor></capacitor>					Q710 Q711	8-729-200-17 8-729-200-17	TRANSISTOR 25 TRANSISTOR 25	SA1091-O SA1091-O			
C701	1-102-116-00		680PF				Q712 Q713		TRANSISTOR 2: TRANSISTOR 2:				
C702 C703 C704	1-102-116-00 1-102-116-00 1-102-121-00	CERAMIC	680PF 680PF 0.0022MF	10%	50V 50V 50V		Q714 Q715		TRANSISTOR 2				
C705	1-104-665-11		100MF	20%	16V		Q716 Q717	8-729-255-12	TRANSISTOR 2	SC2551-O			
C706 C707	1-102-074-00 1-162-116-00		0.001MF 680PF	10% 10%	50V 2KV								
C708 C710	1-136-601-11 1-101-880-00		0.01MF 47PF	10% 5%	630V 50V				<resistor></resistor>				
C711	1-101-880-00		47PF	5%	50V		R702 R704	1-247-897-11 1-215-404-00	METAL	560K 200	5% 1%	1/4W 1/4W	
C712 C714	1-101-880-00 1-102-976-00	CERAMIC	47PF 180PF	5% 5%	50V 50V		R705 R706	1-215-404-00 1-215-404-00	METAL	200 200	1% 1%	1/4W 1/4W	
C715 C716	1-102-976-00 1-102-976-00	CERAMIC	180PF 180PF	5% 5%	50V 50V		R707	1-249-429-11		10K 10K	5% 5%	1/4W 1/4W	
C724	1-107-929-11	ELECT	10MF	20%	100V (20M2U	Æ)	R708 R709 R710	1-249-429-11 1-249-429-11 1-215-388-00	CARBON	10K 10K 43	5% 1%	1/4W 1/4W	
C726 C733	1-107-662-11 1-107-652-11		22MF 10MF	20% 20%	250V 250V		R711 R712	1-215-390-00 1-215-388-00	METAL	51 43	1% 1%	1/4W 1/4W	
C734 C737	1-101-888-00 1-102-934-00	CERAMIC	68PF 1PF	5%	50V F 50V		R715	1-202-818-00		1K	20%	1/2W	
C740	1-162-114-00		0.0047MF	0.0047MF		/A)		1-202-818-00	METAL OXIDE SOLID	1K	5% 20%	3W F	
							R718 R719	1-216-486-00 1-202-818-00	METAL OXIDE SOLID	8.2K 1K	5% 20%	3W F 1/2W	
CNIZO1	*1 50,000	<connectors< td=""><td></td><td></td><td></td><td></td><td>R720</td><td></td><td>METAL OXIDE</td><td></td><td>5%</td><td>3W ₽ 1/2W</td><td></td></connectors<>					R720		METAL OXIDE		5%	3W ₽ 1/2W	
CN701	1-364-511-11	PLUG, CONNEC	JUK 8P				R722	1-202-883-11	OULID	680K	20%	1/2 **	

The components identified by shading and mark ∆ are critical for safety.
Replace only with part number specified.

Les composants identifies par une trame et une marque Λ sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



REF. NO.	PART NO.	DESCRIPTION			REMARK	!	REF. NO.	PART NO.	DESCRIPTION			REMARK
R723 R724	1-202-838-00 1-202-842-11	SOLID	100K 220K	20% 20%	1/2W 1/2W		R2137 R2138	1-249-414-11 1-249-414-11		560 560	5% 5%	1/4W 1/4W
R725	1-202-838-00		100K	20%	1/2W		R2139	1-249-414-11		560	5%	1/4W
R726	1-202-846-00	SOLID	470K	20%	1/2W (20M2U/	E)	R2140 R2141	1-249-414-11 1-249-414-11		560 560	5% 5%	1/4W 1/4W
R728	1-202-837-00	SOLID	82K	20%	1/2W (20M2U/		R2142 R2143	1-249-414-11 1-249-414-11		560 560	5% 5%	1/4W 1/4W
R729	1-202-549-00	SOLID	100	20%	1/2W (20M2U/		R2144	1-249-414-11		560	5%	1/4W
R731	1-247-815-91		220	5%	1/4W	-/	R2145	1-249-414-11	CARBON	560 1.8K	5% 1%	1/4W 1/4W
R732	1-247-815-91	CARBON	220	5%	1/4W		R2147 R2148	1-215-427-00 1-215-419-00	METAL	820	1%	1/4W
R733 R734	1-247-815-91 1-249-409-11		220 220	5% 5%	1/4W 1/4W	F	R2149	1-215-414-00	METAL	510	1%	1/4W
R735	1-249-409-11	CARBON	220	5%	1/4W	F	R2150	1-215-409-00		330	1%	1/4W
R736 R737	1-249-409-11 1-247-807-31		220 100	5% 5%	1/4W 1/4W	F	R2151 R2152	1-215-407-00 1-215-404-00		270 200	1% 1%	1/4W 1/4W
							R2153	1-215-401-11	METAL	150	1%	1/4W
R738	1-247-807-31 1-247-807-31		100 100	5% 5%	1/4W 1/4W		R2154	1-215-399-00	METAL	120	1%	1/4W
R739 R740	1-249-433-11		22K	5%	1/4W	F	R2155	1-215-397-00		100	1%	1/4W
R741	1-249-433-11		22K	5%		F	R2156	1-215-421-00 1-215-416-00		1K 620	1% 1%	1/4W 1/4W
R742	1-249-433-11	CARBON	22K	5%	1/4W	F	R2157 R2158	1-215-410-00		360	1%	1/4W
R744	1-247-843-11		3.3K	5%	1/4W		R2159	1-215-405-00		220	1%	1/4W
R745	1-249-429-11	CARBON METAL OXIDE	10K	5% 5%	1/4W 1W	F	R2160	1-215-421-00	METAL.	1K	1%	1/4W
R746 R747	1-247-725-11	CARBON	10K	5%	1/4W	F	K2100	1-215-421-00	METAL	116	1 10	
R748	1-249-923-11	CARBON	1 K	5%	1/4W	F			<variable re<="" td=""><td>~qotoio</td><td></td><td></td></variable>	~qotoio		
R749	1-215-902-11	METAL OXIDE	47K	5%		F						
R751	1-247-887-00	CARBON	220K	5%	1/4W		RV2101		RES, VAR, CAR			
R752 R753	1-247-887-00 1-247-887-00		220K 220K	5% 5%	1/4W 1/4W		RV2103 RV2105	1-225-385-11	RES, VAR, CAR RES, VAR, CAR	BON 20K		
R754	1-247-863-91		22K	5%	1/4W		RV2109	1-225-385-11	RES, VAR, CAR	BON 20K		
R755	1-249-434-11	CARBON	27K	5%	1/4W		RV2113	1-225-385-11	RES, VAR, CAR	BON 20K		
R756	1-249-440-11	CARBON	82K	5%	1/4W	_	RV2117	1-241-238-21	RES, VAR, CAR	BON 20K		
R760	1-249-400-11	CARBON	39	5%	1/4W	F						
			oromon.						<switch></switch>			
		<variable re<="" td=""><td>21210K></td><td></td><td></td><td>i</td><td>S2101</td><td></td><td>SWITCH, KEY B</td><td></td><td></td><td></td></variable>	21210K>			i	S2101		SWITCH, KEY B			
RV708		RES, ADJ, MET					S2102		SWITCH, KEY B			
RV709	1-230-641-11	RES, ADJ, META	AL GLAZE	2.2M			S2103 S2104		SWITCH, KEY B SWITCH, KEY B			
							S2105		SWITCH, KEY B			
		<spark gap=""></spark>					S2106	1-570-969-11	SWITCH, KEY B	OARD		•
SG701		GAP, SPARK (20					S2107		SWITCH, KEY B			
SG702 SG703		GAP, SPARK (20 GAP, SPARK (20					S2108 S2109		SWITCH, KEY B			
SG704	1-519-422-11	GAP, SPARK (20)M4U/E/A)				S2110		SWITCH, KEY B			
							S2111	1-570-101-41	SWITCH, KEY B	OARD		
							S2112	1-570-101-41	SWITCH, KEY B	OARD		
*****	*****	******	*****	*****	******	*	S2113 S2114		SWITCH, KEY B SWITCH, KEY B			
	* A-1372-302-A	H BOARD, CO	MPLETE			I	54114	1-370-909-11	Switch, Ref E	OALD		
		********	*****									
	* 4-348-208-00	HOLDER, LED					******	******	******	******	***	****
								* A_1388_103_A	JBOARD, COM	/PI FTF		
		<connector></connector>				ı		N-1300-133-7	********			
CNIOS	*1 564 597 11	PLUG, CONNEC	TOD 120									
		PLUG, CONNEC							<connector></connector>	•		
							CN608	* 1_605_561_11	PIN, CONNECTO	OR (PC RO	ARDO	7P
		<diode></diode>					C11000	1-095-501-11	Thy, convicting	JK (I C DO		
D2102	8-719-920-05	DIODE SLP2810	'-50						<switch></switch>			
D2102	8-719-812-32	DIODE TLY123					*****			***************************************	10000000000000000000000000000000000000	200000000000000000000000000000000000000
D2104	8-719-991-33	DIODE 1SS133T	-77				S601 /	MI-692-921-11	SWITCH, PUSH	(A.C. POW	EF)	
		<resistor></resistor>					******	*******	******	*****	k 1874 5487	*****
R2101	1-249-419-11		1.5K	5%	1/4W							
R2107 R2136	1-249-430-11 1-249-414-11		12K 560	5% 5%	1/4W 1/4W							
K2130	1-2-7	CARDON	200	3 10	*1-44							



Les composants identifies par une trame et une marque \(\Delta\) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark ∆ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION		Ī	REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
	* A-1390-704-A	X BOARD, CO				C2404 C2405	1-104-396-11 1-124-589-11		10MF 47MF	20% 20%	16V 16V
		<connector></connector>				C2406 C2407	1-104-396-11 1-104-396-11		10MF 10MF	20% 20%	16V 16V
		CONNECTOR	•			C2408	1-104-396-11		10MF	20%	16V
CN108	*1-564-518-11	PLUG, CONNEC	TOR 3P			C2409	1-124-234-00		22MF	20%	16V
						C2410	1-163-033-91	CERAMIC CHIP	0.022MF		50V
		<diode></diode>				C2411 C2412	1-104-396-11 1-104-396-11		10MF 10MF	20% 20%	16V 16V
D001		DIODE SEL3810				C2413	1-163-117-00	CERAMIC CHIP		5%	50V
D002		DIODE SEL3810				C2414	1-126-301-11		1MF	20%	50V
D003 D004		DIODE SEL3810 DIODE SEL3810				C2415		CERAMIC CHIP		200	50V
						C2416 C2418	1-124-589-11	CERAMIC CHIP	47MF	20%	16V 50V
						C2422	1-124-234-00		22MF	20%	16V
*****	********	********	*****	*****	*******	C2423	1-124-234-00		22MF	20%	16V
	* * 1200 505 *	5 DO 4 DD 601	and there			C2424	1-163-033-91	CERAMIC CHIP	0.022MF		50 V
	* A-1390-705-A	S BOARD, CON				C2425	1-124-589-11	FLECT	47MF	20%	16V
			(PV	M-20M2	2U/20M4U)		1-124-589-11		47MF	20%	16V
			(,	C2427	1-124-234-00	ELECT	22MF	20%	16 V
		<capacitor></capacitor>				C2428		CERAMIC CHIP		200	50V
C805	1-102-978-00	CEDAMIC	220PF	5%	50V	C2429	1-124-234-00	ELECT	22MF	20%	16 V
C806	1-136-165-00		0.1MF	5%	50V	C2430	1-163-033-91	CERAMIC CHIP	0.022MF		50V
C807	1-130-477-00		0.0033MF		50V	C2431	1-124-234-00	ELECT	22MF	20%	16V
C810	1-136-165-00		0.1MF	5%	50V	C2432	1-124-234-00		22MF	20%	16V
C811	1-136-165-00	FILM	0.1MF	5%	50V	C2433 C2434	1-163-033-91	CERAMIC CHIP	0.022MF 0.1MF	20%	50V 50V
C812	1-136-495-11	FILM	0.068MF	5%	50V	C2454	1-124-405-00	LLLCI	0.11711	2070	501
C813	1-124-261-00	ELECT	10MF	20%	50V	C2435		CERAMIC CHIP			50V
C818	1-136-165-00	FILM	0.1MF	5%	50V	C2436	1-124-234-00		22MF	20%	16V 50V
						C2437 C2438	1-103-033-91	CERAMIC CHIP	22MF	20%	16V
		<connector></connector>	•			C2439	1-124-234-00		22MF	20%	16V
CN801	*1_572_906_11	SOCKET, CONN	ECTOR 12	p		C2440	1-163-033-01	CERAMIC CHIP	0.022ME		50V
C14001	1-373-690-11	SOCKET, COM	ECTOR 12			C2441	1-124-234-00	ELECT	22MF	20%	16V
						C2442	1-124-234-00	ELECT	22MF	20%	16V
		<coil></coil>				C2443	1-124-234-00		22MF	20%	16V
L801	1-410-470-11	INDUCTOR 10U	н			C2444	1-124-234-00	ELECT	22MF	20%	16V
2001	. 410-470-11	induction 100	••			C2445		CERAMIC CHIP			50V
						C2446		CERAMIC CHIP		200	50V
		<resistor></resistor>				C2447 C2448	1-124-234-00 1-124-234-00		22MF 22MF	20% 20%	16V 16V
R802	1-249-435-11	CARBON	33K	5%	1/4W	C2449	1-124-234-00		22MF	20%	16V
R803	1-247-863-91	CARBON	22K	5%	1/4W						
R804	1-215-454-00		24K 47K	1%	1/4W 1/4W	C2450	1-124-234-00 1-124-589-11		22MF 47MF	20% 20%	16V 16V
R805 R808	1-215-461-00 1-249-417-11		1K	1% 5%	1/4W	C2451 C2452	1-124-589-11		47MF	20%	16V
	. 245.417.11	CHADON	***	5 70		C2454	1-126-163-11		4.7MF	20%	25V
R812	1-249-417-11		1K	5%	1/4W	C2461	1-165-319-11	CERAMIC CHIP	0.1MF		50V
R813 R815	1-249-417-11 1-247-843-11		1K 3.3K	5% 5%	1/4W 1/4W	C2462	1-165-310-11	CERAMIC CHIP	0 IME		50V
R816	1-249-418-11	T	1.2K	5%	1/4W	C2463		CERAMIC CHIP			50V
R817	1-249-418-11		1.2K	5%	1/4W	C2464		CERAMIC CHIP			50V
R818	1-249-418-11	CARRON	1 212	5%	1/4W	C2465 C2466		CERAMIC CHIP CERAMIC CHIP			50V 50V
R819	1-249-418-11		1.2K 1.2K	5%	1/4W 1/4W	C2400	1-103-319-11	CERAMIC CHIP	U.IIVIP		30 V
R820	1-249-422-11		2.7K	5%	1/4W	C2467		CERAMIC CHIP			50V
						C2468		CERAMIC CHIP			50V
						C2469 C2470		CERAMIC CHIP CERAMIC CHIP			50V 50V
******	********	*******	******	*****	******	C2470	1-105-515-11	CERTIFIC CITE	0.11721		301
		TERMINAL BOA		, I/O (A)				<connector></connector>			
	*****	********	*******	******	O BOARD)	CN306	1-564-526-11	PLUG, CONNEC	TOP 110		
				(ע שטאאט)	CN307		PLUG, CONNEC			
	2-990-241-02	HOLDER (A), I				CN308	1-564-519-11	PLUG, CONNEC		***************************************	
	3-178-213-21	SCREW +P 3X1		CIT			1-251-263-11		WITH CH		
	7-083-133-19	SCREW +P 2.63	AIU I IPEZ	SLII				TERMINAL, (S)) 4 F	
		<capacitor></capacitor>						TERMINAL, S (V CONNECTOR, M			
						C112404	1-10-1-014-11	COMMECTOR, N	JULII ZUF		
C2401		CERAMIC CHIP		5%	50V						
C2402 C2403	1-104-396-11 1-104-396-11		10MF 10MF	20% 20%	16V 16V						
	- 407-330-11		- Untak	2070	101						



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
		<diode></diode>		JR41 JR43		CONDUCTOR, CHIP CONDUCTOR, CHIP	
D2402 D2404		DIODE 1SS352 DIODE 1SS226		JR46	1-216-295-91	CONDUCTOR, CHIP	
D2405 D2406	8-719-800-76	DIODE 1SS226 DIODE 1SS226		JR47 JR48		CONDUCTOR, CHIP CONDUCTOR, CHIP	
D2407		DIODE 1SS226		JR52 JR60	1-216-295-91	CONDUCTOR, CHIP CONDUCTOR, CHIP	
D2408		DIODE 188226		31.00	1-210-255-51	CONDUCTOR, CIM	
D2409 D2410	8-719-800-76	DIODE 1SS226 DIODE 1SS226				<transistor></transistor>	
D2411 D2415		DIODE 1SS226 DIODE 1SS226		Q2401 Q2402		TRANSISTOR 2SC1623-L5L TRANSISTOR 2SA1162-G	6
D2416		DIODE 1SS226		Q2403	8-729-216-22	TRANSISTOR 2SA1162-G	
D2417 D2418		DIODE 1SS226 DIODE 1SS226		Q2404 Q2405		TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G	
D2420 D2421		DIODE RD27SB-T1 DIODE RD27SB-T1		Q2408		TRANSISTOR 2SC1623-L5L	
D2422	8-719-037-53	DIODE RD27SB-T1		Q2409 Q2410	8-729-120-28	TRANSISTOR 2SC1623-L5L TRANSISTOR 2SC1623-L5L	6
D2423	8-719-037-53	DIODE RD27SB-T1		Q2411 Q2412		TRANSISTOR 2SC1623-L5L TRANSISTOR 2SC1623-L5L	
		<ic></ic>		Q2414		TRANSISTOR 2SC1623-L5L	
IC2401	8-759-509-71	IC XRU4021BF-E2		Q2415 Q2416	8-729-216-22	TRANSISTOR 2SC1623-L5L TRANSISTOR 2SA1162-G	
IC2402 IC2403		IC XRU4021BF-E2 IC MM1113XFF		Q2417	8-729-120-28	TRANSISTOR 2SC1623-L5L	6
IC2404 IC2405	8-759-084-76	IC MM1111XF IC MM1113XFF				<resistor></resistor>	
				R2401			5% 1/10W
		<jack></jack>		R2402 R2404	1-216-089-91	METAL GLAZE 47K	5% 1/10W 5% 1/10W
J2401 J2402	1-766-738-11	CONNECTOR, COAXIAL (BNC) BNC (WITH SW)		R2405 R2406			5% 1/10W 5% 1/10W
J2403 J2404	1-562-261-71	CONNECTOR, COAXIAL (BNC) BNC (WITH SW)		R2407	1-216-073-00	METAL GLAZE 10K	5% 1/10W
J2405	1-562-261-71	CONNECTOR, COAXIAL (BNC)		R2408 R2409			5% 1/10W 5% 1/10W
J2406 J2407		BNC (WITH SW) CONNECTOR, COAXIAL (BNC)		R2410 R2411	1-216-089-91	METAL GLAZE 47K	5% 1/10W 5% 1/10W
J2408	1-766-738-11	BNC (WITH SW) CONNECTOR, COAXIAL (BNC)		R2412			5% 1/10W
J2409 J2410		BNC (WITH SW)		R2413 R2414	1-216-073-00	METAL GLAZE 10K	5% 1/10W 5% 1/10W
J2411		CONNECTOR, COAXIAL (BNC)		R2415	1-216-073-00	METAL GLAZE 10K	5% 1/10W
J2412 J2413	1-507-802-41	BNC (WITH SW) JACK, PIN (MOUNT TYPE)		R2416			5% 1/10W
J2414 J2415		JACK, PIN (MOUNT TYPE) JACK, PIN (MOUNT TYPE)		R2417 R2418			5% 1/10W 5% 1/10W
	-	JACK, PIN (MOUNT TYPE)		R2419 R2420			5% 1/10W 5% 1/10W
J2417	1-507-802-41	JACK, PIN (MOUNT TYPE)		R2421			5% 1/10W
J2418 J2419	1-507-802-41	JACK, PIN (MOUNT TYPE) JACK, PIN (MOUNT TYPE)		R2422			5% 1/10W
J2420	1-507-802-41	JACK, PIN (MOUNT TYPE)		R2423 R2424			5% 1/10W 5% 1/10W
		<chip conductor=""></chip>		R2425 R2426	1-216-073-00 1-214-775-00		5% 1/10W 1% 1/4W
ЛR I	1-216-205-01	CONDUCTOR, CHIP		R2427			5% 1/10W
JR4	1-216-295-91	CONDUCTOR, CHIP		R2428	1-216-105-91	METAL GLAZE 220K	5% 1/10W
JR5 JR7		CONDUCTOR, CHIP CONDUCTOR, CHIP		R2429 R2430	1-216-115-00	METAL GLAZE 560K	5% 1/10W
JR12		CONDUCTOR, CHIP		R2431			5% 1/10W
JR13 JR14		CONDUCTOR, CHIP CONDUCTOR, CHIP		R2432 R2433	1-214-775-00 1-216-097-91		19 1/4W 59 1/10W
JR15 JR16		CONDUCTOR, CHIP CONDUCTOR, CHIP		R2434 R2435			59 1/10W 59 1/10W
JR17		CONDUCTOR, CHIP		R2436			5% 1/10W
JR19 JR20		CONDUCTOR, CHIP CONDUCTOR, CHIP		R2437 R2438		CONDUCTOR, CHIP METAL GLAZE 15K	59 1/10W
JR21	1-216-295-91	CONDUCTOR, CHIP		R2439 R2440	1-214-775-00	METAL 82K	19 1/4W 59 1/10W
JR23 JR30		CONDUCTOR, CHIP CONDUCTOR, CHIP		R2440 R2441			5% 1/10W
JR34		CONDUCTOR, CHIP		R2442			5% 1/10W
JR35 JR40		CONDUCTOR, CHIP CONDUCTOR, CHIP		R2443 R2444			59 1/10W 59 1/10W

PVM-20M2U/20M4U PVM-20M2E/20M4E/20M4A



Les composants identifies par une trame et une marque \(\Delta\) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

						**				*********	
REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
D0444					*		************				
R2446 R2447	1-214-775-00		82K	1%	1/4W	R3421	1-216-689-11	METAL GLAZE	39K	5%	1/10W
R2441	1-210-105-91	METAL GLAZE	220K	5%	1/10W	D2422	1 216 040 01	METAL OLAGO	177	-~	
R2448	1-216-097-91	METAL GLAZE	100K	5%	1/10W	R3422 R3423	1-216-049-91	METAL GLAZE METAL GLAZE	IK	5%	1/10W
R2449		METAL GLAZE		5%	1/10W	R3424		METAL GLAZE		5%	1/10W
R2450		METAL GLAZE		5%	1/10W	R3425		METAL GLAZE		5% 5%	1/10W 1/10W
R2451		METAL GLAZE		5%	1/10W	R3426		METAL GLAZE		5%	1/10W 1/10W
R2452		METAL GLAZE		5%	1/10W	10.20	1 210 055 00	WILLIAM GEALL	120	3 70	1/10W
						R3427	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R2453		METAL GLAZE		5%	1/10W	R3428	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R2455		METAL GLAZE		5%	1/10W	R3429	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R2458		CONDUCTOR, (R3430		METAL GLAZE		5%	1/10W
R2463		METAL GLAZE		5%	1/10W	R3431	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R2465	1-216-073-00	METAL GLAZE	10K	5%	1/10W						
D2466	1 214 072 00	METAL OLATE	1077		1/10777	R3432		METAL GLAZE		5%	1/10W
R2466 R2467		METAL GLAZE		5%	1/10W	R3435		METAL GLAZE		5%	1/10W
R2470		METAL GLAZE		5%	1/10W	R3436		METAL GLAZE		5%	1/10W
R2470	1-214-702-00		75	1%	1/4W	R3437		METAL GLAZE		5%	1/10W
R2472		METAL GLAZE METAL GLAZE		5%	1/10W	R3438	1-210-045-91	METAL GLAZE	680	5%	1/10W
RZ-12	1-210-003-91	METAL GLAZE	3.91	5%	1/10W	R3439	1 216 045 01	METAL CLAZE	600	e 01	4 14 0222
R2473	1-216-037-00	METAL GLAZE	330	5%	1/10W	K3439	1-210-043-91	METAL GLAZE	080	5%	1/10W
R2474		METAL GLAZE		5%	1/10W						
R2475		METAL GLAZE		5%	1/10W			<switch></switch>			
R2476	1-214-702-00		75	10%	1/4W			COWITCH			
R2477		METAL GLAZE		5%	1/10W	S2401	1-570-598-11	SWITCH DIP			
						52.01	. 5/0 5/0 11	owner, Di			
R2478	1-216-063-91	METAL GLAZE	3.9K	5%	1/10W						
R2479		METAL GLAZE		5%	1/10W	******	*****	********	*******	******	*****
R2480		METAL GLAZE		5%	1/10W						
R2481		METAL GLAZE		5%	1/10W			MISCELLANEOU			
R2482	1-214-702-00	METAL	75	1%	1/4W			******	**		
R2483	1 214 001 00	METAL OLAGE	ecv	e 01	1400					40000000000000	12-20-0-0-0-0-0-0-0-0-0-0-0-0-0-0-0-0-0-
R2483 R2484		METAL GLAZE		5%	1/10W	Δ	1-223-417-12	RESISTOR ASSY	(HIGH-VO		
R2485		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W		1 000 260 11	PERIOTOR LOOK	*******	(2	OM4U/E/A)
R2486		METAL GLAZE		5%	1/10W	Д	1-238-308-11	RESISTOR ASSY	, HIGH-VC	JLIAG	
R2487		METAL GLAZE		5%	1/10W		1.411.657.11	COIL, LANDING	COBBECT	NO.	(20M2U/E)
	1 210 075 00	MCIAL ODALL	OOK	3 10	171011	Д	11-411-057-11	COIL, LANDING	CURREC		OM4U/E/A)
R2488	1-214-702-00	METAL	75	1%	1/4W		1-426-505-11	COIL, DEMAGNE	TIZATIO	u '*	WHOIMA
R2489		METAL GLAZE		5%	1/10W	Ā	1-451-349-11	DEFLECTION YO	KE (Y)OF	741/20	MOLIVE)
R2490	1-216-063-91	METAL GLAZE	3.9K	5%	1/10W	***************************************					
R2491	1-216-027-00	METAL GLAZE	120	5%	1/10W	Δ	1-451-456-11	DEFLECTION YO	KE (Y20N	(TA)	
R2492	1-216-049-91	METAL GLAZE	1K	5%	1/10W						OM4U/E/A)
70400								MAGNET, DISK;			
R2493		METAL GLAZE		5%	1/10W		1-452-094-00	MAGNET,ROTAT	ABLE DIS	SK ; 15r	nnø
R2494	1-214-702-00		75	1%	1/4W		1-544-063-12				
R2495 R2496	1-214-702-00		75	1%	1/4W	Δ	1-576-231-11	FUSE (H.B.C.) 4A	/250V		
R2490 R2497		METAL GLAZE		5%	1/10W						<u>644</u> 0440-4448
R2491	1-210-003-91	METAL GLAZE	3.9K	5%	1/10W	Δ.	1-390-910-11	CORD SET, POW	ER (20M2E	i, 20M4	EA)
R2498	1-216-037-00	METAL GLAZE	330	5%	1/10W			CORD, CONNECT		****	¥300000
R2499		METAL GLAZE		5%	1/10W			CORD SET, POWI		312UM4	u .
R3400		METAL GLAZE		5%	1/10W			NA3012-M4 (20M		KN 29M	LOT (ZET)
R3402		METAL GLAZE		5%	1/10W	<i>(</i> 3)	o roseroseso	PICTURE TUBE 2	uras(DAF	(A) (20)	VZU/E)
R3404		METAL GLAZE		5%	1/10W	A	R-736-370-05	PICTURE TUBE 2	OMTI (DV	Mycons	(B/A)
-			- 17	570	.,,			PICTURE TUBE 2			
R3405	1-216-037-00	METAL GLAZE	330	5%	1/10W	143			CONTRACT (A. P.	, (4.1/1	
R3406		METAL GLAZE		5%	1/10W						
	1-216-093-00	METAL GLAZE	68K	5%	1/10W	*****	******	*****	*****	*****	***
	1-214-702-00		75	1%	1/4W						•
R3410	1-216-091-00	METAL GLAZE	56K	5%	1/10W		ACCESSORIES	S AND PACKING	MATERIA	LS	
D2411							******	***********	******	****	
		METAL GLAZE		5%	1/10W						
		METAL GLAZE		5%	1/10W			HOLDER (B), PLU			
		METAL GLAZE		5%	1/10W		3-859-663-12	MANUAL, INSTR			
		METAL GLAZE		5%	1/10W		0.000 445 54			M2E/20)M4E only)
W7410	1-210-049-91	METAL GLAZE	11.	5%	1/10W			MANUAL, INSTR			
R3417	1_216_001_00	METAL GLAZE	68K	5%	1/10W	*	4-045-769-01 (CUSHION (UPPER	() (ASSY)		
	1-214-702-00			1%	1/10W 1/4W	•	4-043-770-01 (CUSHION (LOWE	k) (ASSY)	1	
		METAL GLAZE		5%	1/10W		4_044_040_02_E	ABEL, TALLY			
DA 400		METAL GLAZE		5%	1/10W			NDIVIDUAL CAI	TON		
	- 210-025-00 .	OLILE	04	5 10	1/1044			BAG, PROTECTION			
							- 101-133-01 I	mo, i noiectic	W.4		

Printed by: Schaltungsdienst Lange, Berlin (GERMANY)

Sony Corporation
Image & Sound Communication Company

En glish 97024**-1**30-1